



GTC4Lusso USA - Replacing the oxygen sensors - Latest Update: 2021-01-26

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.

Copyright by Ferrari S.p.A. - P.IVA 00159560366

A3.11 Replacing the oxygen sensors

Replacing the oxygen sensors

			
Tightening torque		Nm	Class
Fastening oxygen sensors	Oxygen sensor	50 Nm	B
Fastening the oxygen sensor cable	Screw	5 Nm	B



Do not clean or apply grease on the oxygen sensor thread.

Do not use solvents or thread locking products as they may impede correct sensor operation.

The oxygen sensor thread is pre-lubricated by the manufacturer with a specific product.




Whenever a sensor is replaced, the self-acquired parameters must be deleted from the ECU memory.


- Disconnect the battery ( F2.01).
- Remove the flat undertray sections ( E3.13).
-  Remove the central flat undertray section.

Sensor on right hand exhaust manifold

- Remove the front wheelhouses ( E3.05).
-  Remove the rear element of the front right hand wheelhouse.

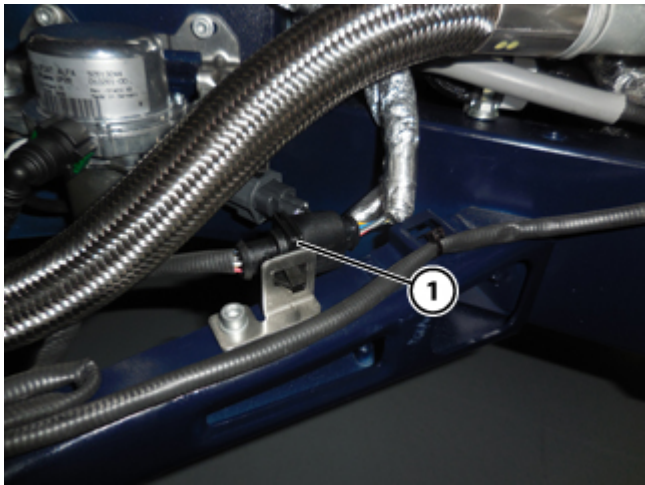


- Disconnect the connector (1), releasing the relative cable.

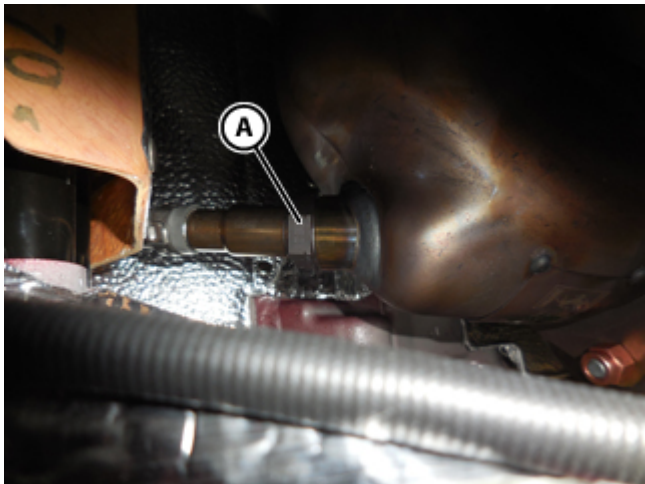

- Unscrew the sensor (A) and replace
- Screw the new sensor (A) into place.

		
Tightening torque	Nm	Class
Oxygen sensor	50 Nm	B

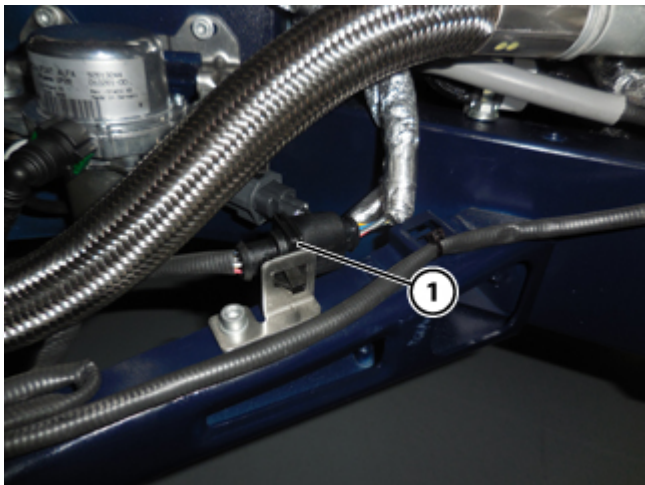

- Connect the connector (1), securing the relative cable.


- Refit the front wheelhouses ( E3.05).
-  Refit the rear element of the front right hand wheelhouse.

Sensor on left hand exhaust manifold

- Remove the front wheelhouses ( E3.05).
-  Remove the rear element of the front left hand wheelhouse.



- Disconnect the connector (1), releasing the relative cable.

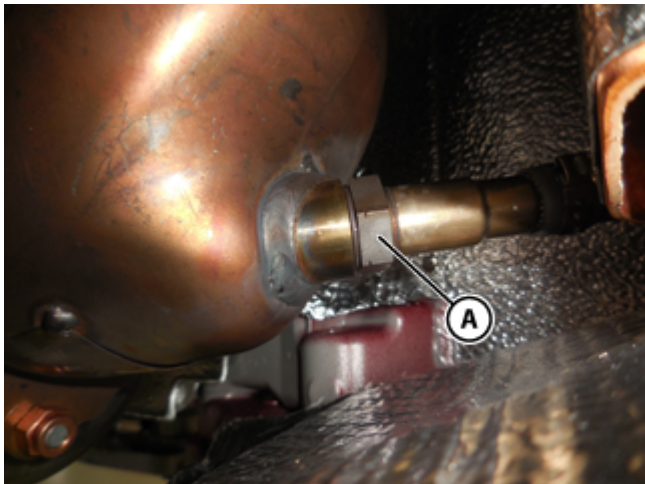

- Unscrew the sensor (A) and replace
- Screw the new sensor (A) into place.


Tightening torque	Nm	Class
Oxygen sensor	50 Nm	B



- Disconnect the connector (1), releasing the relative cable.

- Refit the front wheelhouses ( E3.05).
-  Refit the rear element of the front left hand wheelhouse.


Sensor on right hand catalytic converter

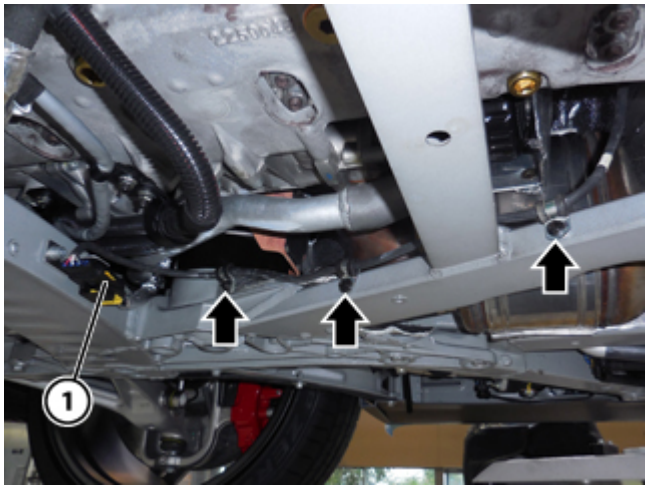

- Remove the indicated clamps.
- Detach and disconnect the connector **(1)**, releasing the relative cable from the rubber-lined brackets.




- Remove the clamp indicated.

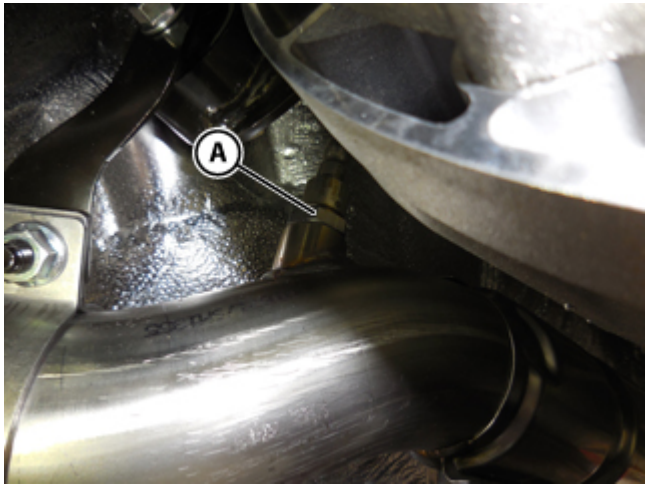

- Unscrew the sensor **(A)** and replace
- Screw the new sensor **(A)** into place.

		
Tightening torque	Nm	Class
Oxygen sensor	50 Nm	B

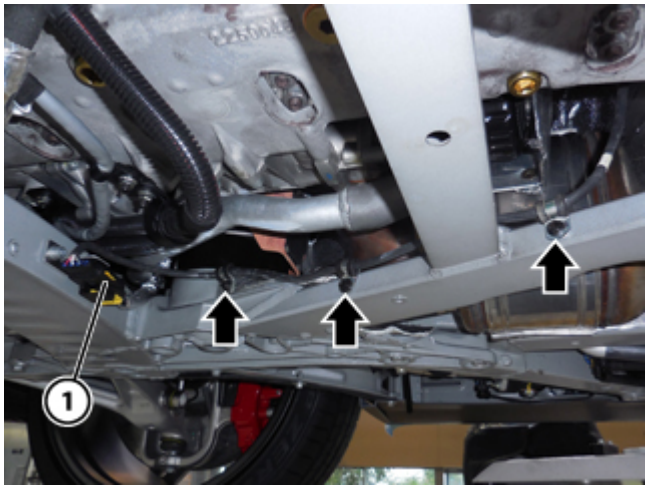

- Connect and attach the connector **(1)**, fastening the relative cable to the rubber-lined brackets.
- Tighten the indicated clamps.


		
Tightening torque	Nm	Class
Screw	5 Nm	B




- Tighten the indicated clamp.

		
Tightening torque	Nm	Class
Screw	5 Nm	B

Sensor on left hand catalytic converter

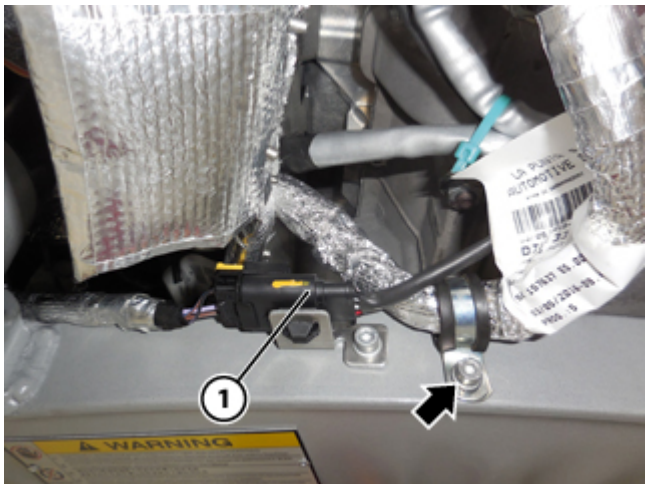


- Remove the clamp indicated.
- Detach and disconnect the connector **(1)**, releasing the relative cable from the rubber-lined brackets.

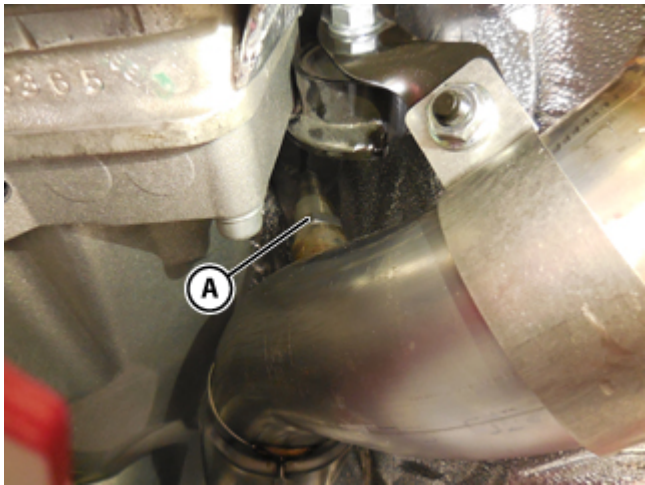

- Unscrew the sensor **(A)** and replace
- Screw the new sensor **(A)** into place.

		
Tightening torque	Nm	Class
Oxygen sensor	50 Nm	B

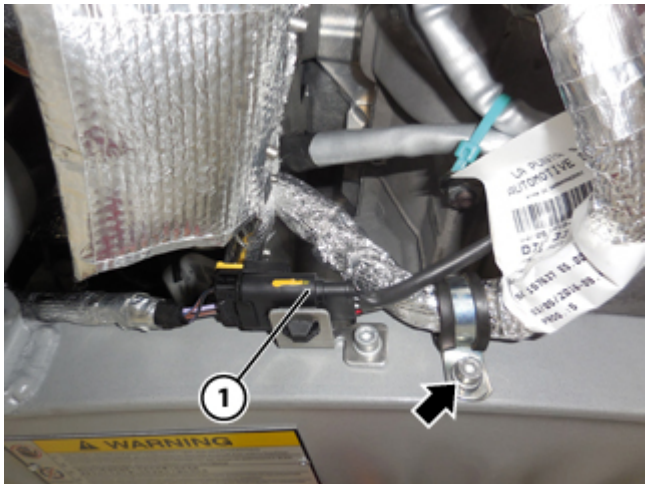

- Connect and attach the connector **(1)**,
fastening the relative cable to the rubber-lined brackets.
- Tighten the indicated clamp.

		
Tightening torque	Nm	Class
Screw	5 Nm	B

- Refit the flat undertray sections ( E3.13).
- Refit the central flat undertray section.
- Connect the battery ( F2.01).