



GTC4Lusso USA - Replacing the engine air filters - Latest Update: 2021-01-26

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.

Copyright by Ferrari S.p.A. - P.IVA 00159560366

## A3.12 Replacing the engine air filters


### Replacing the engine air filters

|  |       |      |       |
|-----------------------------------------------------------------------------------|-------|------|-------|
| Tightening torque                                                                 |       | Nm   | Class |
| Fastening engine air filter covers                                                | Screw | 5 Nm | B     |




To ensure maximum engine performance it is essential that the air filters are in perfect condition.

Replace the air filter cartridges at the intervals indicated in the Maintenance Schedule.

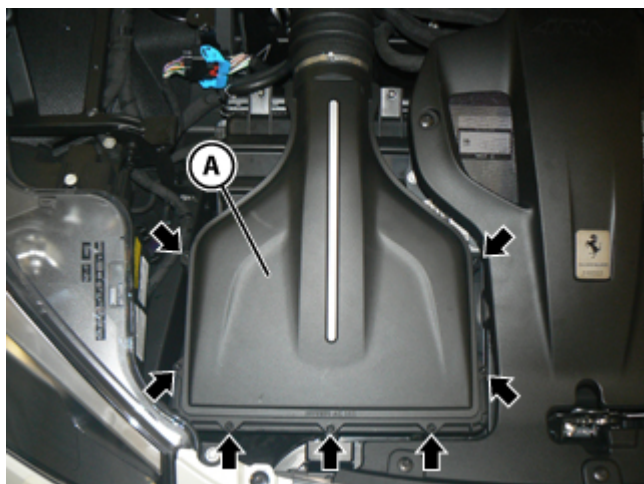


- Undo the screws indicated
- Detach and lift cover (A).

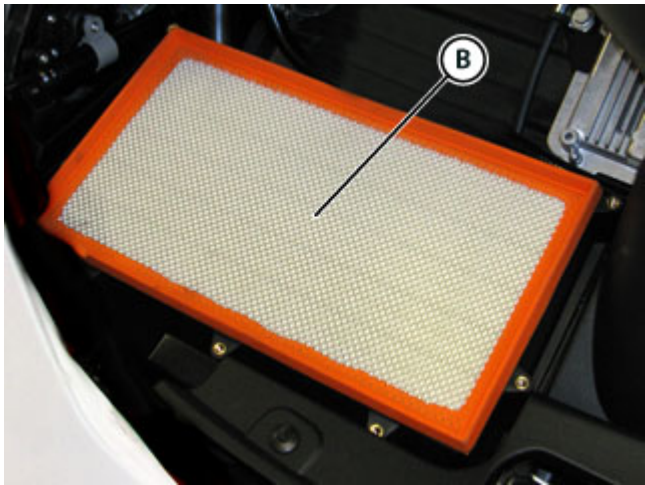

NEVER wash or clean a removed air filter and reuse. Always replace with a new component.

- Remove and replace the filter **(B)**.
- Fit the new filter **(B)**, lubricating the contact surface with the filter box slightly.

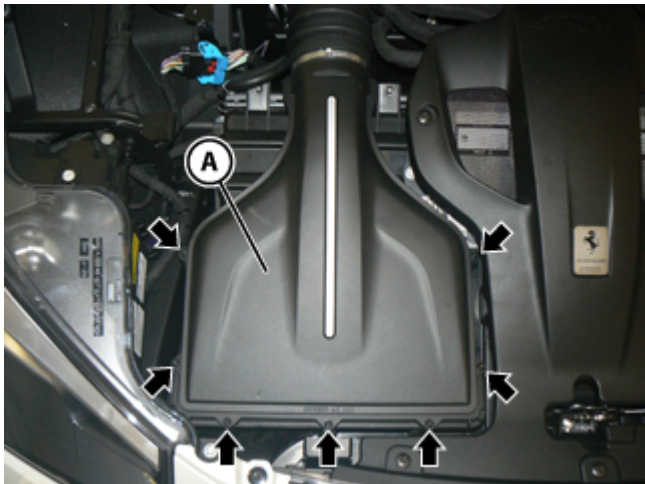

- Fit and install the cover **(A)**.
- Tighten the screws indicated.

|  |      |       |
|-----------------------------------------------------------------------------------|------|-------|
| Tightening torque                                                                 | Nm   | Class |
| Screw                                                                             | 5 Nm | B     |