



GTC4Lusso USA - Replacing the air conditioning and heating system filter - Latest Update: 2021-01-26

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.

Copyright by Ferrari S.p.A. - P.IVA 00159560366

A3.13 Replacing the air conditioning and heating system filter

Replacing the air conditioning and heating system air filter



A dirty filter impedes the flow of external air into the vehicle, compromising the functions of the air conditioning and heating system.


The air conditioning and heating system filter must be changed regularly.

The air conditioning and heating system air filter is located in the passenger compartment, on the right hand side of the heater-evaporator, and is accessible from underneath the passenger side of the dashboard.

Replace the air conditioning and heating system air filter at the intervals indicated in the MAINTENANCE SCHEDULE.

➤ Remove the dashboard trim panels (🔧 E4.02).


❗ Remove the passenger side underdashboard trim panel from the dashboard.

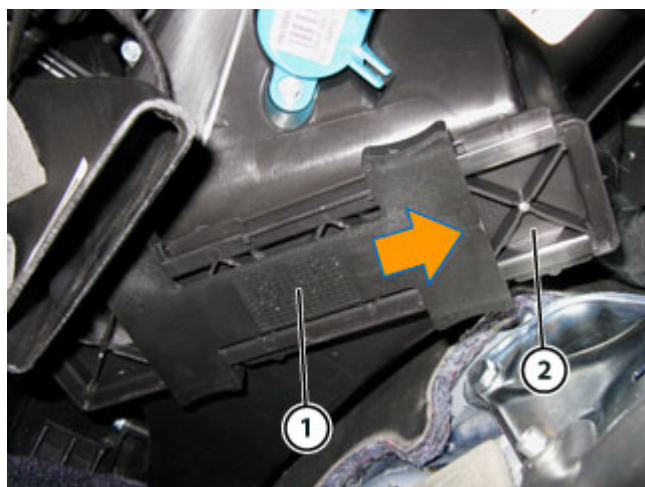

- Move the bracket (1) in the direction indicated.
- Remove the cover (2) complete with filter.

- Replace the filter.

❗ Install the new filter, orienting the indicated air flow (**AIR-FLOW**) correctly.

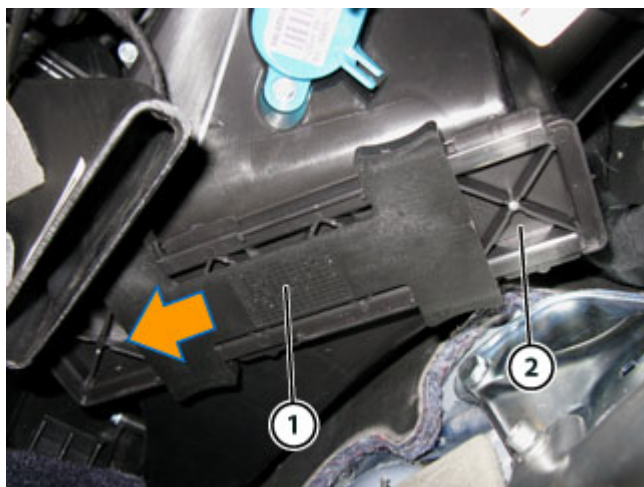

- Fit the cover **(2)** complete with filter.
- Move the bracket **(1)** in the direction indicated.

➤ Refit the dashboard trim panels (🔧 E4.02).

🔧 Refit the passenger side underdashboard trim panel on the dashboard.