



GTC4Lusso USA - Checking tension and replacement of auxiliary utilities belts - Latest Update: 2021-01-26

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.
Copyright by Ferrari S.p.A. - P.IVA 00159560366


A3.14 Checking tension and replacement of auxiliary utilities belts

Checking the tension of the ancillary belt

			
Tightening torque		Nm	Class
Fastening belt tensioner	Screw	25 Nm	B

 Check the belt tension when the engine is cool.

- Start the engine and run at idle speed for a few seconds.
- Switch off the engine.
- Open the engine compartment lid ( E5.09).

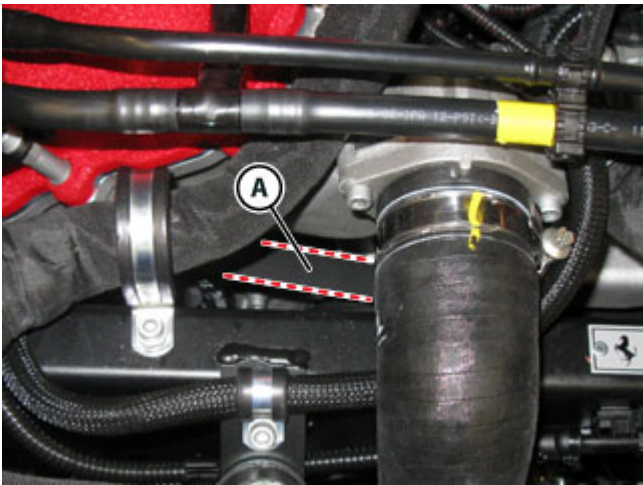


- Place the frequency probe of the tension meter (**95978151**) near the section of belt indicated by dotted lines (**A**), but without touching the belt itself.
- Tap the belt with a suitable tool near the tension probe and check that the value read by the meter is **113.5 ± 10 Hz**.
- If the tension value read is lower than the specified value, **replace the belt** as described below.
-  If the belt has been replaced recently, **replace the belt tensioner** as described below.

Replacing the belt


- Remove the ancillary belt ( A3.14).
- Replace the belt.
- Refit the ancillary belt ( A3.14).
- Fit the new belt.
- Check the tension again as described previously.
- If the tension value measured is still lower than the specified value, **replace the belt tensioner** as described below.

Replacing the belt tensioner


- Remove the ancillary belt ( A3.14).

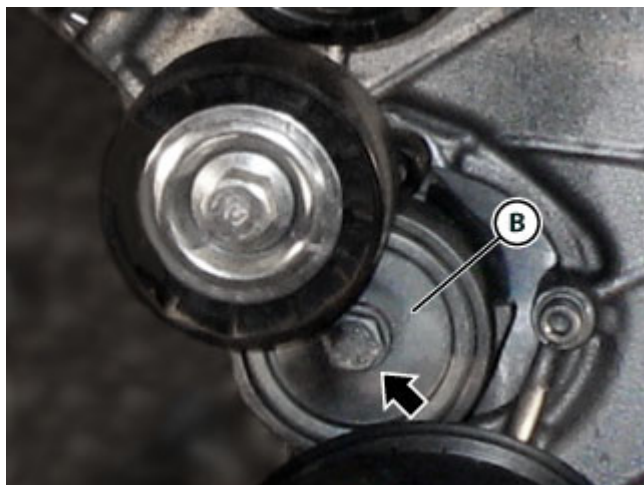

- Undo the indicated screw.
- Remove the belt tensioner (**B**) and replace.

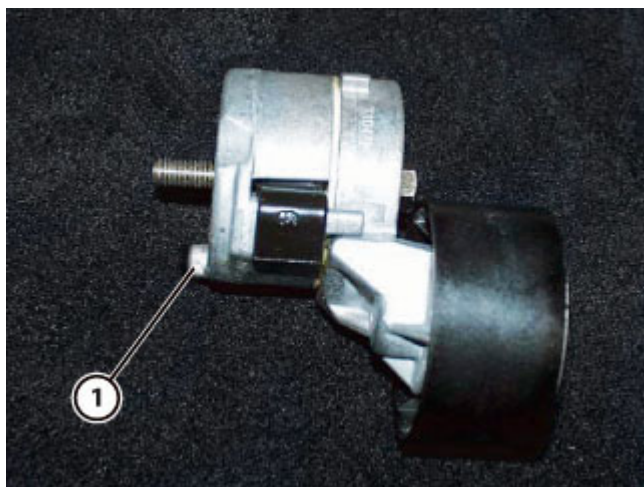

- When fitting the new belt tensioner, insert the pin (**1**) correctly in the relative seat on the front engine cover.

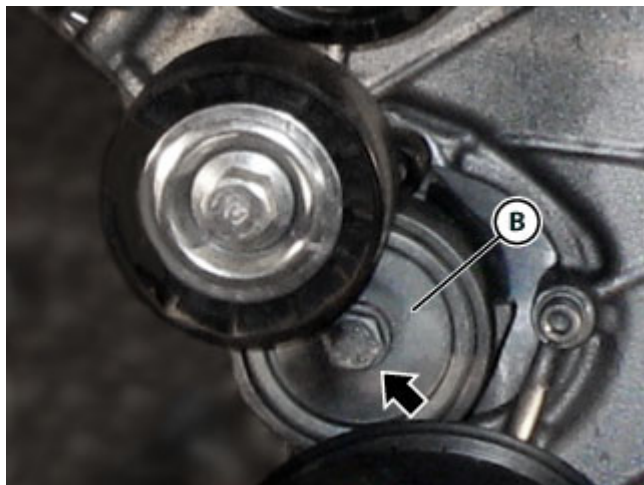

- Fit the new belt tensioner **(B)**.
- Tighten the indicated screw.



Tightening torque	Nm	Class
Screw	25 Nm	B

- Refit the ancillary belt (🔧 A3.14).
- Check the ancillary belt tension again as described previously.


Removing the ancillary belt



In order not to damage the belt, do not fold it with sharp corners and do not let it come into contact with oil or fuel.

The engine ancillary drive belt must be replaced at the intervals specified in the MAINTENANCE SCHEDULE.

- Remove the engine compartment cross-member (🔧 E2.04).

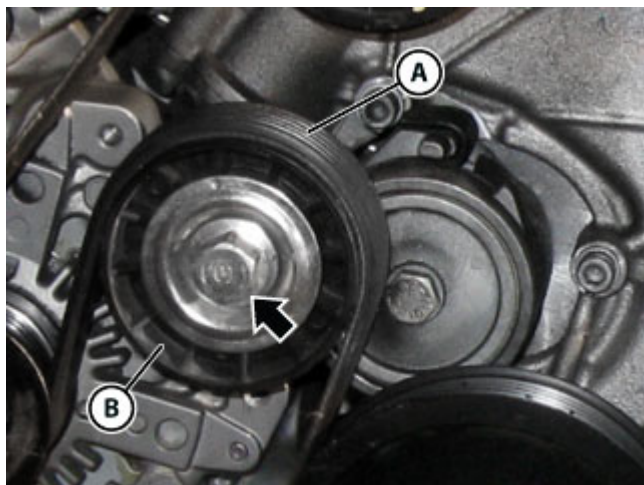


- Note the route of the belt **(A)**.
- With a wrench applied to the indicated screw, turn the pulley **(B)** counterclockwise to reduce the tension applied by the tensioner.
- Prise the belt **(A)** off the pulleys and remove.

Refitting the ancillary belt




In order not to damage the belt, do not fold it with sharp corners and do not let it come into contact with oil or fuel.


The engine ancillary drive belt must be replaced at the intervals specified in the MAINTENANCE SCHEDULE.

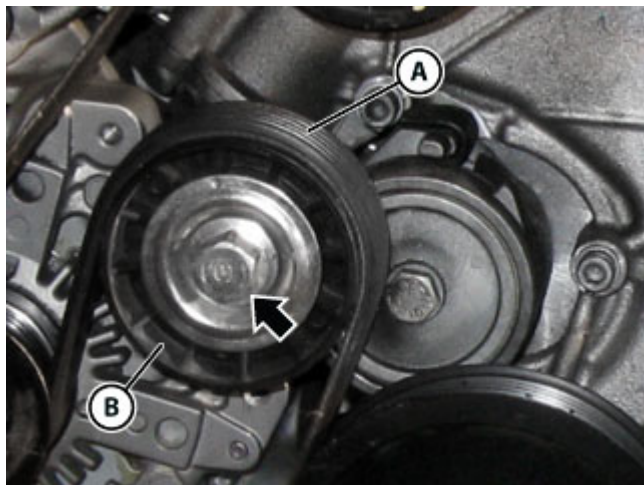

- With a wrench applied to the indicated screw, turn the pulley **(B)** counterclockwise to reduce the belt tension.

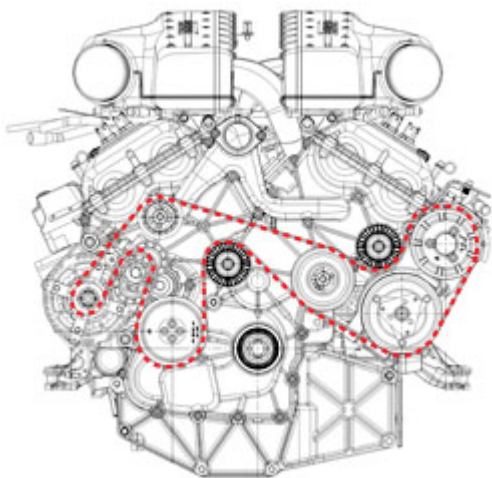

- Fit and seat the belt on the pulleys, routing correctly.

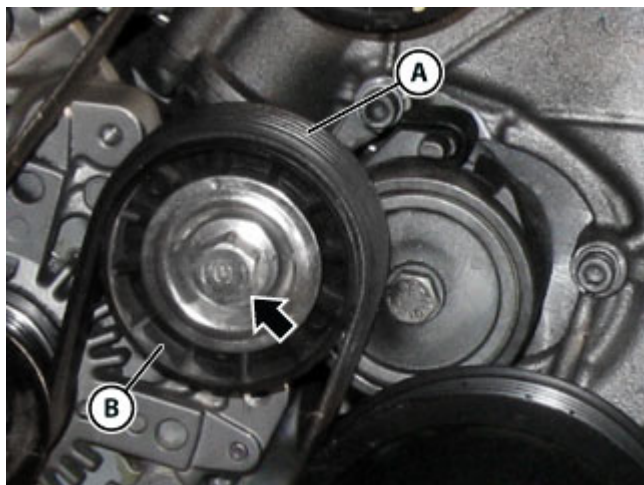

- Release the pulley **(B)** to increase the tension applied by the tensioner.

- Refit the engine compartment cross-member (🔧 E2.04).
- Check the tension of the ancillary belt (🔧 A3.14).