



GTC4Lusso USA - Checking and replacing spark plugs - Latest Update: 2021-01-26


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.

Copyright by Ferrari S.p.A. - P.IVA 00159560366

A3.15 Checking and replacing spark plugs

Removing the spark plugs

- Disconnect the battery ( F2.01).
- Remove the ignition coils ( F3.13).

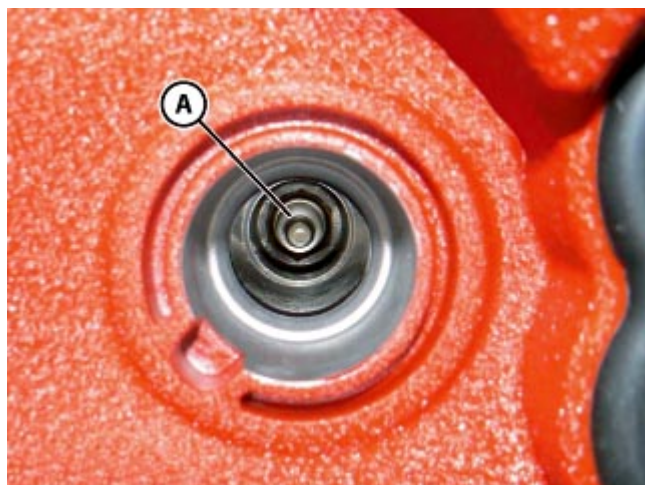


- Using a universal articulated wrench, undo and remove the spark plugs (A).

Refitting the spark plugs

			
Tightening torque		Nm	Class
Fastening spark plugs	Spark plug	11 Nm	A

- Check that the spark plugs are in good condition and replace if necessary.
- Check that the gap between the spark plug electrodes is between 0.6 and 0.7 mm.
- Lubricate the threads of the spark plugs with a thin film of oil.

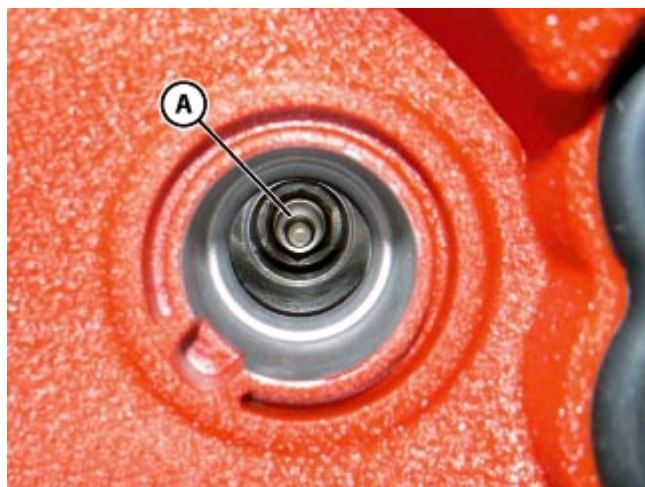

- When refitting the original spark plugs, clean with compressed air to remove any dirt residue.
- Fit the spark plugs **(A)** in their seats on the cylinder head.
- Use an articulated wrench **(A)** to snug the spark plugs and bring the gasket into contact with the mating surface on the head.
- Unscrew the spark plugs **(A)** slightly.
- Tighten the spark plugs **(A)** with a torque wrench.



Tightening torque	Nm	Class
Spark plug	11 Nm	A

- Refit the ignition coils (🔑 F3.13).
- Connect the battery (🔑 F2.01).