



GTC4Lusso USA - Fuel tank - Latest Update: 2021-01-26

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.

Copyright by Ferrari S.p.A. - P.IVA 00159560366

B3.02 Fuel tank

Removing the fuel tank



CAUTION

FUEL IS HIGHLY FLAMMABLE.

NEVER WORK ON A HOT ENGINE.


TO PREVENT FIRE RISKS AND FUEL LEAKAGE, WORK ONLY ON A COLD ENGINE WITH AN EMPTY FUEL TANK.




CAUTION

Take every necessary precaution, since fuel residues may remain in the tank and in the pipes, even after the operations described.


- Disconnect the battery ( F2.01).
- Drain fuel system ( B3.08).
- Remove the rear seats ( E4.01).
- Remove the centre tunnel console trim ( E4.03).
- Remove the fuel pump filters ( B3.03).
 -  Disconnect the connectors, pipes, and ground cable of the fuel pump filters.
- Replace the fuel level sensor ( B3.04).
 -  Disconnect the fuel level sensor connector.
- Remove the luggage compartment trim panels ( E4.06).
 -  Remove the luggage shelf trim in the luggage compartment.
- Remove the complete rear removable subframe ( E2.03).

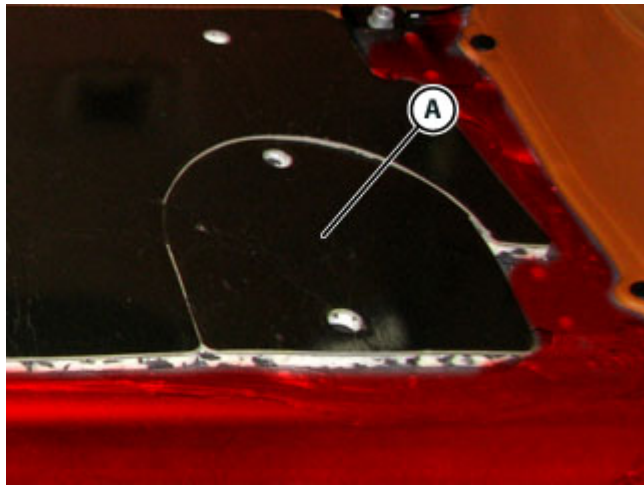

- Detach and lift the insulation **(A)**.

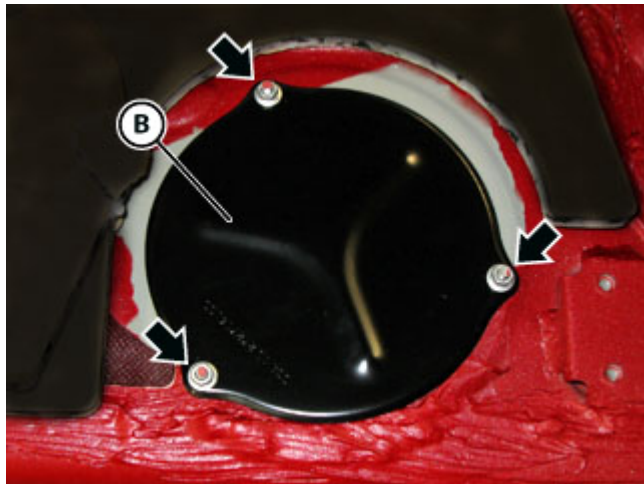


- Undo the nuts indicated.
- Remove the cover **(B)**.

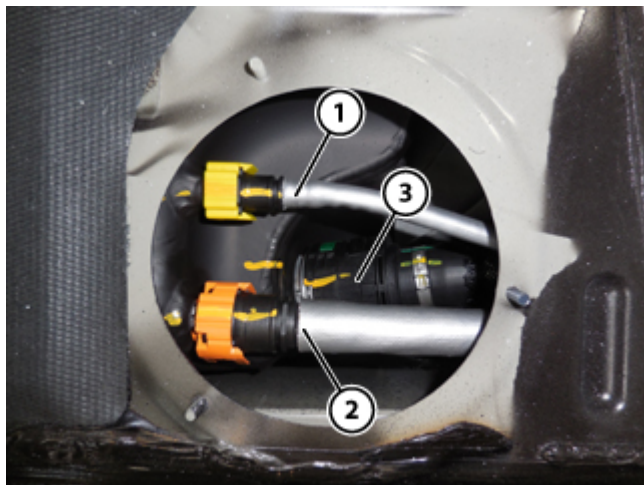
**CAUTION**

When connecting a fuel system pipe, bear in mind that the line may be pressurised. Proceed therefore with caution and keep away any type of flame as there is a risk of fuel spraying onto the operator. Always plug the disconnected fuel pipes to prevent residual fuel from leaking.

- Disconnect the pipe **(1)**, detaching the respective double-lock union.
 Plug the pipe and the relative connection on the tank.
- Disconnect the pipe **(2)**, detaching the respective double-lock union.
 Plug the pipe and the relative connection on the tank.
- Disconnect the pipe **(3)**, detaching the indicated union.
 Plug the pipe and the relative connection on the tank.

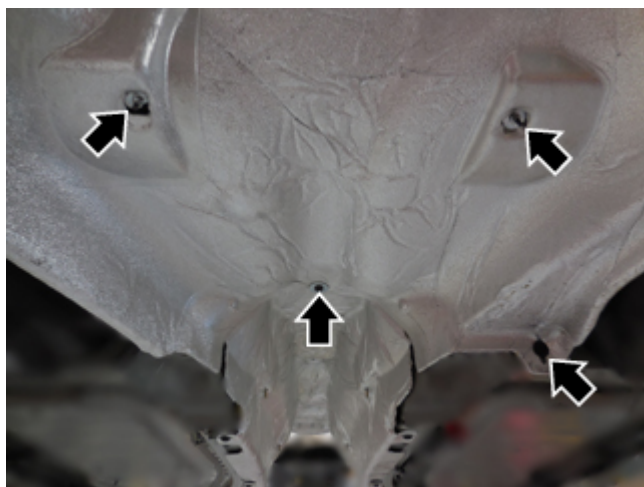

- Undo the screws indicated.
- Undo the nuts indicated.
- Remove the indicated clips.

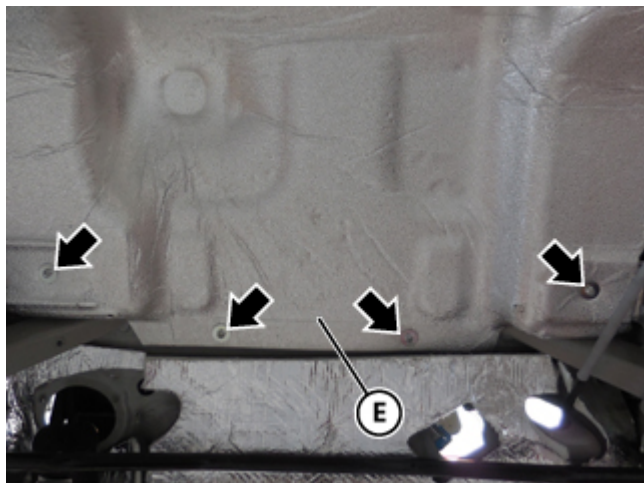

- Undo the nuts indicated.
- Remove the heat shield (**E**).


- Support the weight of the tank adequately.




- Undo the screws indicated.
- Remove the left hand upper bracket (**F**).



- Undo the screws indicated.
- Remove the right hand upper bracket (**F**).

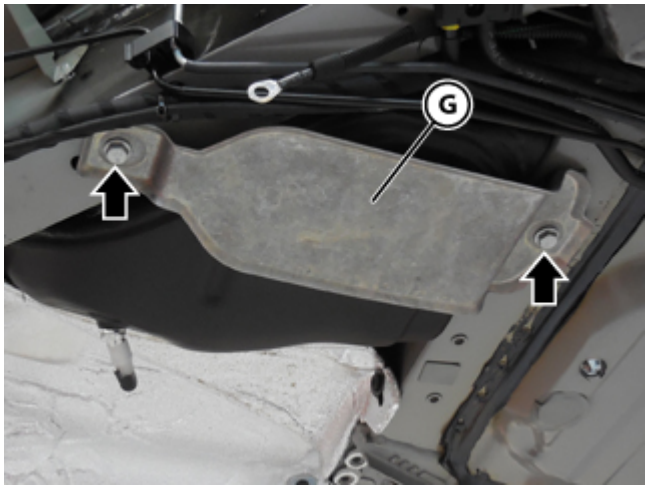

- Undo the screws indicated.
- Remove the left hand lower bracket (G).

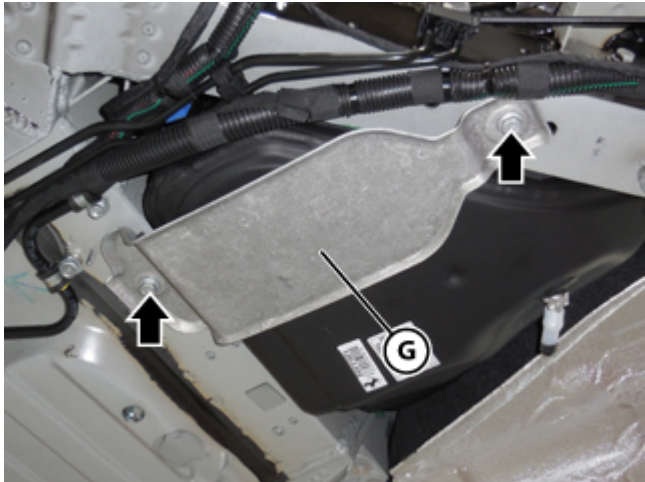

- Undo the screws indicated.
- Remove the right hand lower bracket (G).


- Remove the fuel tank.

Refitting the fuel tank

			
Tightening torque		Nm	Class
Fastening lower tank bracket to chassis	Screw (pretightening)	16 Nm	A
	Screw	24 Nm	A
Fastening tank thermal insulation	Screw	5 Nm	B
	Nut	2 Nm	B
Fastening fuel tank inspection cover	Nut	5 Nm	B




Take every necessary precaution, since fuel residues may remain in the tank and in the pipes, even after the operations described.

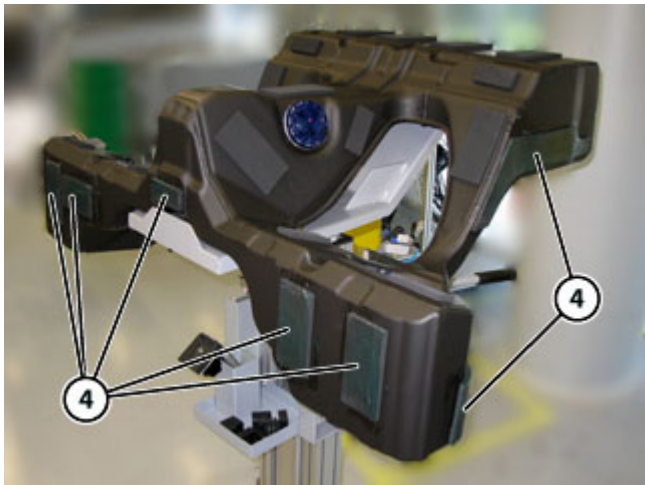


- Check the condition of the tank and the relative components.
- Check the state of the vibration damper pads (4) and replace if necessary.
- Check that the lateral damper pads (4) are coated with a layer of grease TUTELA MR3, and apply new grease if necessary.
- Position the fuel tank underneath the vehicle, supporting its weight adequately.

- Arrange the cables and pipes correctly to prevent them from being crushed.

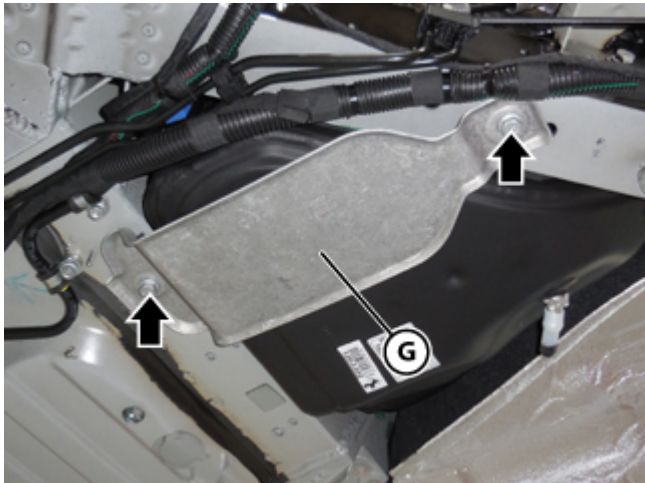

- Fit the right hand lower bracket (G).
- Pre-tighten the indicated screws.

		
Tightening torque	Nm	Class
Screw (pretightening)	16 Nm	A
Screw	24 Nm	A

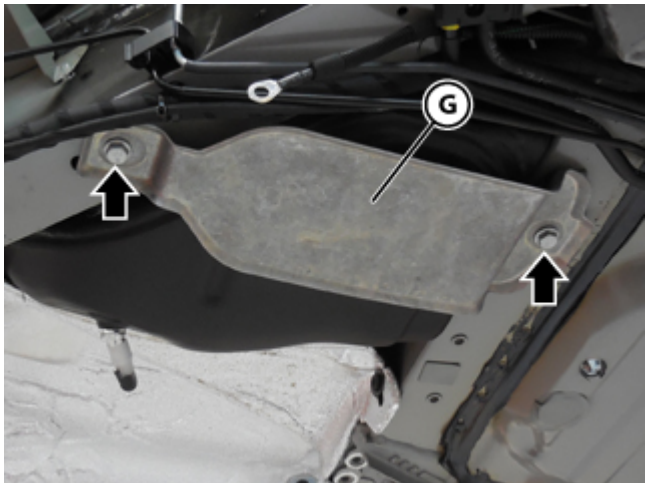


- Fit the left hand lower bracket (G).
- Pre-tighten the indicated screws.

		
Tightening torque	Nm	Class
Screw (pretightening)	16 Nm	A
Screw	24 Nm	A




- Fit the right hand upper bracket (F).
- Pre-tighten the indicated screws.

		
Tightening torque	Nm	Class
Screw (pretightening)	16 Nm	A
Screw	24 Nm	A

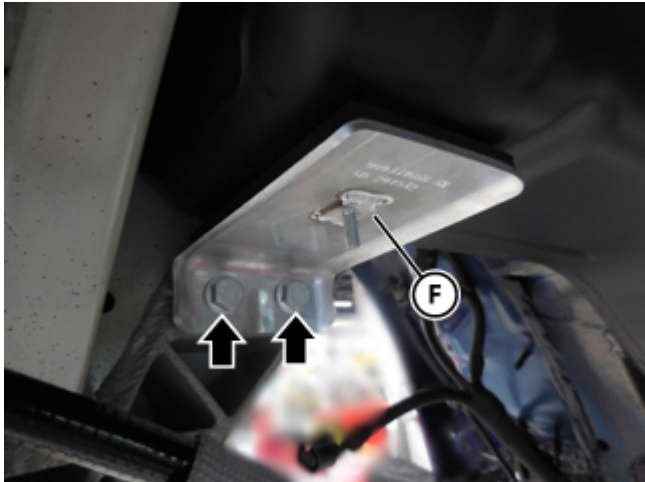


- Fit the left hand upper bracket (F).
- Pre-tighten the indicated screws.

		
Tightening torque	Nm	Class
Screw (pretightening)	16 Nm	A
Screw	24 Nm	A

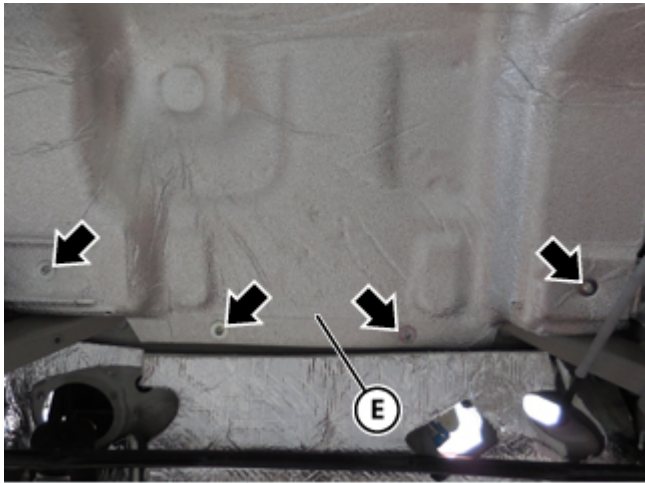

- Fit the heat shield (E).
- Tighten the screws indicated.

		
Tightening torque	Nm	Class
Nut	2 Nm	B

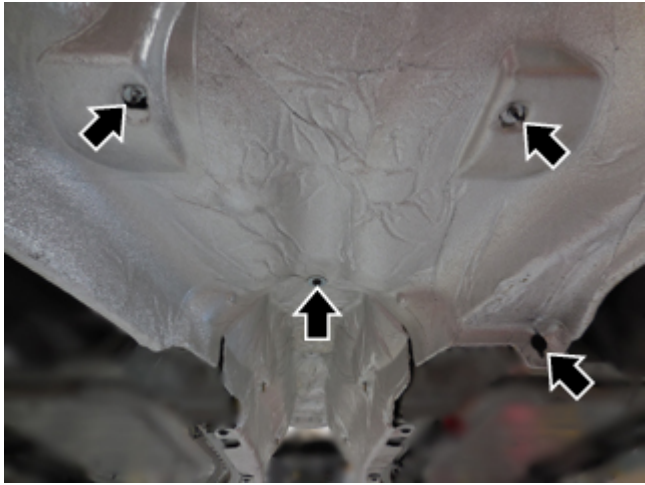


- Tighten the nuts indicated.

Tightening torque	Nm	Class
Nut	2 Nm	B

- Tighten the screws indicated.


Tightening torque	Nm	Class
Screw	5 Nm	B

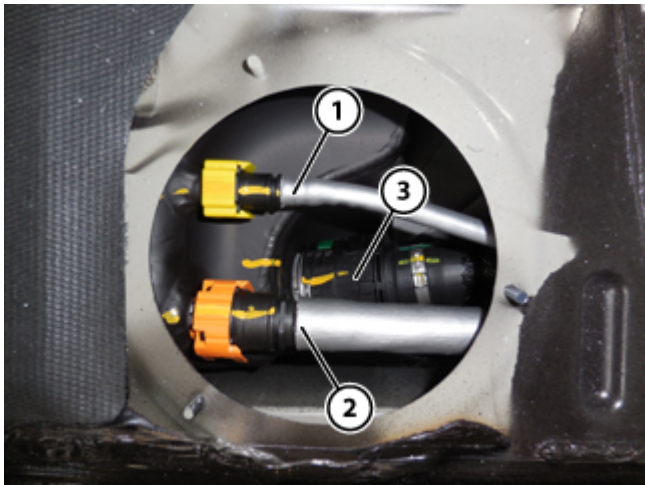

 CAUTION


Take every necessary precaution, since fuel residues may remain in the tank and in the pipes, even after the operations described.

- Connect the pipe (3), fastening the respective union.
- Connect the pipe (2), fastening the respective double-lock union.
- Connect the pipe (1), fastening the respective double-lock union.

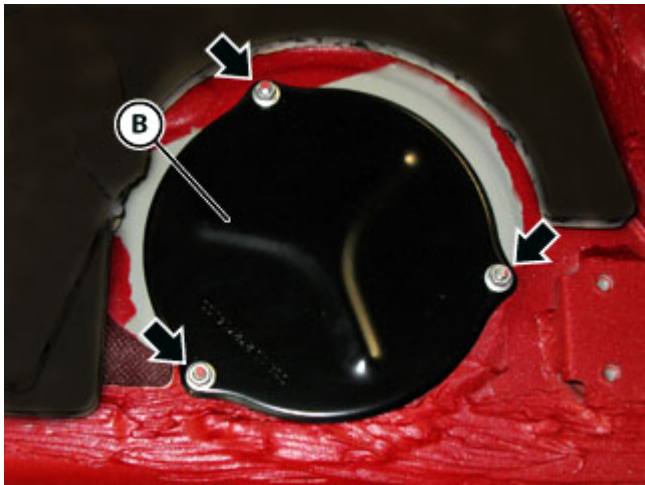

- Fit the cover (B).
- Tighten the nuts indicated.

Tightening torque	Nm	Class
Nut	5 Nm	B

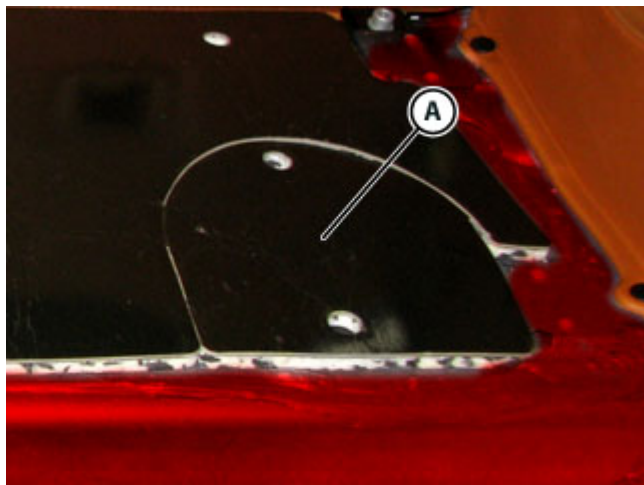

- Fit and attach the insulation **(A)**.

- Refit the complete rear removable subframe (🔧 E2.03).
- Refit the luggage compartment trim panels (🔧 E4.06).
 - Refit the luggage shelf trim in the luggage compartment.
- Replace the fuel level sensor (🔧 B3.04).
 - Connect the fuel level sensor connector.
- Refit the fuel pump filters (🔧 B3.03).
 - Connect the connectors, pipes, and ground cable of the fuel pump filters.
- Refit the centre tunnel console trim (🔧 E4.03).
- Refit the rear seats (🔧 E4.01).
- Connect the battery (🔧 F2.01).
- Connect the DEIS tester to the diagnostic socket (🔧 F2.09).
 - Perform the respective cycle with the DEIS diagnostic tester.