



GTC4Lusso USA - Fuel pumps and filters - Latest Update: 2021-01-26

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.

Copyright by Ferrari S.p.A. - P.IVA 00159560366

B3.03 Fuel pumps and filters

Removing the fuel pump filters



CAUTION

FUEL IS HIGHLY FLAMMABLE.

NEVER WORK ON A HOT ENGINE.

TO PREVENT FIRE RISKS AND FUEL LEAKAGE, WORK ONLY ON A COLD ENGINE WITH AN EMPTY FUEL TANK.




CAUTION


Take every necessary precaution, since fuel residues may remain in the tank and in the pipes, even after the operations described.

- Disconnect the battery ( F2.01).
- Drain fuel system ( B3.08).
- Remove the rear seats ( E4.01).
-  Remove the rear seat cushions.

Left hand filter

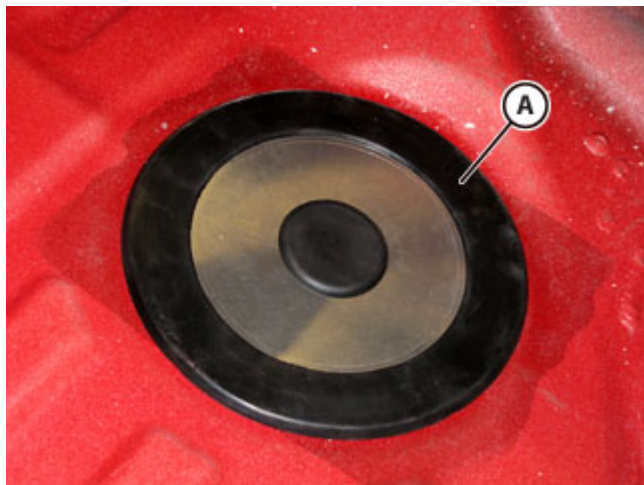

- Prise out and remove the inspection cap (A).

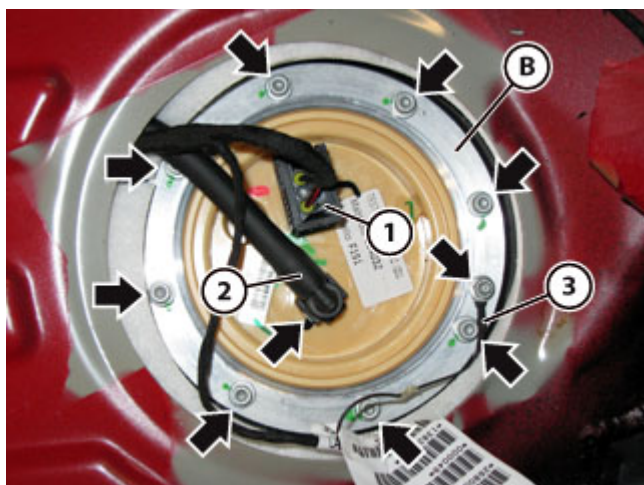


- Disconnect the connector (1).



When connecting a fuel system pipe, bear in mind that the line may be pressurised. Proceed therefore with caution and keep away any type of flame as there is a risk of fuel spraying onto the operator. Always plug the disconnected fuel pipes to prevent residual fuel from leaking.


- Disconnect the pipe (2), detaching the indicated union.
- Disconnect the ground cable (3) by undoing the indicated nut.
- Note the orientation of the fastener ring (B).
- Remove the fastener ring (B), undoing the indicated screws.

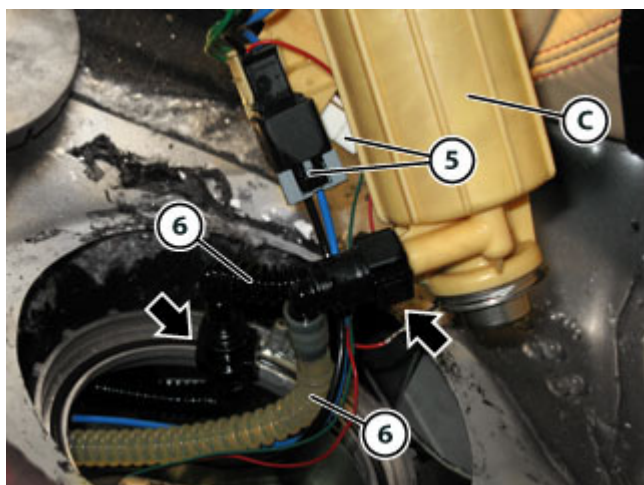


When connecting a fuel system pipe, bear in mind that the line may be pressurised. Proceed therefore with caution and keep away any type of flame as there is a risk of fuel spraying onto the operator. Always plug the disconnected fuel pipes to prevent residual fuel from leaking.

- Remove the fuel pump filter (C).
- Disconnect the connectors (5).
- Disconnect the pipes (6) detaching the respective unions indicated.

Right hand filter

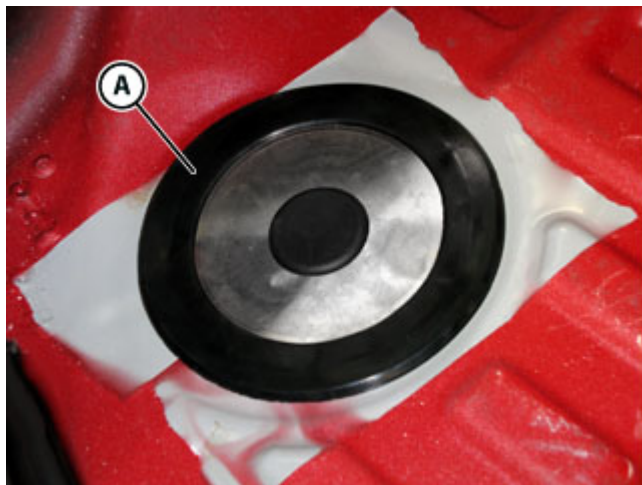

- Prise out and remove the cap (A).

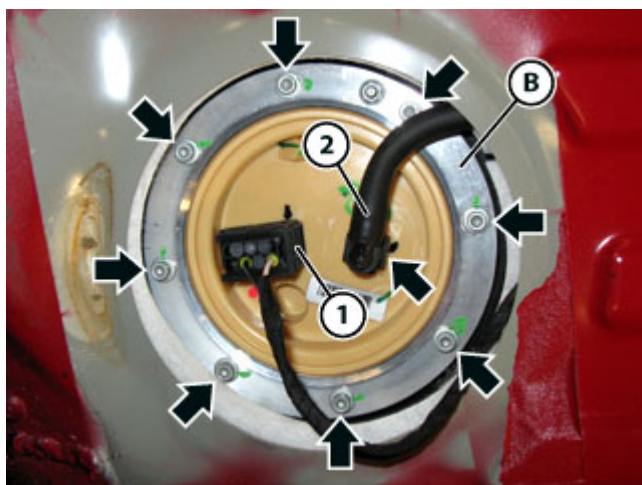


- Disconnect the connector (1).



When connecting a fuel system pipe, bear in mind that the line may be pressurised. Proceed therefore with caution and keep away any type of flame as there is a risk of fuel spraying onto the operator. Always plug the disconnected fuel pipes to prevent residual fuel from leaking.

- Disconnect the pipe (2), detaching the indicated union.
- Note the orientation of the fastener ring (B).
- Remove the fastener ring (B), undoing the indicated screws.

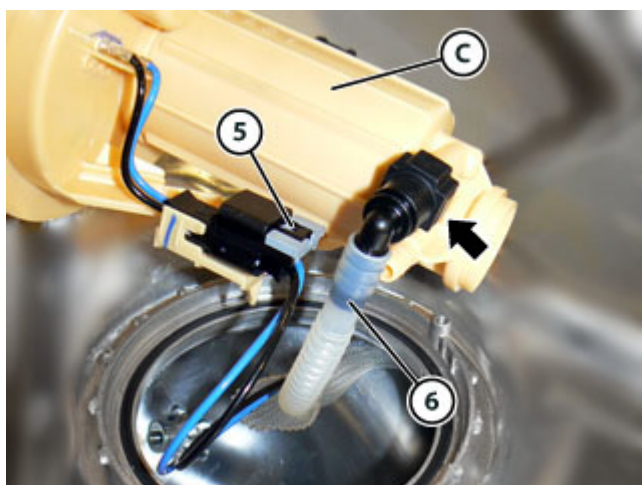

When connecting a fuel system pipe, bear in mind that the line may be pressurised. Proceed therefore with caution and keep away any type of flame as there is a risk of fuel spraying onto the operator. Always plug the disconnected fuel pipes to prevent residual fuel from leaking.

- Remove the fuel pump filter (C).
- Disconnect the connector (5).
- Disconnect the pipe (6), detaching the indicated union.
- Remove the fuel pump filter (C).

Refitting the fuel pump filters


			
Tightening torque		Nm	Class
Fastening the fuel pump filters	Screw	5 Nm	B

Left hand filter




ALWAYS REPLACE the O-ring whenever the fuel pump filter is removed.


- Clean all removed components thoroughly and dry with compressed air.

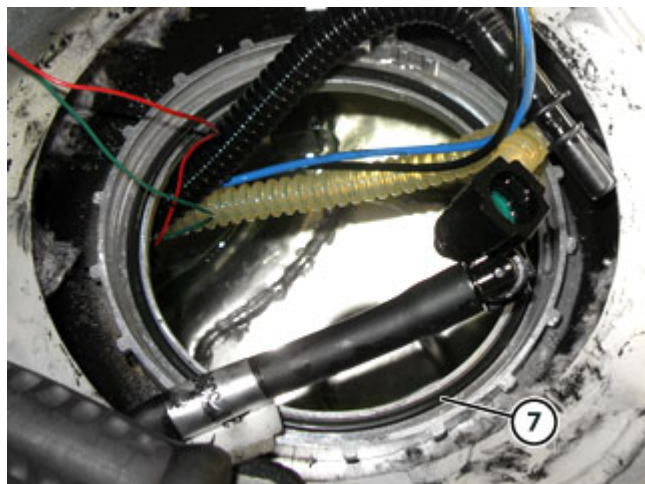


- Replace the O-ring (7), cleaning the respective seat thoroughly.

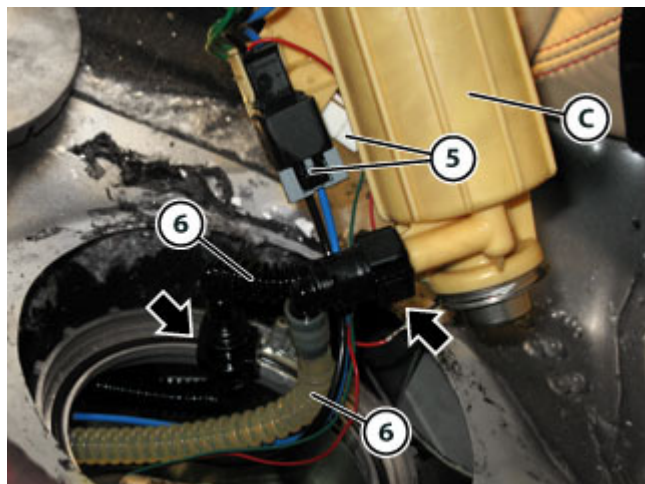

- Connect the pipes (6), securing the respective unions indicated.
- Connect the connectors (5).
- Fit the fuel pump filter (C).

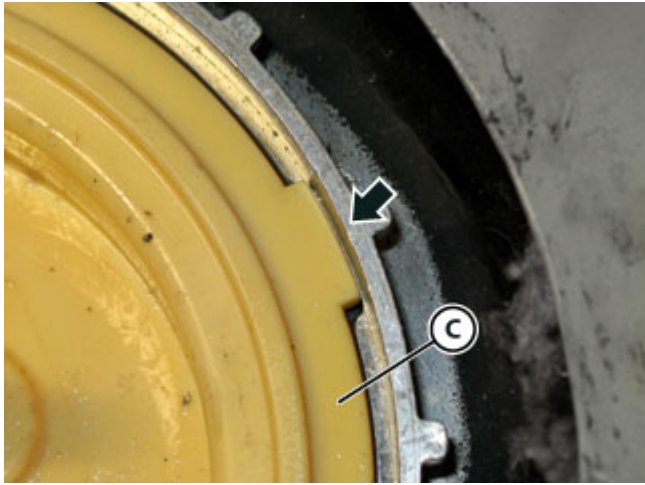


- Check that the indicated tab on the fuel pump filter **(C)** is fitted correctly in its respective seat.

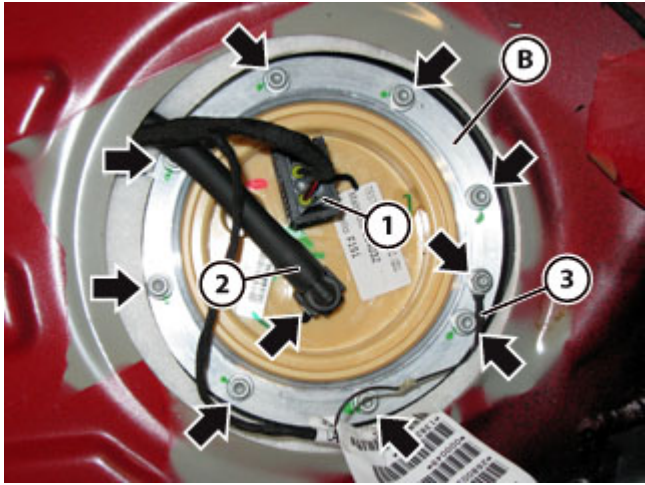

- Check that the mating surfaces of the fastener ring **(B)** are clean.
- Orienting correctly, fit the fastener ring **(B)** and tighten the respective fastener screws indicated.

		
Tightening torque	Nm	Class
Screw	5 Nm	B

- Connect the ground cable **(3)**, tightening the indicated nut.
- Connect the pipe **(2)**, fastening the indicated union.
- Connect the connector **(1)**.
- Fit the cap **(A)**.

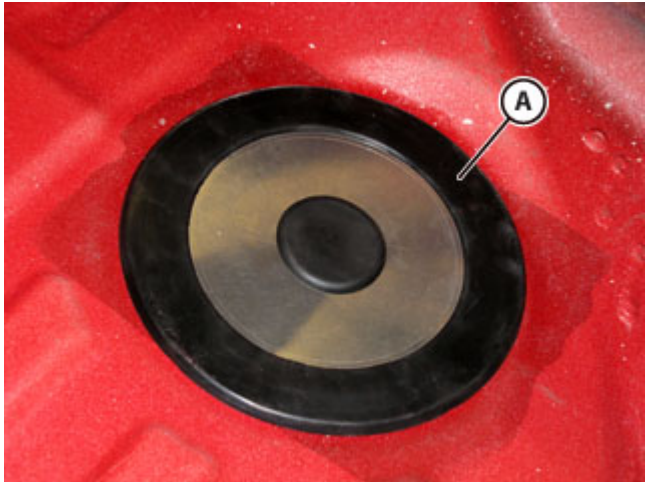


Right hand filter




ALWAYS REPLACE the O-ring whenever the fuel pump filter is removed.

- Clean all removed components thoroughly and dry with compressed air.

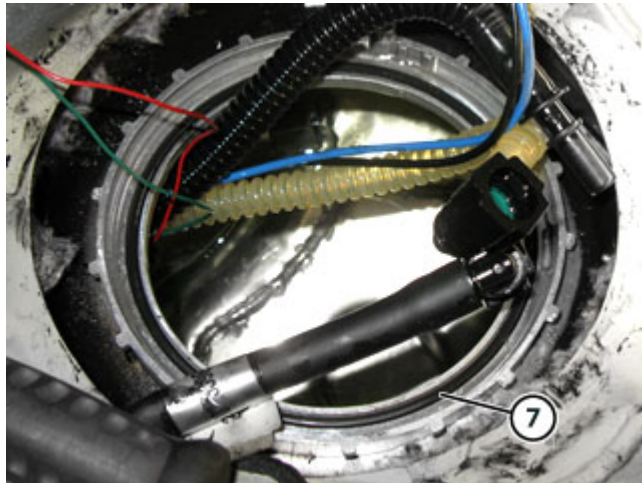


- Replace the O-ring (7), cleaning the respective seat thoroughly.

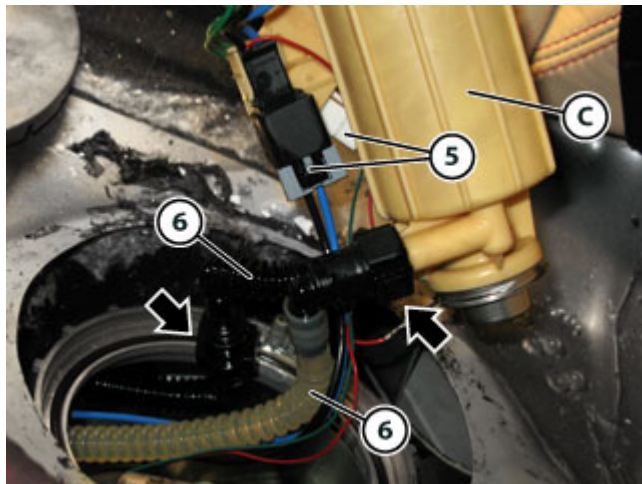

- Connect the pipes (6), fastening the indicated unions.
- Connect the connectors (5).
- Fit the fuel pump filter (C).



- Check that the indicated tab on the fuel pump filter (C) is fitted correctly in its respective seat.

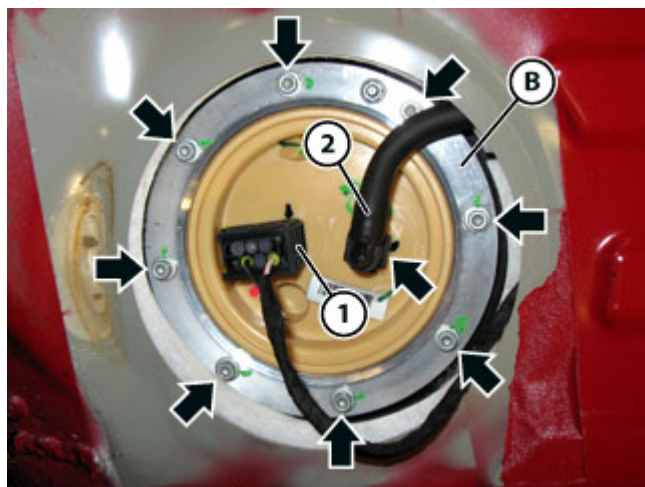


- Check that the mating surfaces of the fastener ring (B) are clean.
- Orienting correctly, fit the fastener ring (B) and tighten the respective fastener screws indicated.



Tightening torque	Nm	Class
Screw	5 Nm	B

- Connect the pipe (2), fastening the indicated union.
- Connect the connector (1).
- Fit the cap (A).

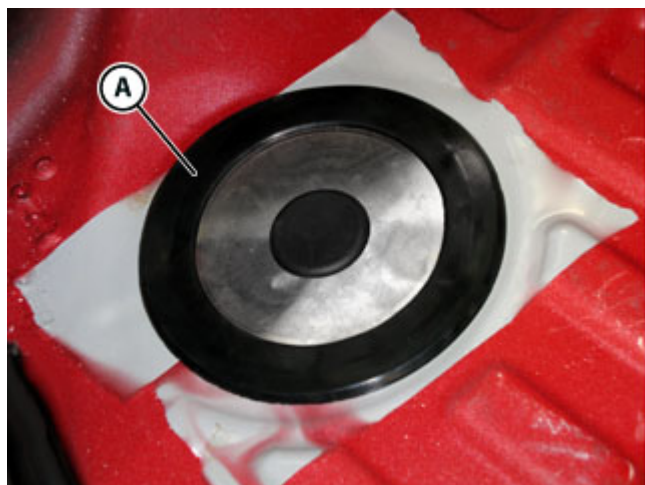

- Refit the rear seats (🔧 E4.01).
- Connect the battery (🔧 F2.01).
- Fill the fuel tank.
- Connect the DEIS tester to the diagnostic socket (🔧 F2.09).
- Perform the respective cycle with the DEIS diagnostic tester.

Replacing the fuel pumps



CAUTION

FUEL IS HIGHLY FLAMMABLE.

NEVER WORK ON A HOT ENGINE.

TO PREVENT FIRE RISKS AND FUEL LEAKAGE, WORK ONLY ON A COLD ENGINE WITH AN EMPTY FUEL TANK.




CAUTION

Take every necessary precaution, since fuel residues may remain in the tank and in the pipes, even after the operations described.


- Disconnect the battery (🔧 F2.01).

Left hand pump


- Remove the fuel pump filters ( B3.03).
- Remove the left hand filter.

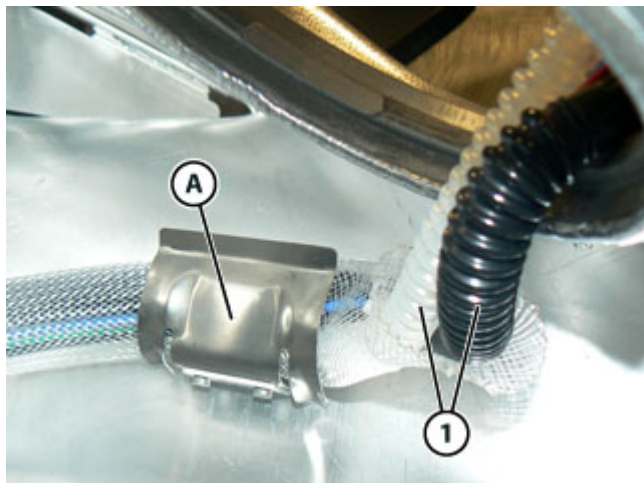


- Detach the pipes (1) from the bracket (A).

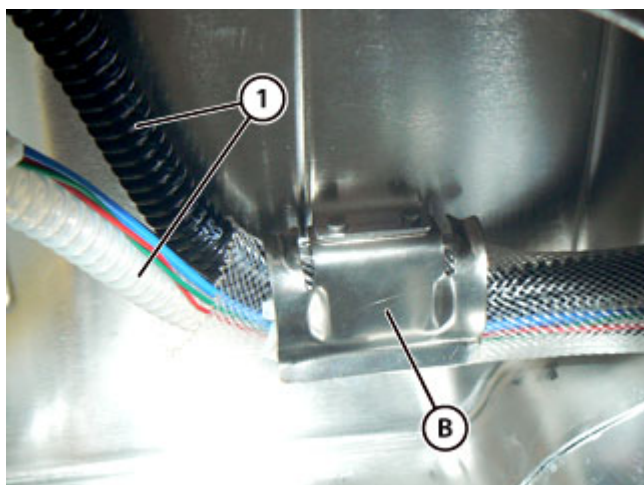


- Detach the pipes (1) from the bracket (B).

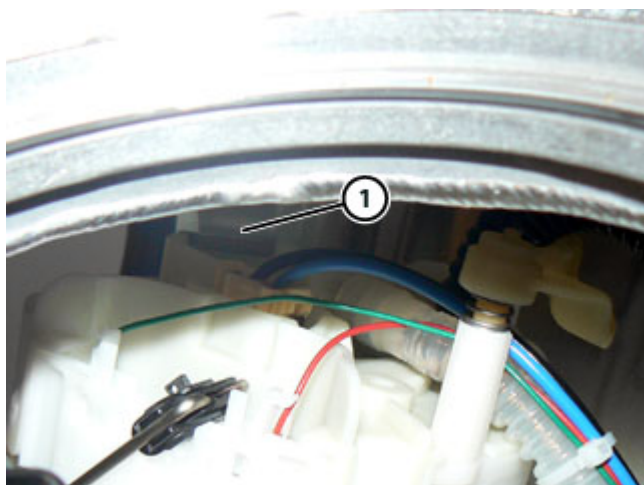


- Detach the clip (1).

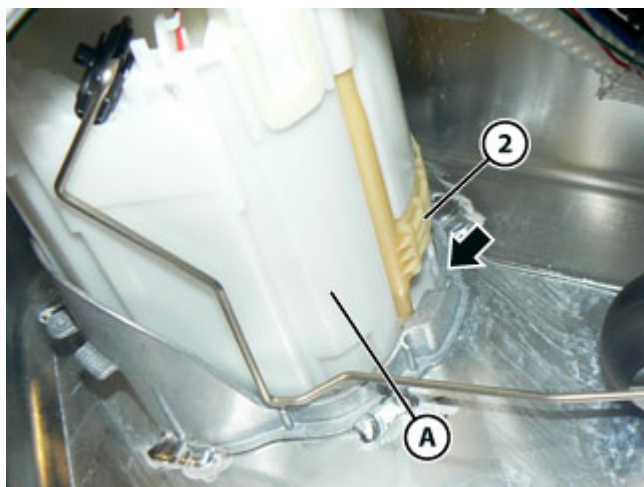


- Press the retainer **(2)** down and turn the pump **(A)** counterclockwise to the indicated point to release the retainer **(2)**.
- Remove the pump **(A)**, complete with cables and pipes, and replace.
- If the same pump is to be reused, take particular care not to bend the float arm.

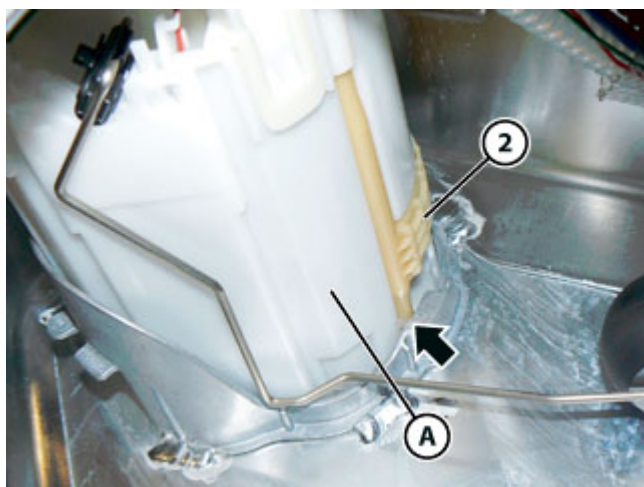


- Fit the new pump **(A)**, complete with cables and pipes, taking particular care not to bend the float arm.
- Press the retainer **(2)** down and turn the pump **(A)** clockwise to the indicated point to fasten the retainer **(2)**.

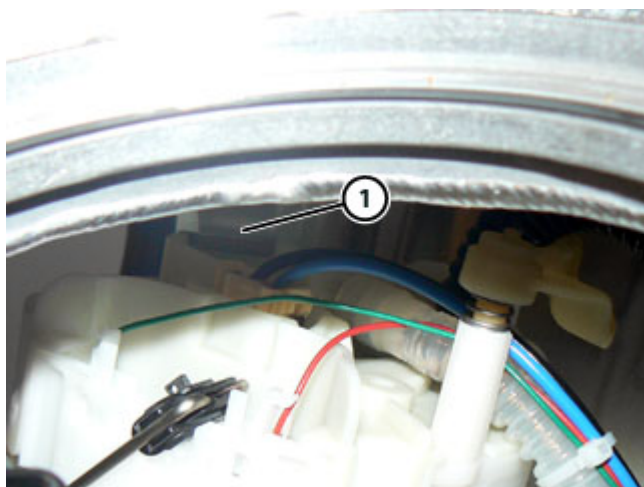

- Fasten the clip **(1)**.

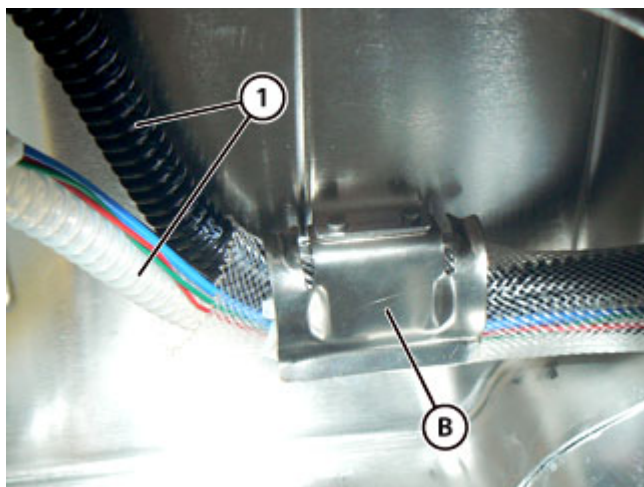

- Fasten the pipes (1) on the bracket (B).

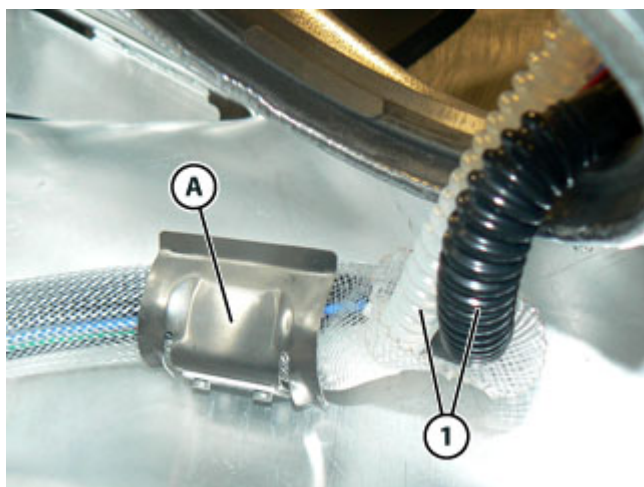


- Fasten the pipes (1) on the bracket (A).


- Refit the fuel pump filters ( B3.03).
-  Refit the left hand filter.

Right hand pump


- Remove the fuel pump filters ( B3.03).
-  Remove the right hand filter.

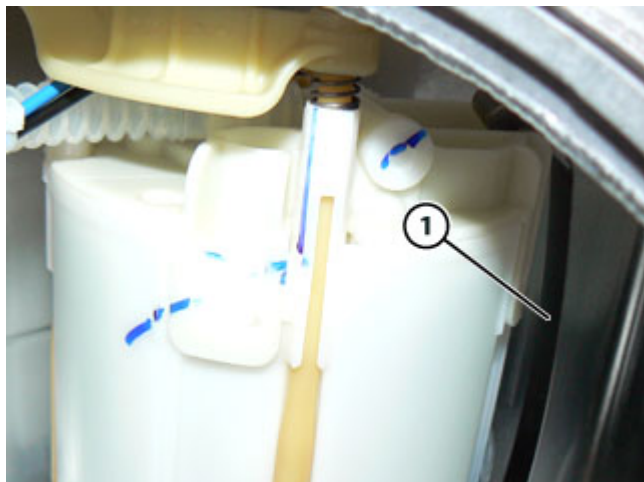


- Detach the clip (1).

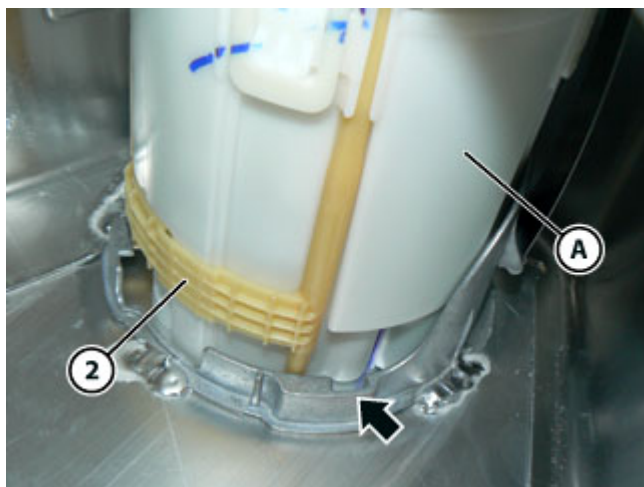

- Press the retainer **(2)** down and turn the pump **(A)** counterclockwise to the indicated point to release the retainer **(2)**.
- Remove the pump **(A)**, complete with cables and pipes, and replace.

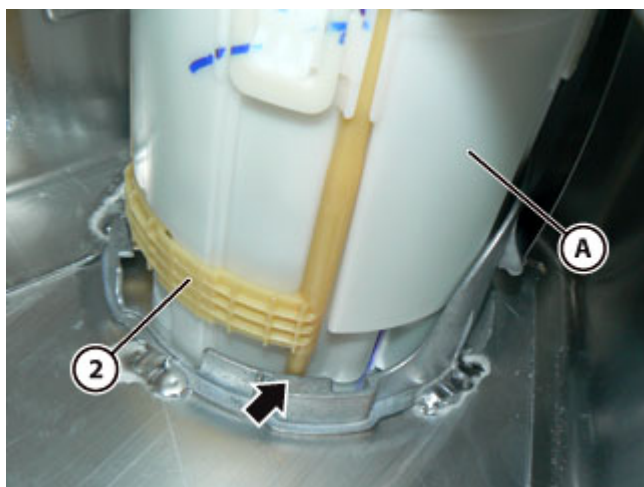

- Fit the new pump **(A)**, complete with cables and pipes.
- Press the retainer **(2)** down and turn the pump **(A)** clockwise to the indicated point to fasten the retainer **(2)**.

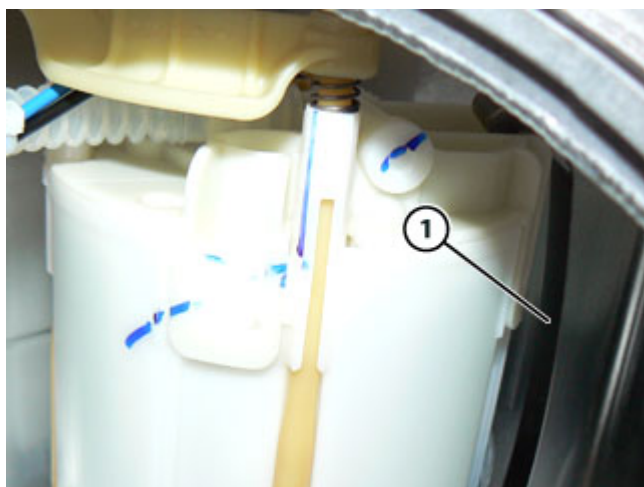

- Fasten the clip **(1)**.

- Refit the fuel pump filters ( **B3.03**).
-  Refit the right hand filter.

- Connect the battery ( **F2.01**).
- Connect the DEIS tester to the diagnostic socket ( **F2.09**).
-  Perform the cycle **NCM short trip sequence: leak detection monitoring**.

