



GTC4Lusso USA - Fuel level sensor - Latest Update: 2021-01-26

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.

Copyright by Ferrari S.p.A. - P.IVA 00159560366

B3.04 Fuel level sensor

Replacing the fuel level sensor

			
Tightening torque		Nm	Class
Fastening the fuel level sensor	Screw	5 Nm	B



CAUTION

FUEL IS HIGHLY FLAMMABLE.

NEVER WORK ON A HOT ENGINE.

TO PREVENT FIRE RISKS AND FUEL LEAKAGE, WORK ONLY ON A COLD ENGINE WITH AN EMPTY FUEL TANK.



CAUTION

Take every necessary precaution, since fuel residues may remain in the tank and in the pipes, even after the operations described.




Whenever the fuel level sensor is removed, ALWAYS REPLACE WITH A NEW SENSOR, fitting a new O-ring.

- Disconnect the battery ( F2.01).
- Drain fuel system ( B3.08).
- Remove the centre tunnel console trim ( E4.03).



- Prise out and remove the cap **(A)**.

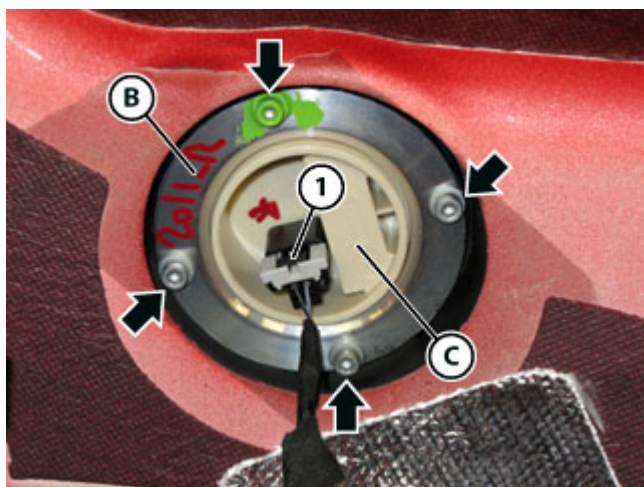

- Disconnect the connector **(1)**.
- Remove the fastener ring **(B)**, undoing the indicated screws.
- Note the orientation of the fuel level sensor **(C)**.
- Remove the fuel level sensor **(C)** and replace.
- ALWAYS replace the O-ring, cleaning the respective seat thoroughly.
- Orienting correctly, install the new fuel level sensor **(C)**.
- Check that the mating surfaces of the fastener ring **(B)** are clean.
- Fit the fastener ring **(B)** and tighten the indicated screws.

Tightening torque	Nm	Class
Screw	5 Nm	B

- Connect the connector **(1)**.
- Fit the cap **(A)**.



- Refit the centre tunnel console trim (E4.03).
- Connect the battery (F2.01).

- Fill the fuel tank.
- Connect the DEIS tester to the diagnostic socket ( F2.09).
-  Perform the respective cycle with the DEIS diagnostic tester.