



GTC4Lusso USA - Engine air duct - Latest Update: 2021-01-26


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.

Copyright by Ferrari S.p.A. - P.IVA 00159560366


B4.02 Engine air duct

Removing the engine air duct


- Disconnect the battery ( F2.01).
- Remove the front bumper ( E3.03).
- Remove the upper front bumper cross member ( E2.04).

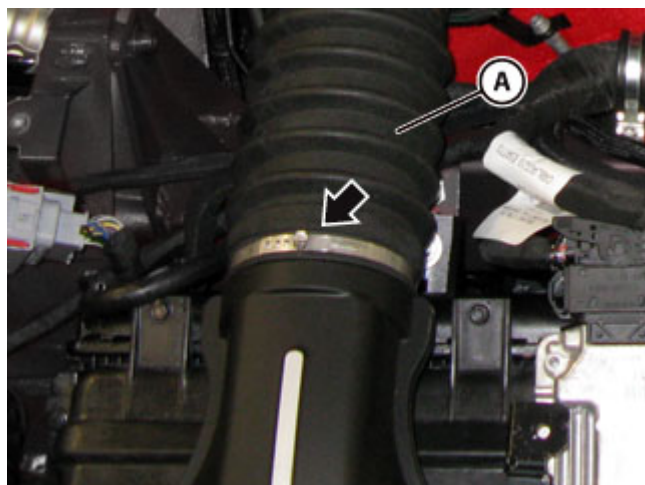


- Loosen the indicated clamp.
- Remove the bellow (A).

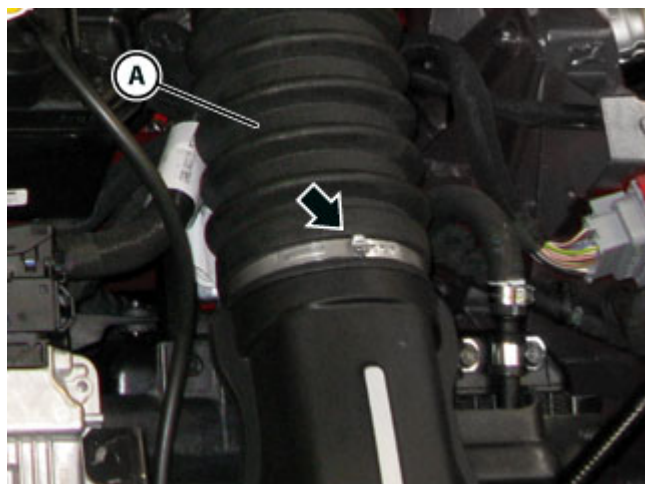

- Loosen the indicated clamp.
- Remove the bellow (A).

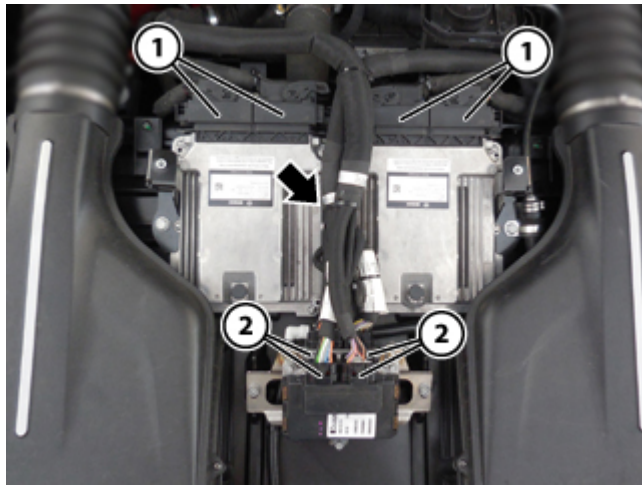

- Detach the indicated clamp.
- Disconnect the connectors **(1)** and move the respective cables out of the way.
- Note which connector is connected to which ECU.
- Disconnect the connectors **(2)** and move the respective cables out of the way.
- Note which connector is connected to which ECU.

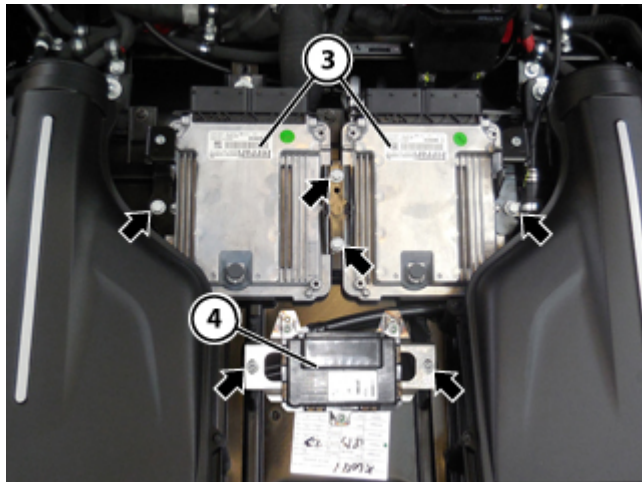

- Undo the screws indicated.
- Remove ECUs **(3)** and **(4)**.



- Undo the screws indicated.




- Undo the screws indicated.




- Undo the indicated screw.



- Undo the screws indicated.

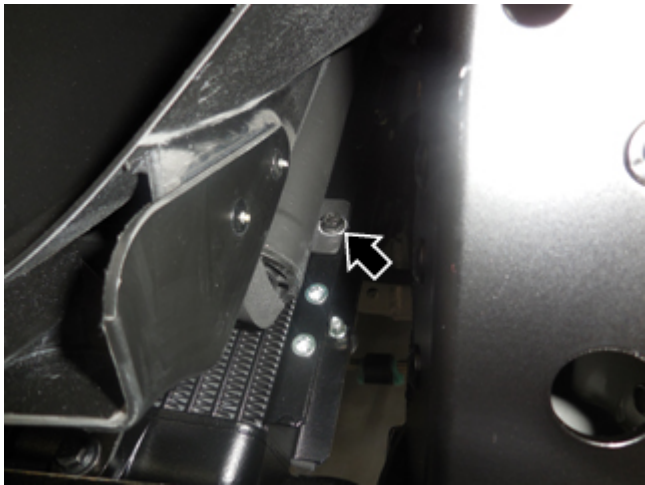


- Undo the indicated screw.

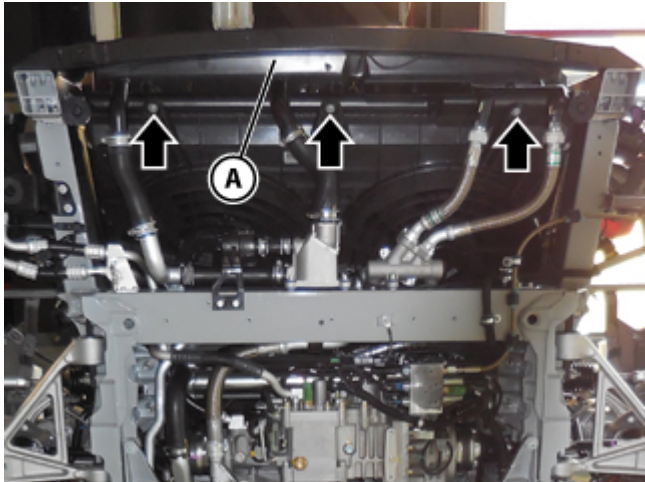

- Undo the screws indicated.
- Remove the radiator air duct (A).


Refitting the engine air duct

			
Tightening torque		Nm	Class
Fastening the radiator air duct	Screw	5 Nm	B
Fastening ECUs to the engine air duct	Screw	9 Nm	B

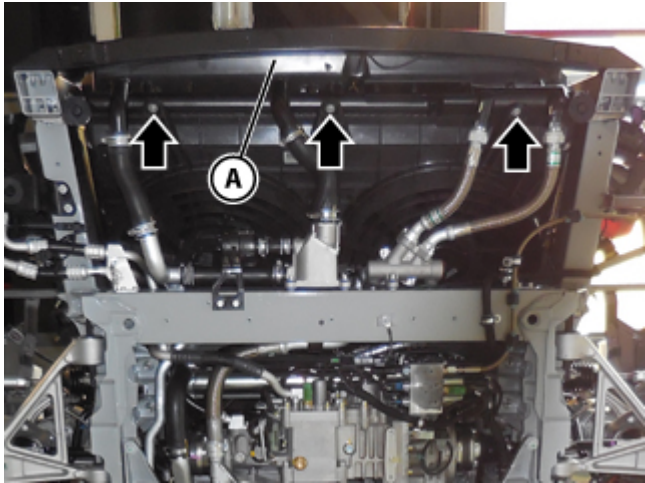

- Fit the radiator air duct (A).
- Tighten the screws indicated.

		
Tightening torque	Nm	Class
Screw	5 Nm	B

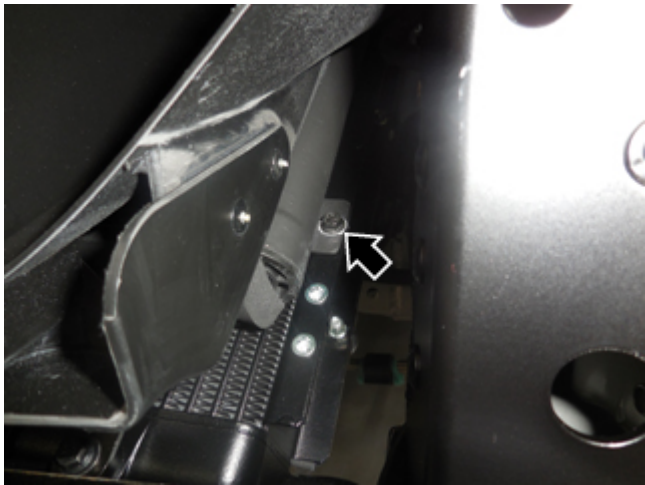


- Tighten the indicated screw.

		
Tightening torque	Nm	Class
Screw	5 Nm	B



- Tighten the screws indicated.

		
Tightening torque	Nm	Class
Screw	5 Nm	B

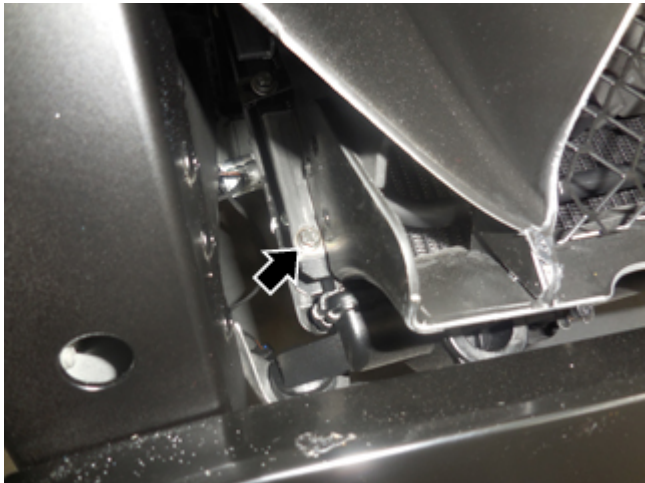

- Tighten the indicated screw.

		
Tightening torque	Nm	Class
Screw	5 Nm	B




- Tighten the screws indicated.

		
Tightening torque	Nm	Class
Screw	5 Nm	B




- Tighten the screws indicated.

		
Tightening torque	Nm	Class
Screw	5 Nm	B

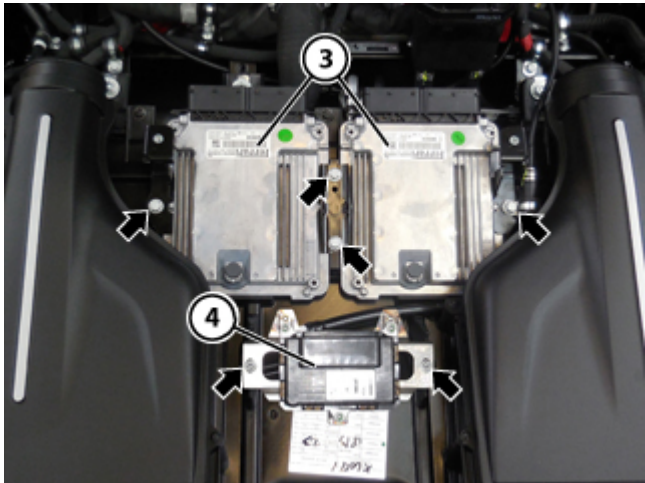


- Fit ECUs (3) and (4).
- Tighten the screws indicated.


		
Tightening torque	Nm	Class
Screw	9 Nm	B

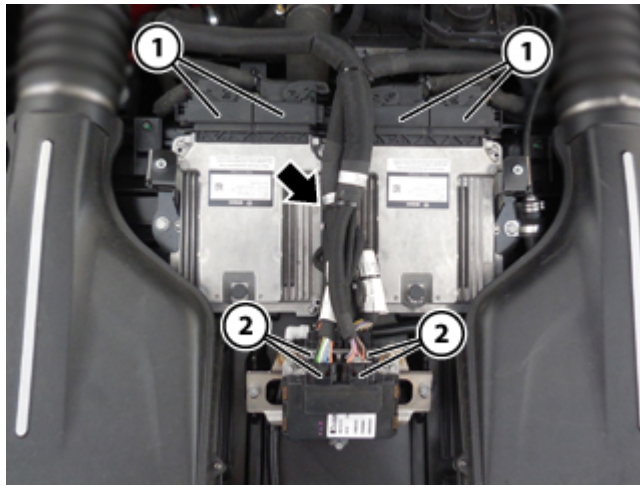

- Connect the connectors **(2)** to the respective ECUs and position the respective cables correctly.
- Connect the connectors **(1)** to the respective ECUs and position the respective cables correctly.
- Fasten the indicated cable tie.

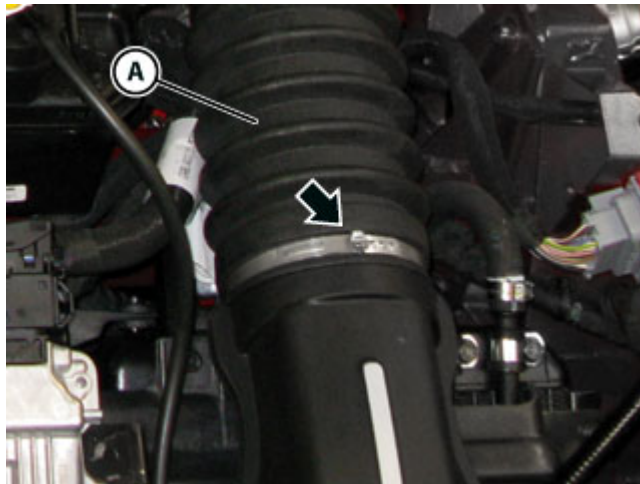

- Fit and connect the bellow **(A)**.
- Tighten the new clamp as indicated.

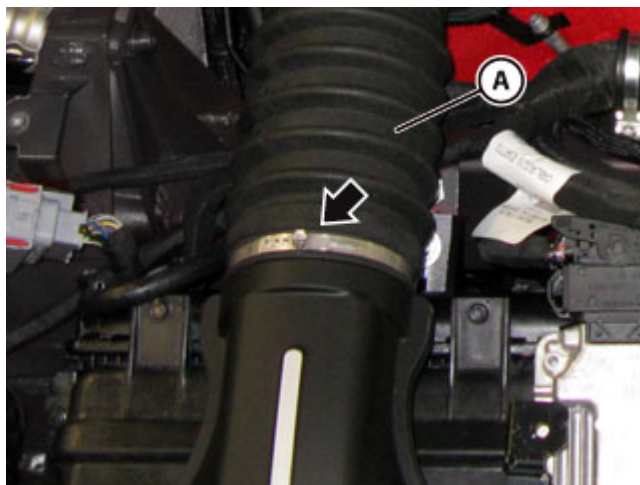

- Fit and connect the bellow **(A)**.
- Tighten the new clamp as indicated.

- Refit the upper front bumper cross member (🔑 E2.04).
- Refit the front bumper (🔑 E3.03).
- Connect the battery (🔑 F2.01).