



GTC4Lusso USA - Engine oil tank - Latest Update: 2021-01-26


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.

Copyright by Ferrari S.p.A. - P.IVA 00159560366


B5.02 Engine oil tank

Removing the engine oil tank


- Remove the battery ( F2.01).
- Remove the front wheelhouses ( E3.05).
 -  Remove the front right hand wheelhouse.
- Remove the flat undertray sections ( E3.13).
 -  Remove the central flat undertray section.
- Drain the engine lubrication system ( A3.01).

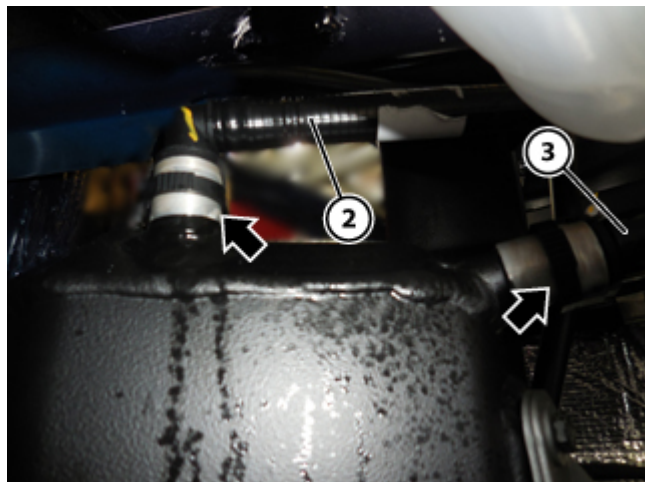


- Disconnect the pipe (2), detaching the respective quick release coupling indicated.
- Disconnect the pipe (3), detaching the respective quick release coupling indicated.

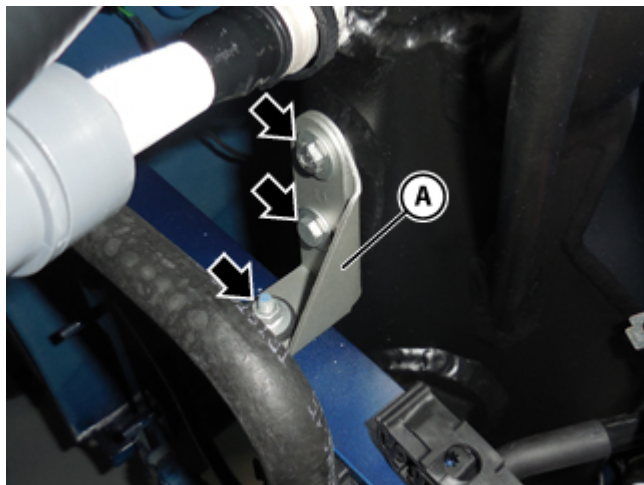


- Undo the screws indicated.
- Remove the bracket **(A)**, retrieving the cable guide ring and the respective spacer.

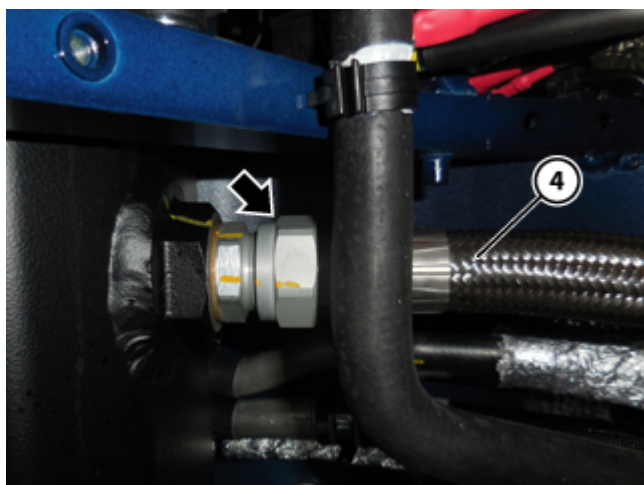


- Disconnect the pipe **(4)** undoing the indicated union.

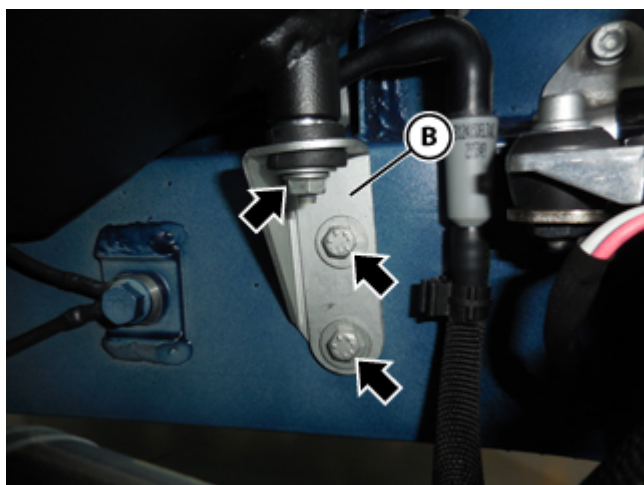

- Undo the screws indicated.
- Remove the bracket **(B)**, retrieving the cable guide ring and the respective spacer.

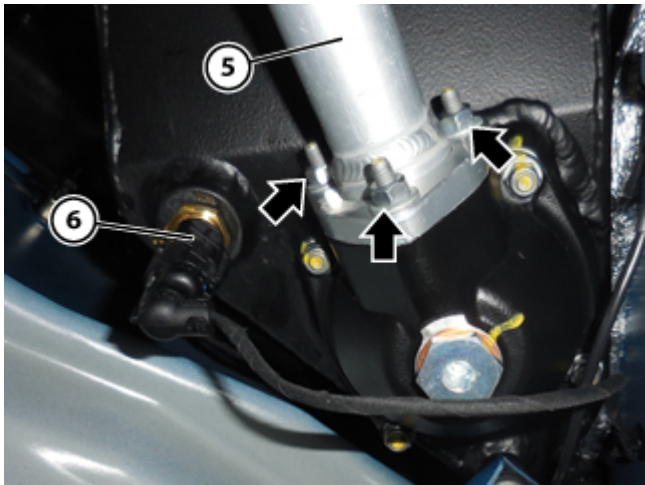

- Disconnect the pipe (5), undoing the indicated nuts.
- Disconnect the connector (6).

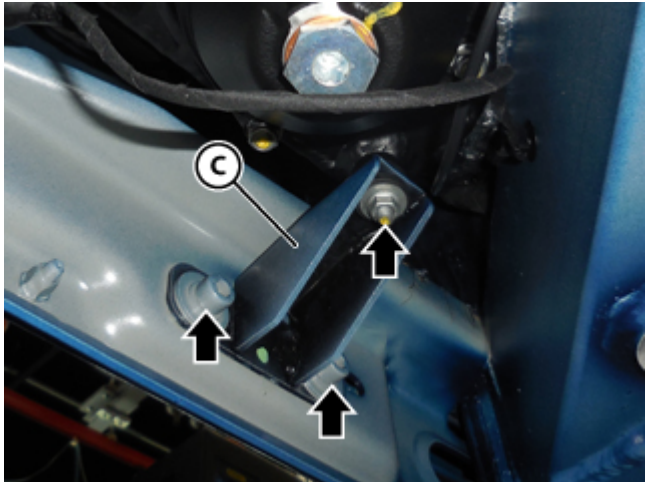


- Move the sill trim aside.
- Undo the screws indicated.
- Undo the indicated nut.
- Remove the bracket (C), retrieving the cable guide ring and the respective spacer.

- Remove the tank, easing out from below and turning as necessary.

Refitting the engine oil tank

			
Tightening torque		Nm	Class
Fastening engine oil tank	Screw	24 Nm	B
	Screw	9 Nm	B
	Nut	9 Nm	B
Fastening engine oil delivery pipe leading from tank to section Products to use: ZEPLON Spray	Nut	10 Nm	B
Fastening engine oil return pipe leading from thermostat valve to tank Products to use: ZEPLON Spray	Union	70 Nm	B

- Fit the tank, inserting from below and turning as necessary.

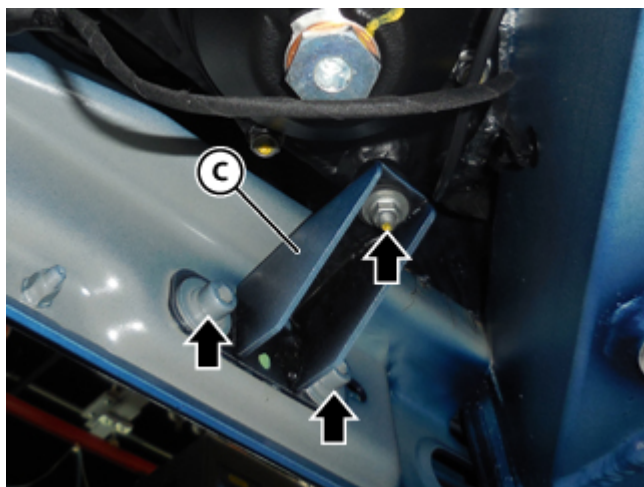


- Fit the bracket **(C)**, fitting the cable grommet and the relative spacer.
- Tighten the screws indicated.

		
Tightening torque	Nm	Class
Screw	24 Nm	B


- Tighten the indicated nut.

		
Tightening torque	Nm	Class
Nut	9 Nm	B

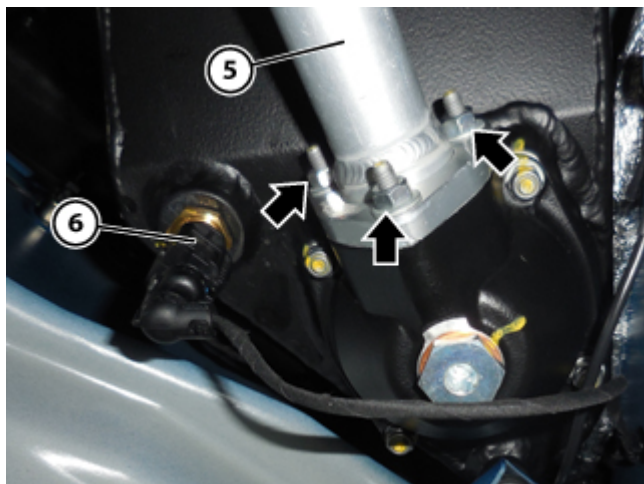

- Connect the connector **(6)**.
- Replace the gasket of the pipe **(5)** and connect the pipe by tightening the indicated nuts.

		
Tightening torque	Nm	Class
Nut	10 Nm	B

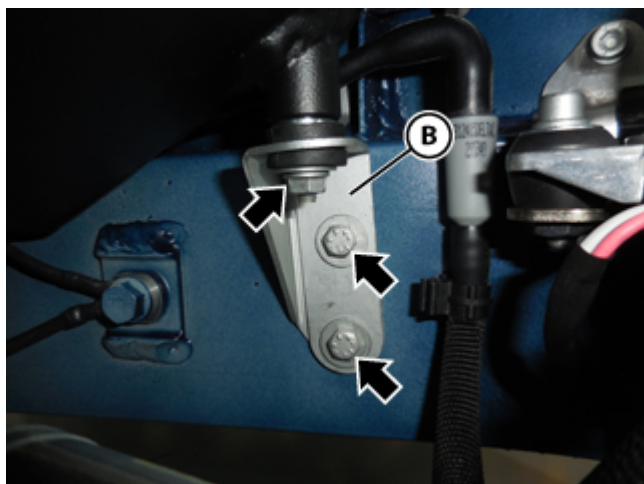


- Fit the bracket **(B)**, fitting the cable grommet and the relative spacer.
- Tighten the screws indicated.

		
Tightening torque	Nm	Class
Screw	9 Nm	B


- Tighten the indicated nut.

		
Tightening torque	Nm	Class
Nut	9 Nm	B

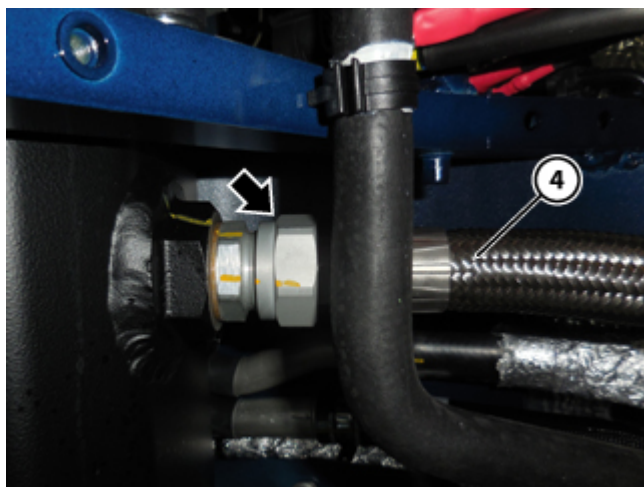

- Connect the pipe (4), tightening the indicated union.

		
Tightening torque	Nm	Class
Union	70 Nm	B

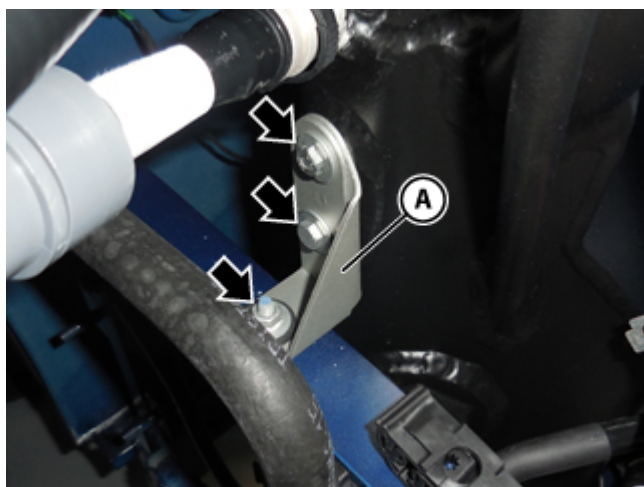


- Fit the bracket (A), fitting the cable grommet and the relative spacer.
- Tighten the screws indicated.

		
Tightening torque	Nm	Class
Screw	9 Nm	B

- Tighten the indicated nut.

		
Tightening torque	Nm	Class
Nut	9 Nm	B

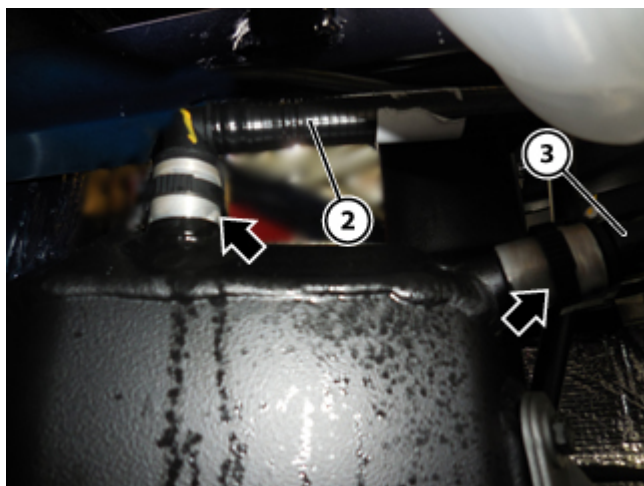

- Connect the pipe (3), connecting the respective quick release coupling indicated.
- Connect the pipe (2), connecting the respective quick release coupling indicated.

- Fill the engine lubrication system ( A3.01).
- Refit the flat undertray sections ( E3.13).
- Refit the central flat undertray section.
- Refit the front wheelhouses ( E3.05).
- Refit the front right hand wheelhouse.

➤ Refit the battery ( F2.01).