



GTC4Lusso USA - Engine oil radiator - Latest Update: 2021-01-26


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.

Copyright by Ferrari S.p.A. - P.IVA 00159560366


B5.04 Engine oil radiator

Removing the engine oil radiator

- Remove the electric radiator fan cowl (🔑 B6.06).
- 🔧 Undo the screws fastening the electric fan cowl to the engine oil radiator.

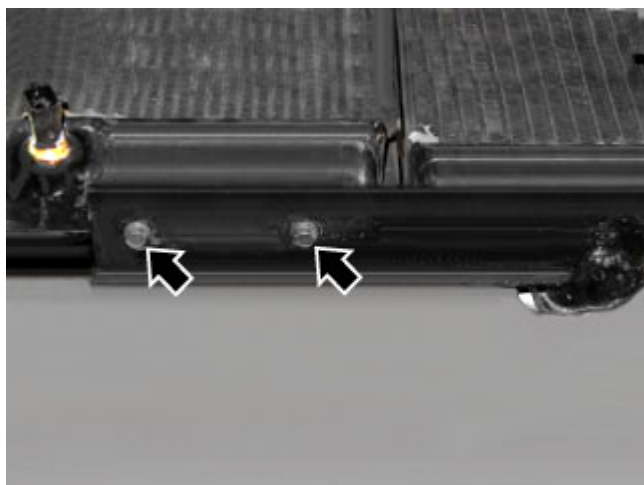


- Undo the screws indicated.

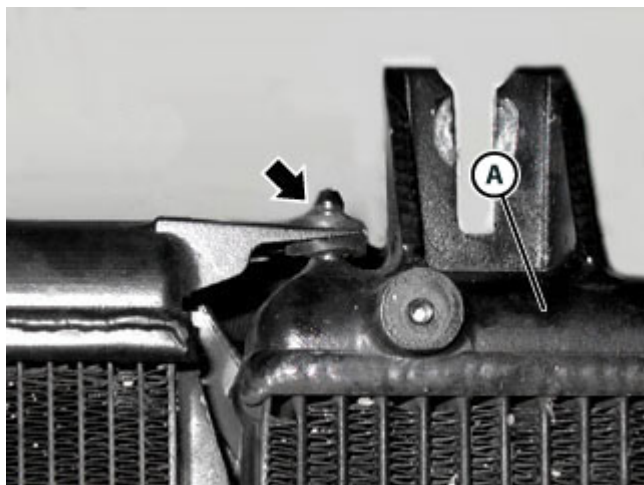


- Remove the engine oil radiator (A), detaching the indicated pin.

Refitting the engine oil radiator

			
Tightening torque		Nm	Class
Fastening the engine oil radiator	Screw	5 Nm	B

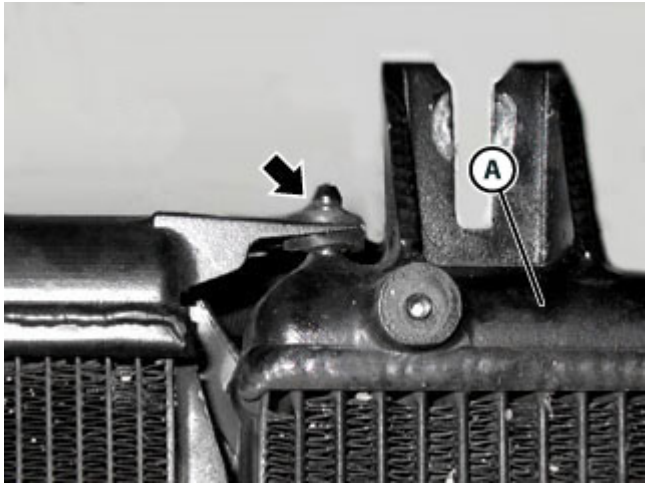

- Fit the engine oil radiator **(A)**, inserting the indicated pin.

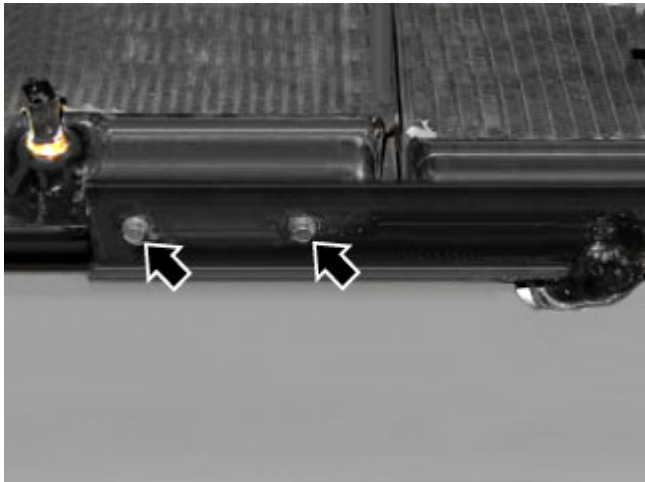

- Tighten the screws indicated.

		
Tightening torque	Nm	Class
Screw	5 Nm	B

➤ Refit the electric radiator fan cowl ( B6.06).