



GTC4Lusso USA - Draining and filling the engine lubrication system - Latest Update: 2021-01-26

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.

Copyright by Ferrari S.p.A. - P.IVA 00159560366

B5.06 Draining and filling the engine lubrication system

Draining the engine lubrication system




Pour the oil drained from the system into a container and seal it. DO NOT dispose of used oil in the environment.

➤ Remove the flat undertray sections ( E3.13).


 Remove the front and central flat undertray sections.



- Place a container for collecting engine oil under the indicated plug.
- Unscrew the indicated plug.
- Wait for the oil to drain completely.

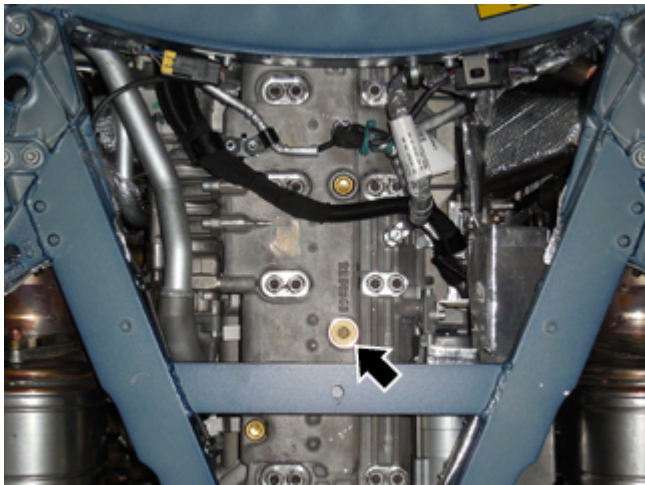


- Place a container for collecting engine oil under the indicated plug.
- Unscrew the indicated plug.
- Wait for the oil to drain completely.

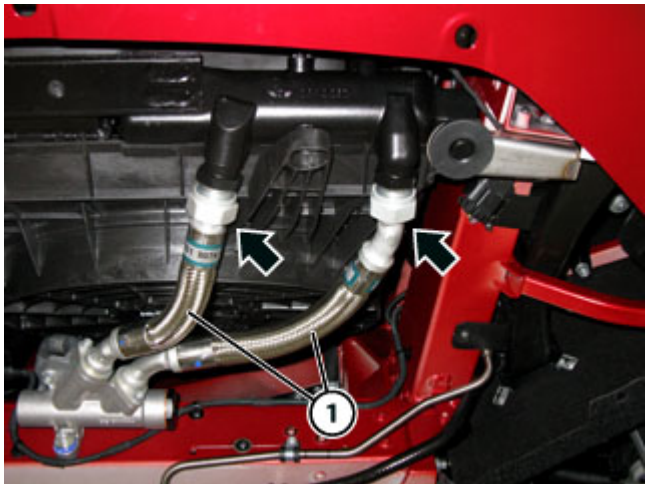

- Place a container for collecting engine oil under the pipes (1).
- Disconnect the pipes (1), undoing the indicated unions.
- Wait for the oil to drain completely.


Filling the engine lubrication system

			
Tightening torque		Nm	Class
Fastening engine oil tank drain plug	Plug	50 Nm	B
Fastening the magnetic engine oil drain plug	Magnetic plug	60 Nm	B
Fastening engine oil pipes leading from thermostat valve to radiator	Ring nut	70 Nm	B

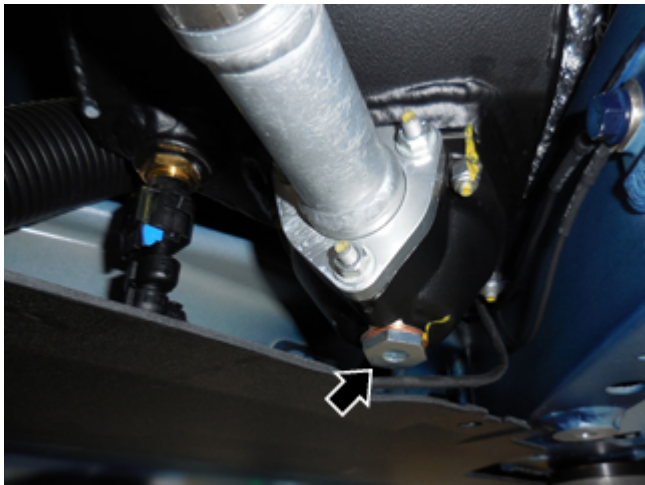


- Clean the indicated plug thoroughly with a suitable degreaser that does not leave residue.
- Definitively tighten the indicated plug, replacing the respective gasket.

		
Tightening torque	Nm	Class
Plug	50 Nm	B

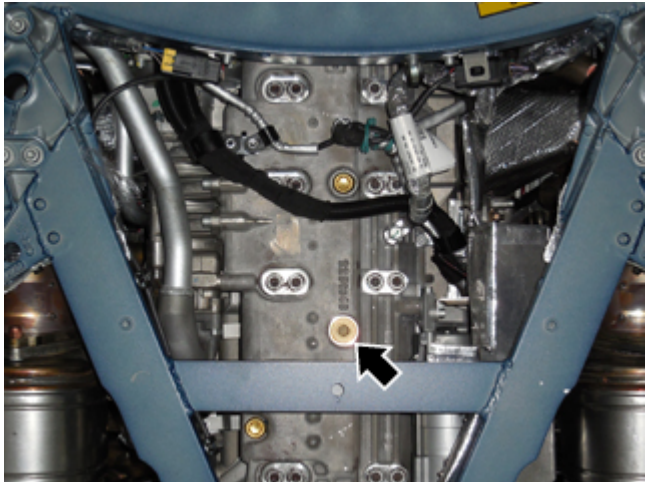

- Clean the indicated plug thoroughly with a suitable degreaser that does not leave residue.
- Definitively tighten the indicated plug, replacing the respective gasket.

		
Tightening torque	Nm	Class
Magnetic plug	60 Nm	B

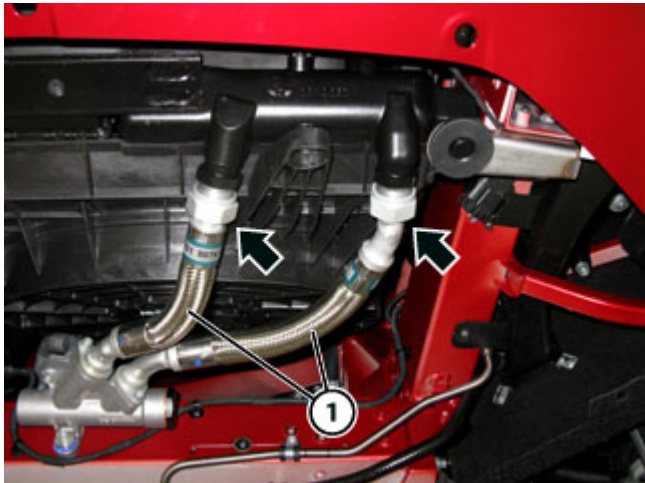

- Connect the pipes (1), tightening the indicated unions.

		
Tightening torque	Nm	Class
Ring nut	70 Nm	B



- Undo and remove the cap **(A)**.
- ⚠ Fill the engine lubrication system using only new oil of the type specified in the fluids and lubricants table.
- Gradually add **9 litres** of new oil of the specified type to the tank.
- Start the engine and run at idle speed for approximately **3 minutes**.
- Switch off the engine.
- ⚠ Fill the engine lubrication system using only new oil of the type specified in the fluids and lubricants table.
- Gradually add **4 litres** of new oil of the specified type to the tank.
- Check the engine lubrication oil level (🔧 A3.01).
- ⓘ Due to inevitable pooling within the lubrication system, the actual quantity of oil added may vary from vehicle to vehicle.
- Close and tighten the cap **(A)** securely.


- Check that there are no engine oil leaks from the drain plugs and from the engine oil filter.
- Refit the flat undertray sections (🔧 E3.13).
- ⓘ Refit the front and central flat undertray sections.

Taking engine oil samples

- Remove the engine compartment cosmetic shields (🔧 E3.14).
- ⓘ Remove the right hand cosmetic inspection shield.



- ⚠ The bottle contains a vacuum (-950 mbar depression).
DO NOT remove the outer cap or turn the valve before use.
The following sampling procedure must be performed with the engine warm: run the engine to reach normal operating temperature.
- To take an engine oil sample, use the **"Vacuum bottle with tube" KIT, Part No. 070001988**, consisting of:
 - Bottle **(A)**;
 - Outer cap **(B)**;
 - Tube **(C)**.

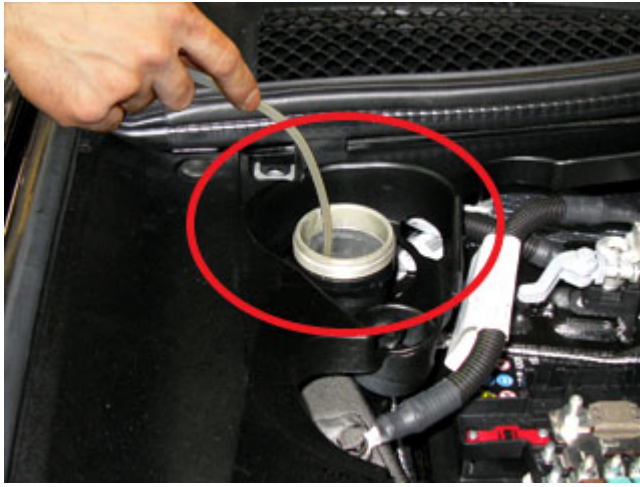

- Remove the outer cap from the bottle.
- Unscrew and remove the engine oil tank cap.
- Insert one end of the pipe in the engine oil tank to immerse it in oil being sampled.
- Only insert the length of tube necessary to immerse the end in the oil.
- Connect the bottle to the end of the tube.
- Turn the valve by **90°**.
- Once the bottle is filled, close the valve by turning back **90°**.
- Disconnect the bottle from the tube and refit the outer cap.
- Fit the engine oil tank cap and tighten securely.
- Print out the specific label (annexed with Technical Information) on adhesive paper, compile the label with the information requested and apply to the bottle.

➤ Refit the engine compartment cosmetic shields (🔧 E3.14).

• Refit the right hand cosmetic inspection shield.