



GTC4Lusso USA - Engine coolant tank - Latest Update: 2021-01-26


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.

Copyright by Ferrari S.p.A. - P.IVA 00159560366


B6.02 Engine coolant tank

Removing the engine coolant tank


- Remove the front wheelhouses ( E3.05).
 -  Remove the rear element of the front right hand wheelhouse.
- Remove the engine compartment cosmetic shields ( E3.14).
 -  Remove the right hand lateral cosmetic shield

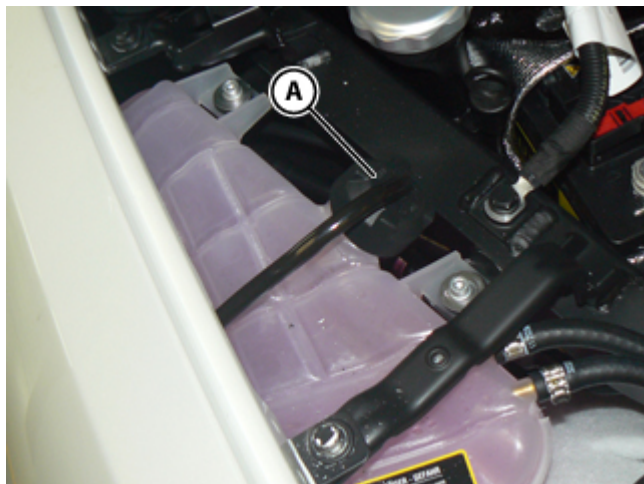

- Undo and open the cap (A).
- Empty the tank, aspirating coolant via the filler neck.

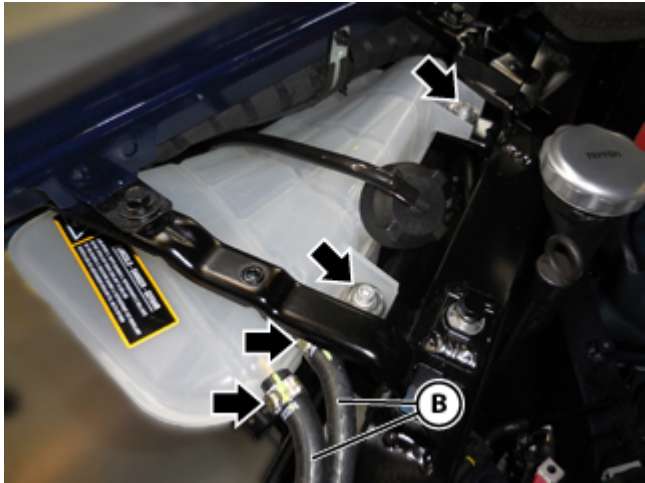


- Disconnect the pipes **(B)**, removing the indicated collars.
- Undo the nuts indicated.

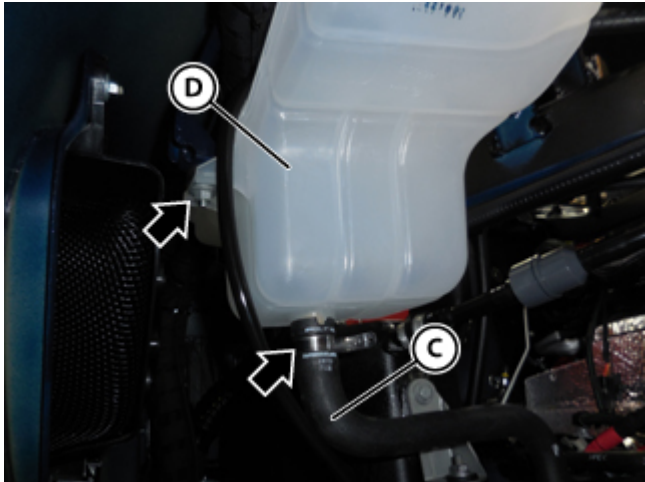

- Disconnect the pipe **(C)**, removing the respective collar indicated.
- Undo the indicated nut.
- Remove the tank **(D)**.

Refitting the engine coolant tank

			
Tightening torque		Nm	Class
Fastening the expansion tank	Screw	9 Nm	B

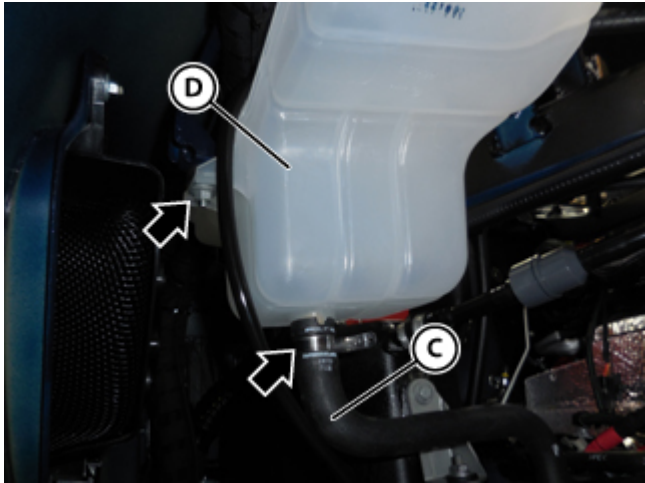

- Fit the tank **(D)**.
- Tighten the indicated nut.

		
Tightening torque	Nm	Class
Screw	9 Nm	B

- Connect the pipe **(C)** fitting and tightening a new collar as indicated.




- Tighten the nuts indicated.



Tightening torque	Nm	Class
Screw	9 Nm	B

- Connect the pipes (**B**), fitting and tightening new collars as indicated.

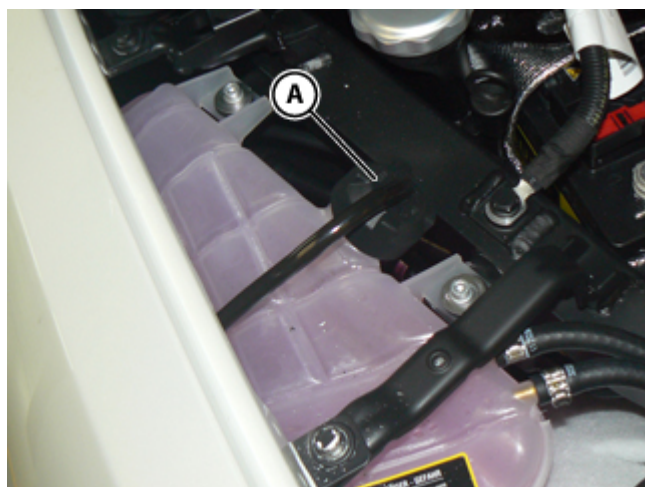

- Close and tighten the cap (**A**) securely.

- Refit the front wheelhouses (🔧 E3.05).
 - ❗ Refit the rear element of the front wheelhouse.
- Refit the engine compartment cosmetic shields (🔧 E3.14).
 - ❗ Refit the right hand lateral cosmetic shield
- Check the engine cooling system fluid level (🔧 A3.07).