



GTC4Lusso USA - Engine coolant pressure switch/thermostat - Latest Update: 2021-01-26

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.

Copyright by Ferrari S.p.A. - P.IVA 00159560366

B6.04 Engine coolant pressure switch/thermostat


Replacing the engine coolant pressure switch/thermostat

			
Tightening torque		Nm	Class
Fastening engine coolant pressure switch/thermostat	Screw	9 Nm	B
Fastening engine coolant pipes	Screw collar	5 Nm	B
	Screw collar	4 Nm	B



After loosening or removal, the Caillau Visa hose clamps must be replaced with Mikalor worm drive hose clamps, following the instructions given in Technical Information 2054 of December 2012.

➤ Drain the engine cooling system ( B6.07).

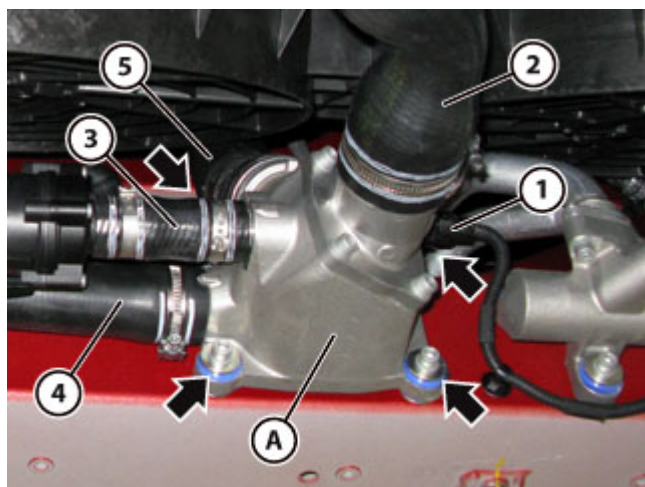

- Disconnect the connector (1).
- Disconnect the pipe (2), loosening the respective screw collar.
- Disconnect the pipe (3), loosening the respective collar.
- Disconnect the pipe (4), loosening the respective screw collar.
- Disconnect the pipe (5), loosening the respective screw collar.
- Undo the screws indicated.
- Remove the pressure switch/thermostat (A) and replace.
- Fit the new pressure switch/thermostat (A).
- Tighten the screws indicated.



	ng torque	Nm	Class
Tightening torque		Nm	Class
Screw		9 Nm	B

- Connect the pipe **(5)**, tightening the respective screw collar.

			
Tightening torque		Nm	Class
Screw collar		5 Nm	B

- Connect the pipe **(4)**, tightening the respective screw collar.

			
Tightening torque		Nm	Class
Screw collar		4 Nm	B

- Connect the pipe **(3)** fitting and tightening the respective collar.
- Connect the pipe **(2)**, tightening the respective screw collar.

			
Tightening torque		Nm	Class
Screw collar		4 Nm	B

- Connect the connector **(1)**.

➤ Fill the engine coolant system ( **A3.07**).