



GTC4Lusso USA - Engine coolant radiator - Latest Update: 2021-01-26

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.


Copyright by Ferrari S.p.A. - P.IVA 00159560366

B6.05 Engine coolant radiator


Removing the engine coolant radiator

➤ Remove the electric radiator fan cowl (🔑 B6.06).

🔧 Only undo the screws fastening the electric fan cowl to the engine coolant radiator.

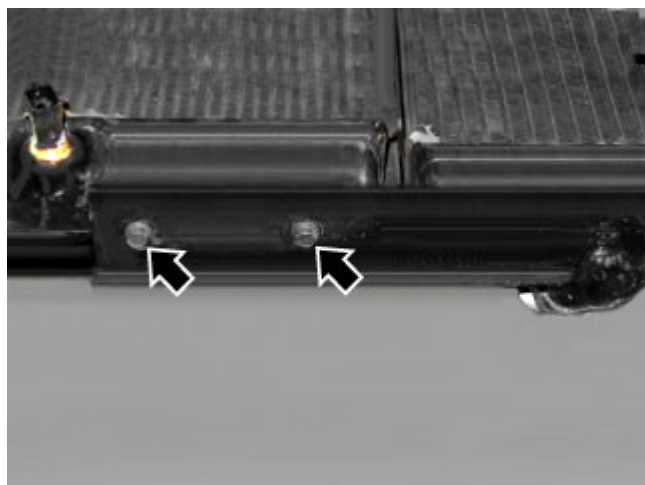


- Undo the screws indicated.

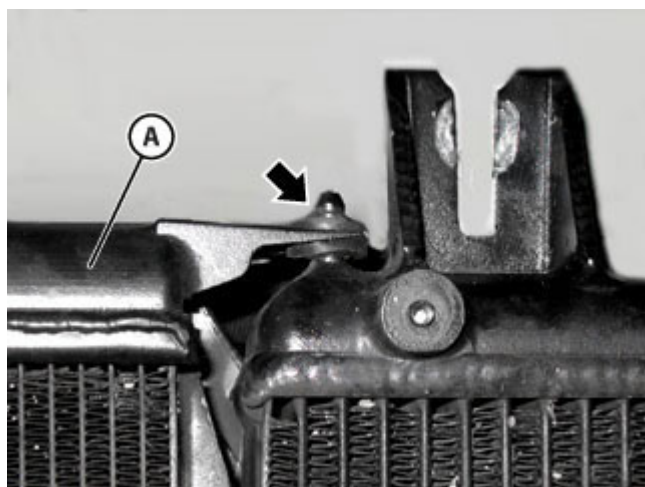


- Remove the engine coolant radiator (A), detaching the indicated pin.

Refitting the engine coolant radiator

			
Tightening torque		Nm	Class
Fastening the engine oil radiator	Screw	5 Nm	B

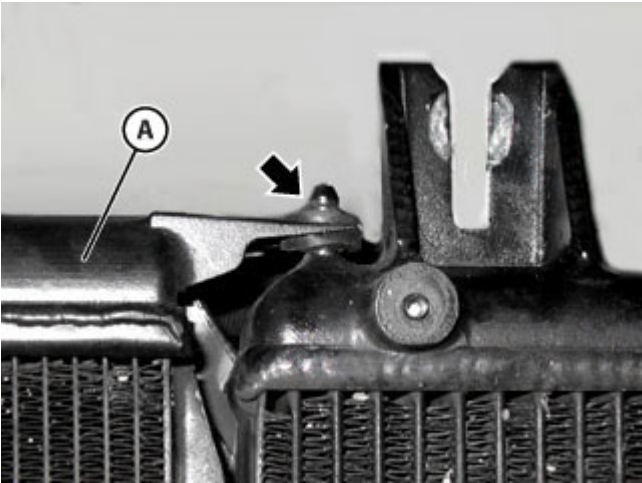

- Fit the engine coolant radiator (A), inserting the indicated pin.

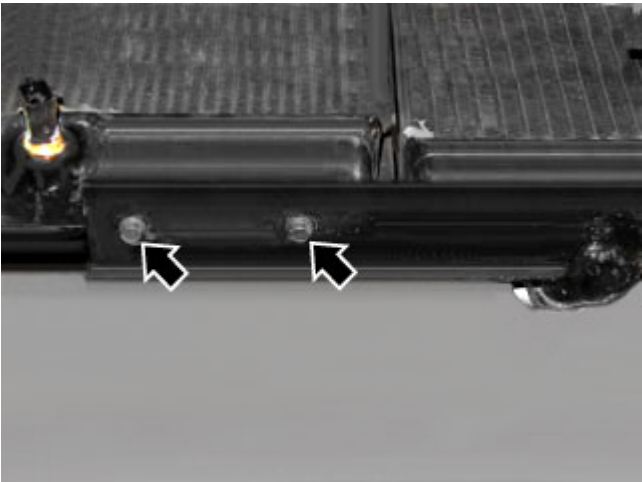

- Tighten the screws indicated.

		
Tightening torque	Nm	Class
Screw	5 Nm	B

➤ Refit the electric radiator fan cowl (🔧 B6.06).