



GTC4Lusso USA - Radiator electric fans - Latest Update: 2021-01-26


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.

Copyright by Ferrari S.p.A. - P.IVA 00159560366


B6.06 Radiator electric fans

Removing the electric radiator fan cowl


- Disconnect the battery ( F2.01).
- Drain the engine cooling system ( B6.07).
- Drain the engine lubrication system ( A3.01).
- Remove the front bumper ( E3.03).
- Remove the upper front bumper cross member ( E2.04).

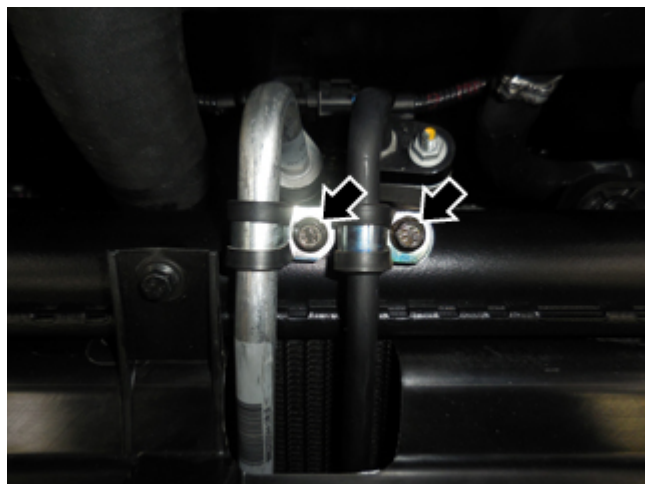

- Undo the screws indicated.
- Refit the AC system compressor ( F5.04).
- Remove the condenser without disconnecting the relative pipes, and move aside so that it does not hinder the following operations.

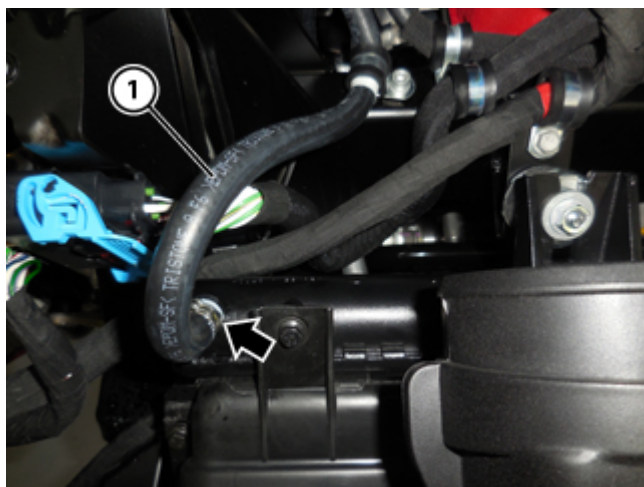


- Disconnect the pipe (1), removing the indicated collar.

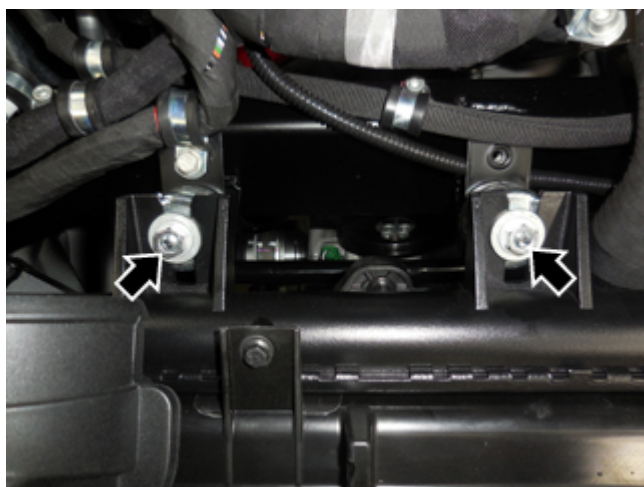


- Undo the nuts indicated.




- Undo the indicated nut.

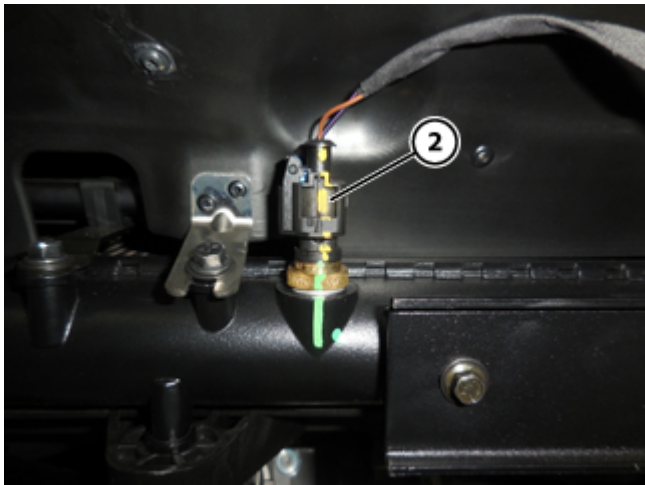

- Disconnect the connector (2).

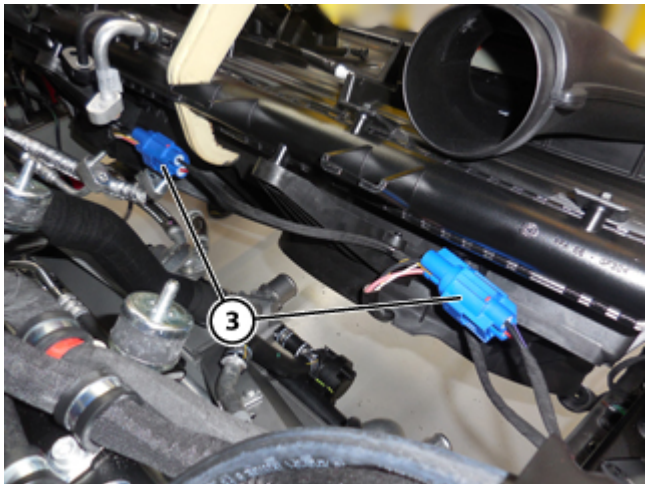

- Grip the radiators firmly and lift.
- Disconnect the connectors (3).
- Remove the radiators complete with electric fan cowl, and set the assembly down in a safe place.

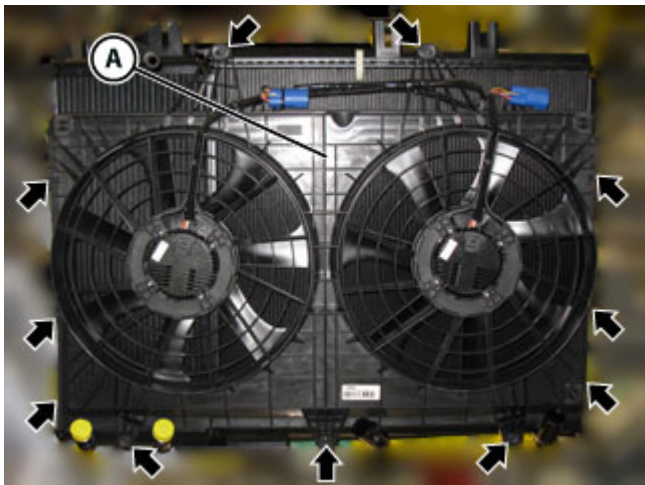

- Undo the screws indicated.
- Remove the electric fan cowl (A) from the radiators.

Refitting the electric radiator fan cowl


			
Tightening torque		Nm	Class
Fastening the electric radiator fan cowl	Screw	5 Nm	B
Fastening radiators	Nut	20 Nm	B

			
Tightening torque		Nm	Class
Fastening Freon pipes	Nut	16 Nm	B
	Screw	9 Nm	B
	Nut	24 Nm	B
	Screw	5 Nm	B



- Fit the electric fan cowl **(A)** on the radiators.
- Tighten the screws indicated.

		
Tightening torque	Nm	Class
Screw	5 Nm	B

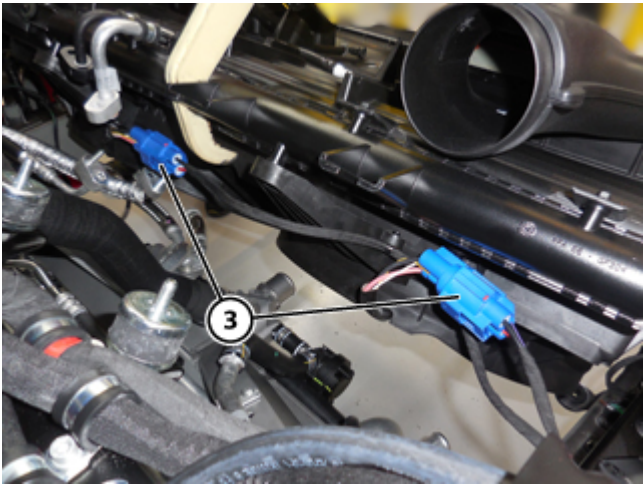

- Holding the radiators complete with electric fan cowl securely, connect the connectors **(3)**.
- Fit the radiators complete with electric fan cowl on the inner brackets and on the upper stud bolts.




- Connect the connector **(2)**.




- Tighten the indicated nut.

		
Tightening torque	Nm	Class
Nut	20 Nm	B

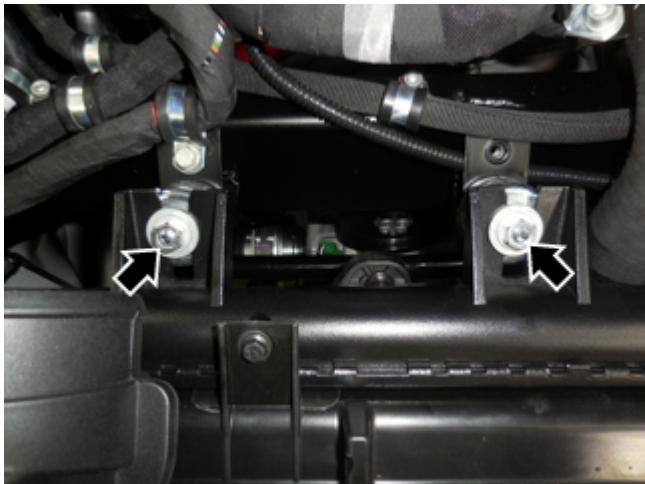


- Tighten the nuts indicated.

		
Tightening torque	Nm	Class
Nut	20 Nm	B

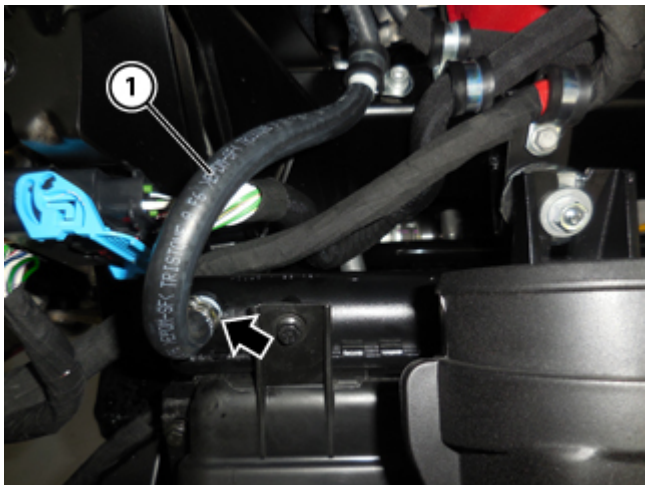

- Connect the pipe (1) fitting and tightening the new collar as indicated.

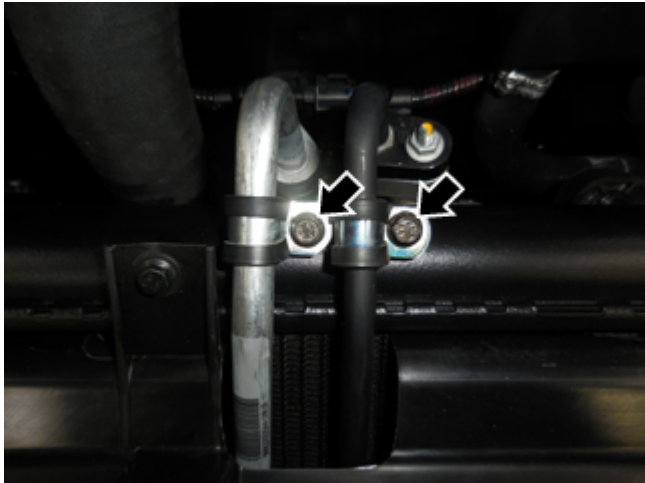

- Refit the condenser (🔧 F5.04).
- Tighten the screws indicated.

		
Tightening torque	Nm	Class
Screw	5 Nm	B

- Refit the upper front bumper cross member (🔧 E2.04).
- Refit the front bumper (🔧 E3.03).
- Connect the battery (🔧 F2.01).
- Fill the engine lubrication system (🔧 A3.01).
- Fill the engine coolant system (🔧 A3.07).