



GTC4Lusso USA - Catalytic converters - Latest Update: 2021-01-26

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.

Copyright by Ferrari S.p.A. - P.IVA 00159560366

B7.03 Catalytic converters


Removing the catalytic converters

- Remove the flat undertray sections ( E3.13).
 -  Remove the central flat undertray section.
- Replace the oxygen sensors ( A3.11).
 -  Remove the oxygen sensors on the catalytic converters.
- Remove the central exhaust extensions ( B7.04).

Right hand catalytic converter




- Undo the indicated nut.

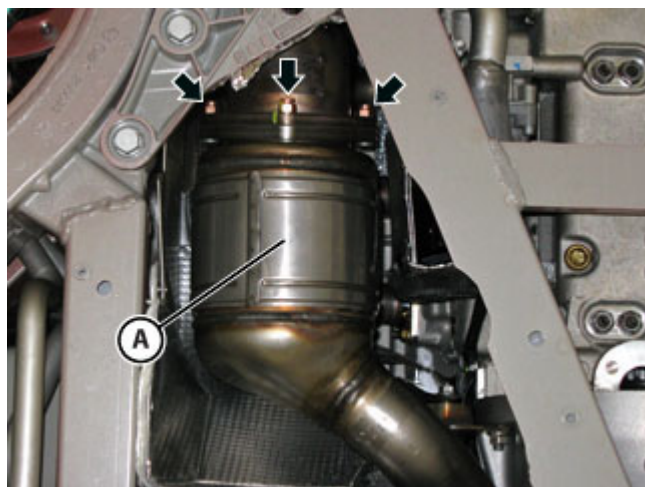


- Undo the nuts indicated.
- Push the catalytic converter **(A)** towards the rear of the vehicle to disconnect it from the exhaust manifold.
- Ease out the catalytic converter **(A)** from below, replacing the relative metal gasket.

Left hand catalytic converter

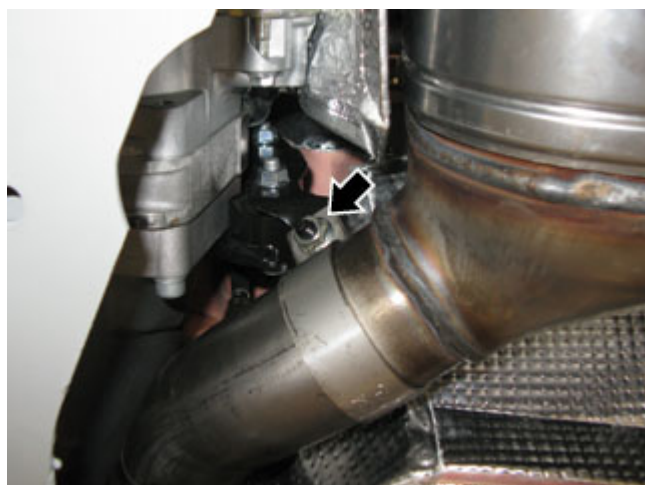

- Undo the indicated nut.

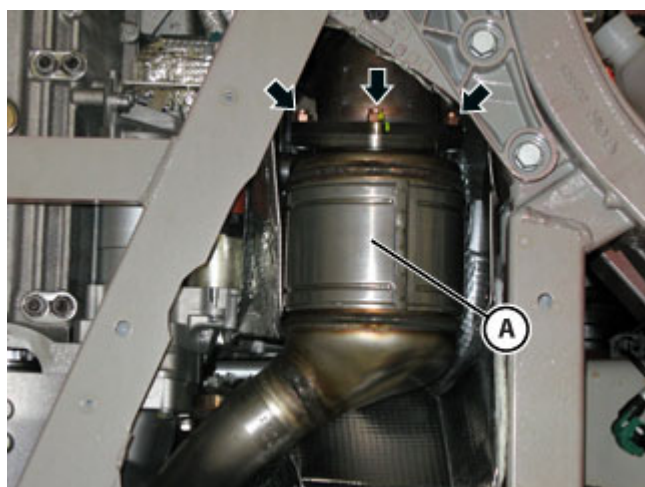


- Undo the nuts indicated.
- Push the catalytic converter **(A)** towards the rear of the vehicle to disconnect it from the exhaust manifold.
- Ease out the catalytic converter **(A)** from below, replacing the relative metal gasket.

Refitting the catalytic converters



ng torque		Nm	Class
			
Tightening torque		Nm	Class
Fastening the catalytic converters	Nut (pretightening)	15 Nm	B
	Nut	25 Nm	B
	Screw	25 Nm	B
	Nut	25 Nm	B

Right hand catalytic converter

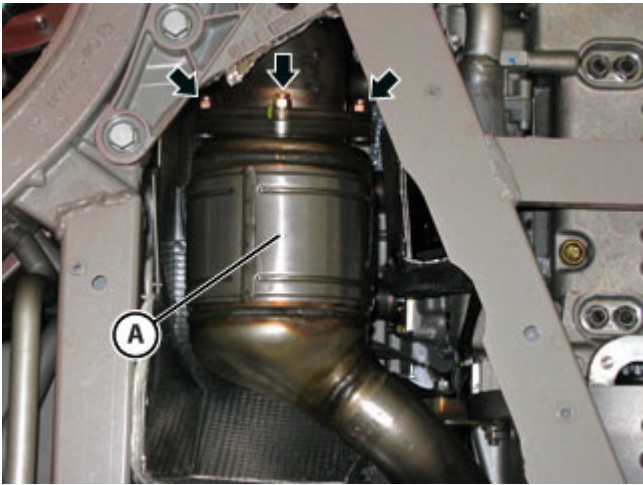

- Install the catalytic converter (A) from underneath, installing the relative new metal gasket.
- Push the catalytic converter (A) towards the front of the vehicle to connect it to the exhaust manifold.
- Tighten the nuts indicated.


		
Tightening torque	Nm	Class
Nut (pretightening)	15 Nm	B
Nut	25 Nm	B



- Tighten the indicated nut.

		
Tightening torque	Nm	Class
Nut	25 Nm	B

Left hand catalytic converter

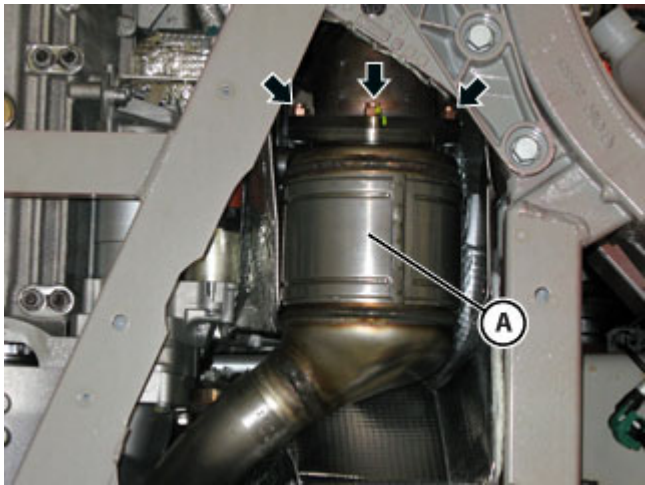

- Install the catalytic converter **(A)** from underneath, installing the relative new metal gasket.
- Push the catalytic converter **(A)** towards the front of the vehicle to connect it to the exhaust manifold.
- Tighten the nuts indicated.

		
Tightening torque	Nm	Class
Nut (pretightening)	15 Nm	B
Nut	25 Nm	B



- Tighten the indicated nut.

		
Tightening torque	Nm	Class
Nut	25 Nm	B

- Refit the central exhaust extensions ( B7.04).
- Replace the oxygen sensors ( A3.11).
-  Refit the oxygen sensors on the catalytic converters.
- Refit the flat undertray sections ( E3.13).
-  Refit the central flat undertray section.