



GTC4Lusso USA - Exhaust extensions - Latest Update: 2021-01-26

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.

Copyright by Ferrari S.p.A. - P.IVA 00159560366

B7.04 Exhaust extensions

Removing the central exhaust extensions




Never reuse exhaust system clamps and gaskets that have been subjected to operating temperature. Always replace with new components.


Only new exhaust system clamps and gaskets may be removed and refitted for adjustment purposes during initial installation.

- Remove the flat undertray sections ( E3.13).
-  Remove the central and rear flat undertray sections.


- Apply **AREXONS SVITOL TECHNIK SILIKON SPRAY** to the joints between the components of the exhaust system to be removed, leaving the product to act for a few minutes.

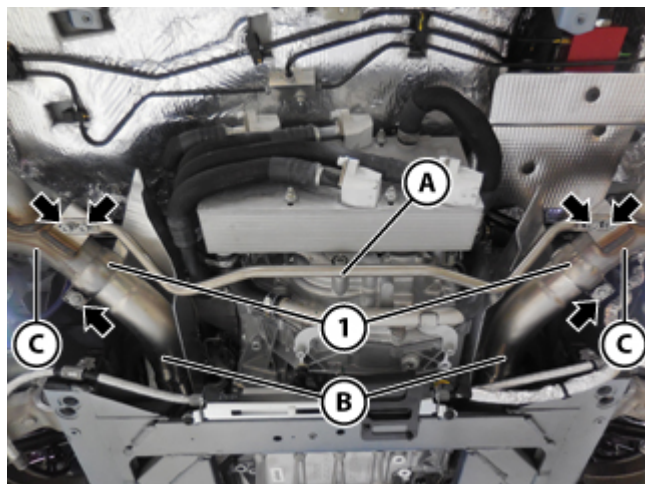


- Remove the crosspiece (**A**), undoing the indicated screws.
- Loosen the clamps (**1**), undoing the indicated screws.
- Separate the rear extensions (**B**) from the silencers (**C**).

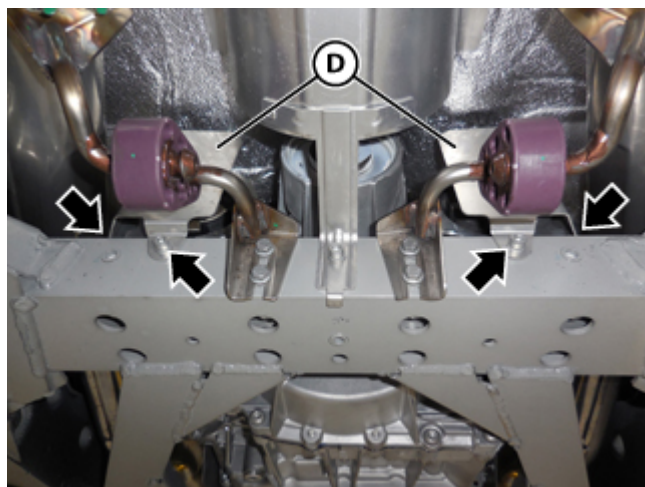


- Undo the screws indicated.
- Move the heat shields (D) aside so that they do not hinder the subsequent procedure.

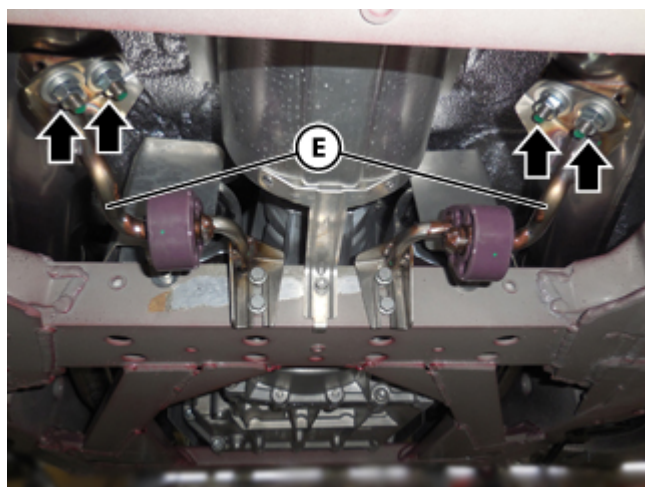

- Undo the nuts indicated.
- Remove the brackets for the mounting pins (E) from the rear extensions.

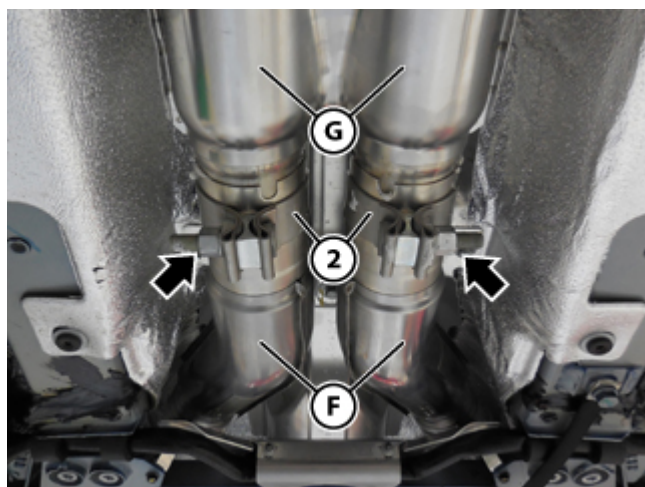

- Loosen the clamps (2) undoing the indicated nuts.
- Disconnect the rear extensions (F) from the central extensions (G), moving them toward the rear of the car.

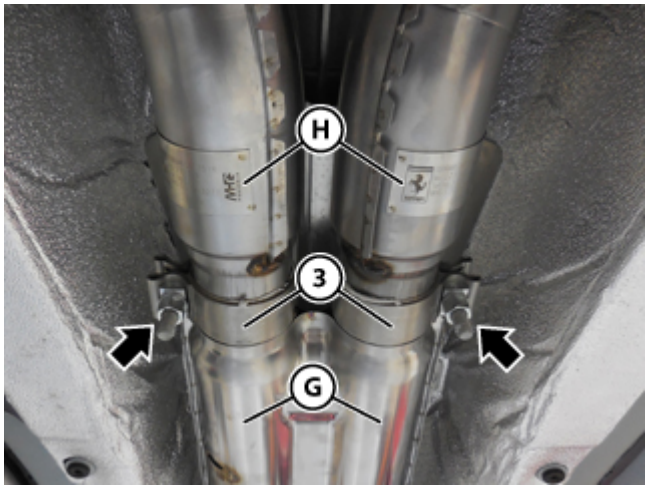


- Mark the position of the junction between the central extensions **(G)** and the catalytic converters **(H)**.
- Loosen the clamps **(3)** undoing the indicated nuts.
- Disconnect the central extensions **(G)** from the catalytic converters **(H)**, moving them towards the rear of the car.

- Remove the central extensions.


Refitting the central exhaust extensions

			
Tightening torque		Nm	Class
Fastening central exhaust pipe extensions	Clamp	43.4 Nm	B
	Clamp (pretightening)	25 Nm	B
Fastening rear exhaust pipe extensions	Nut	25 Nm	B
Fastening strut mount guard	Screw	9 Nm	B
Fastening exhaust silencers	Spherical clamp (pretightening)	25 Nm	B
	Spherical clamp	35 Nm	B
	Nut	10 Nm	B
Fastening exhaust silencer crosspiece	Screw	25 Nm	B

 Never reuse exhaust system clamps and gaskets that have been subjected to operating temperature. Always replace with new components.
Only new exhaust system clamps and gaskets may be removed and refitted for adjustment purposes during initial installation.

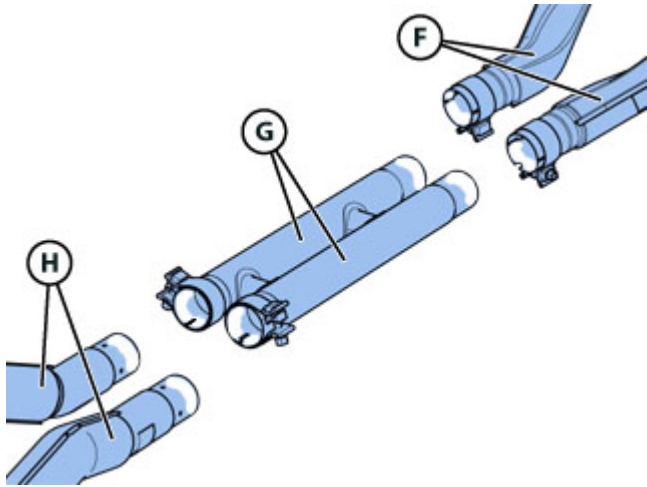


- Apply an even layer approximately **15 mm** wide of **HOLTS FIREGUM sealant paste** on the contact surfaces of the joint between the central extensions (**G**) and the rear extensions (**F**), and on the contact surfaces of the joint between the central extensions (**G**) and the catalytic converters (**H**), filling the notches.

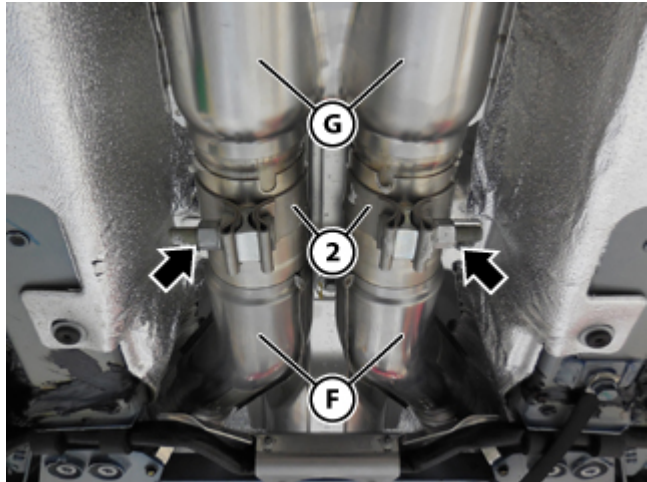

- Connect the rear extensions (**F**) to the centre extensions (**G**), pushing them in as far as the reference markings on the centre extensions.
- Orient the new clamps (**2**) correctly and fasten by provisionally tightening the indicated nuts.

		
Tightening torque	Nm	Class
Clamp (pretightening)	25 Nm	B

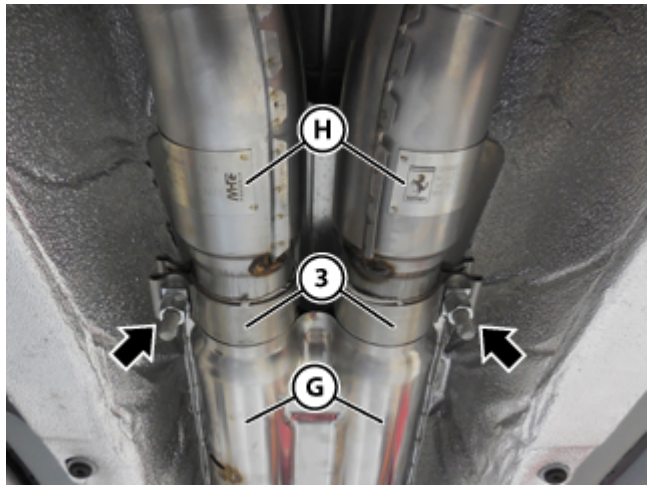


- Connect the centre extensions (**G**) to the catalytic converters (**H**), pushing them in as far as the reference markings on the catalytic converters.
- Orient the new clamps (**3**) correctly and fasten by pre-tightening the indicated nuts.

		
Tightening torque	Nm	Class
Clamp (pretightening)	25 Nm	B


- Definitively tighten all the clamps provisionally tightened previously.

		
Tightening torque	Nm	Class
Clamp	43.4 Nm	B

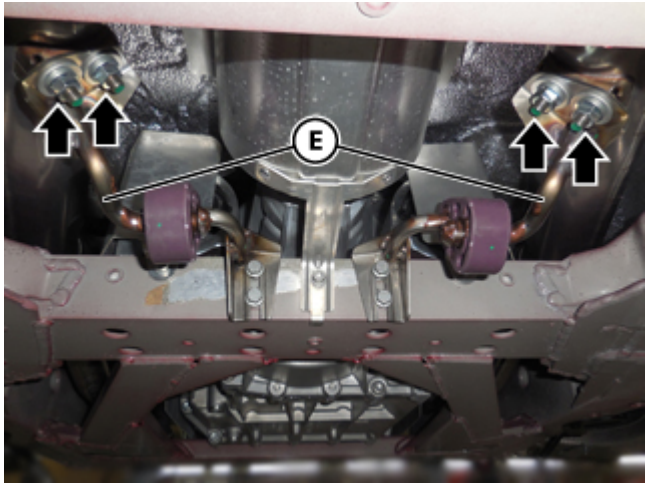


- Fit the brackets for the mounting pins **(E)** on the rear extensions.
- Tighten the nuts indicated.

		
Tightening torque	Nm	Class
Nut	25 Nm	B

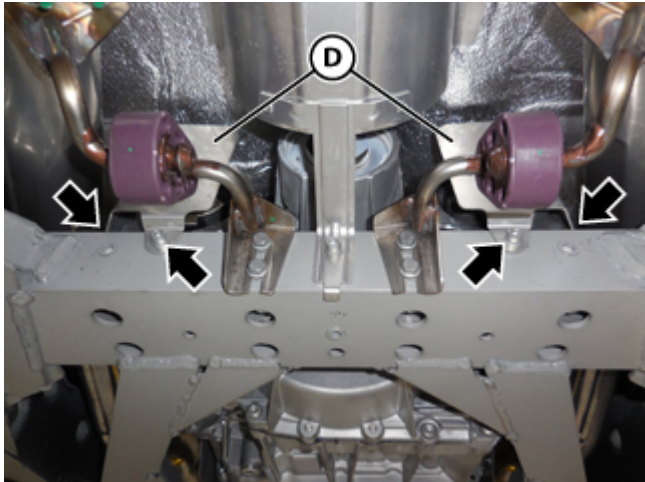

- Fit the heat shields **(D)**.
- Tighten the screws indicated.

		
Tightening torque	Nm	Class
Screw	9 Nm	B

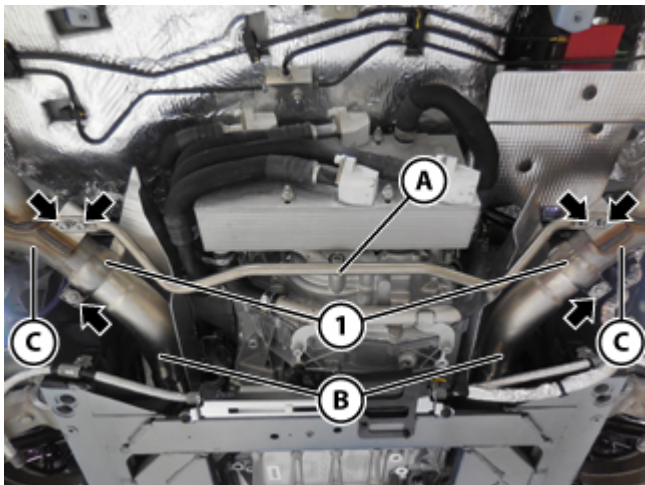

- Align the rear extensions **(B)** with the silencers **(C)**.
- Tighten the clamps **(1)** by fastening the indicated screws.

		
Tightening torque	Nm	Class
Spherical clamp (pretightening)	25 Nm	B
Spherical clamp	35 Nm	B


- Fit the crosspiece **(A)**, tightening the indicated screws.

		
Tightening torque	Nm	Class
Screw	25 Nm	B

➤ Refit the flat undertray sections ( E3.13).


Removing the rear exhaust extensions

➤ Remove the complete rear removable subframe (🔧 E2.03).

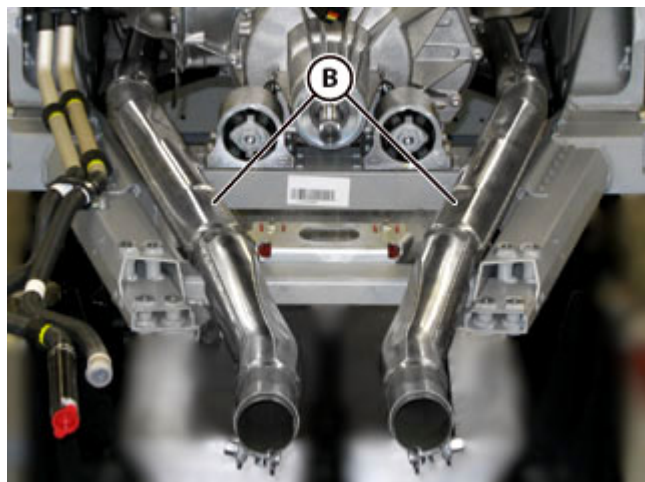

- Remove the rear exhaust extensions **(B)**, pulling towards the front of the vehicle.

Refitting the rear exhaust extensions

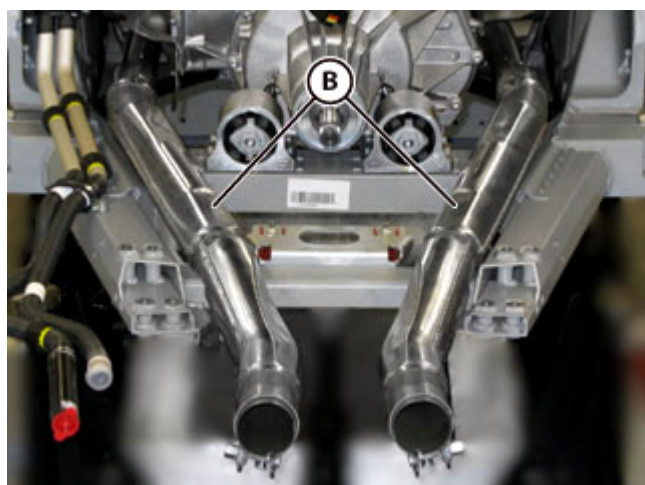

- Fit the rear exhaust extensions **(B)**, installing towards the rear of the vehicle.

➤ Refit the complete rear removable subframe (🔧 E2.03).