



GTC4Lusso USA - Silencers - Latest Update: 2021-01-26

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.

Copyright by Ferrari S.p.A. - P.IVA 00159560366

B7.05 Silencers

Removing the silencers




Never reuse exhaust system clamps and gaskets that have been subjected to operating temperature. Always replace with new components.


Only new exhaust system clamps and gaskets may be removed and refitted for adjustment purposes during initial installation.

- Remove the flat undertray sections ( E3.13).
 -  Remove the rear flat undertray section.
- Remove the rear wheelhouses ( E3.05).
 -  Remove the rear sections of the rear wheelhouses.


Right hand silencer

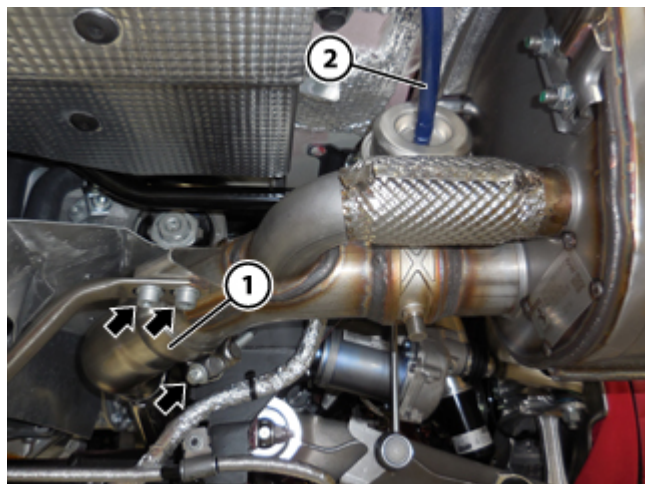

- Undo the screws indicated.
- Loosen the clamp (1) by undoing the indicated screw.
- Disconnect the pipe (2).

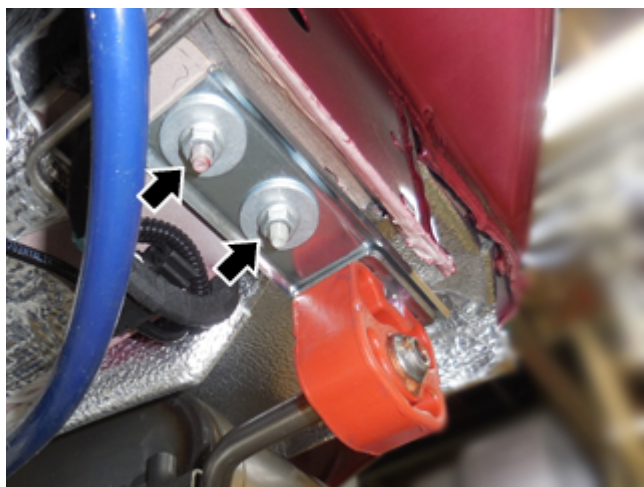


- Undo the nuts indicated.

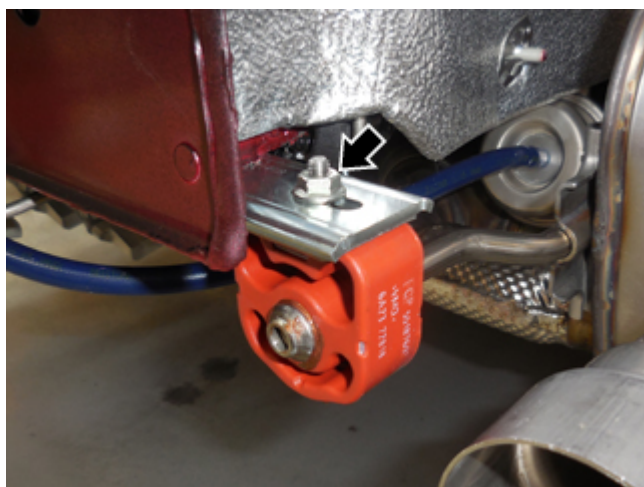


- Undo the indicated nut.

- Remove the silencer via the wheel bay.


Left hand silencer

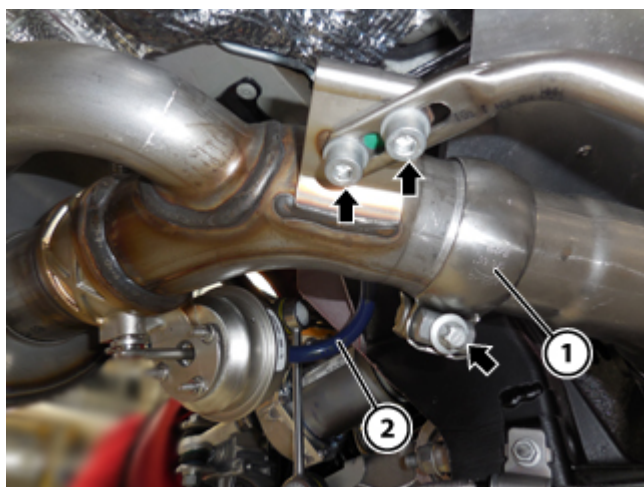

- Undo the screws indicated.
- Loosen the clamp (1) by undoing the indicated screw.
- Disconnect the pipe (2).

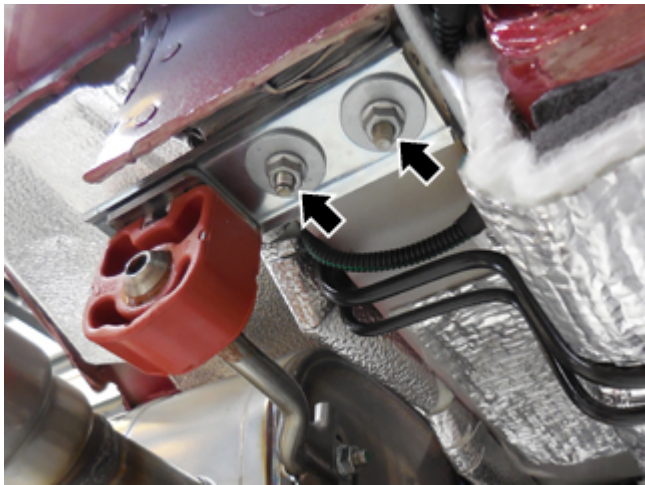

- Undo the nuts indicated.

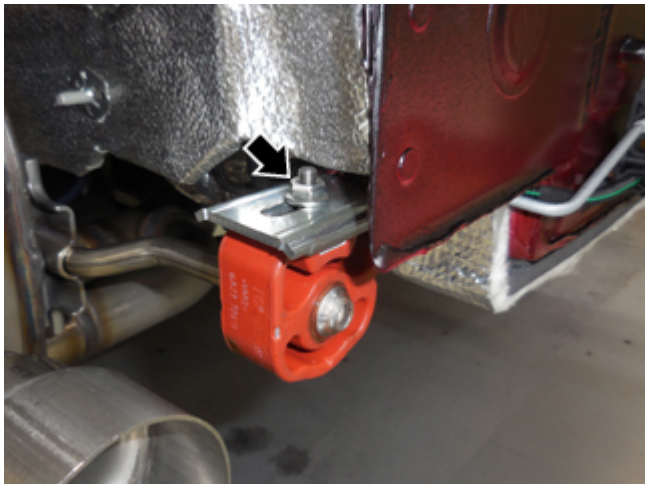

- Undo the indicated nut.

- Remove the silencer via the wheel bay.

Refitting the silencers

			
Tightening torque		Nm	Class
Fastening exhaust silencers	Spherical clamp (pretightening)	25 Nm	B
	Spherical clamp	35 Nm	B
	Nut	10 Nm	B
Fastening rear bushing mounting brackets	Nut	10 Nm	B
Fastening exhaust silencer crosspiece	Screw	25 Nm	B



Never reuse exhaust system clamps and gaskets that have been subjected to operating temperature. Always replace with new components.
Only new exhaust system clamps and gaskets may be removed and refitted for adjustment purposes during initial installation.


Right hand silencer

- Fit the silencer, inserting via the wheel bay.




- Tighten the indicated nut.

		
Tightening torque	Nm	Class
Nut	10 Nm	B

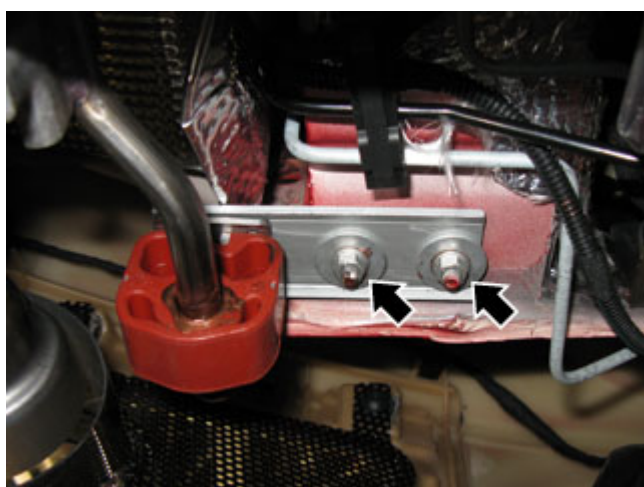

- Tighten the nuts indicated.

		
Tightening torque	Nm	Class
Nut	10 Nm	B

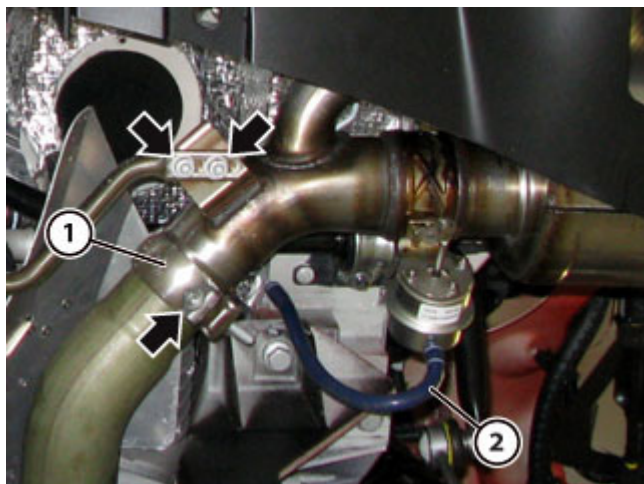

- Connect the pipe (2).
- Fit and tighten a new clamp (1), tightening the respective screw indicated.

		
Tightening torque	Nm	Class
Spherical clamp (pretightening)	25 Nm	B
Spherical clamp	35 Nm	B

- Tighten the screws indicated.

		
Tightening torque	Nm	Class
Screw	25 Nm	B


Left hand silencer

- Fit the silencer, inserting via the wheel bay.




- Tighten the indicated nut.

		
Tightening torque	Nm	Class
Nut	10 Nm	B

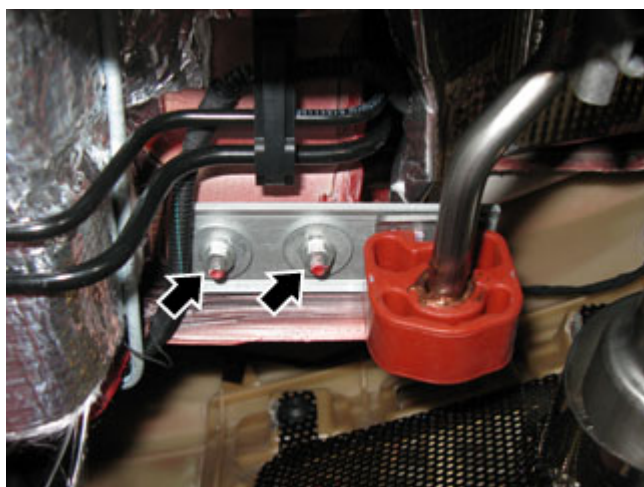

- Tighten the nuts indicated.

		
Tightening torque	Nm	Class
Nut	10 Nm	B

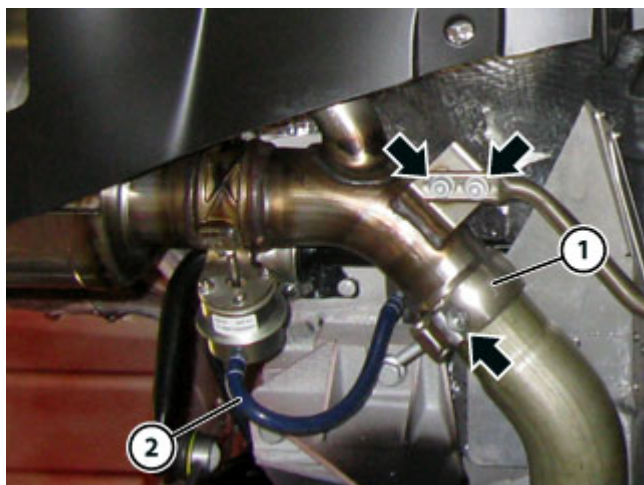

- Connect the pipe (2).
- Fit and tighten a new clamp (1), tightening the respective screw indicated.

		
Tightening torque	Nm	Class
Spherical clamp (pretightening)	25 Nm	B
Spherical clamp	35 Nm	B

- Tighten the screws indicated.

		
Tightening torque	Nm	Class
Screw	25 Nm	B

➤ Refit the rear wheelhouses ( E3.05).

 Refit the rear sections of the rear wheelhouses.

➤ Refit the flat undertray sections ( E3.13).

 Refit the rear flat undertray section.