



GTC4Lusso USA - Removing the complete DCT gearbox - Latest Update: 2021-01-26


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.

Copyright by Ferrari S.p.A. - P.IVA 00159560366


C2.02 Removing the complete DCT gearbox

Removing the DCT gearbox


- Remove the complete rear removable subframe (🔧 E2.03).
- Remove the single oil heat exchanger (🔧 C2.04).
- Remove the rear axle shafts (🔧 C5.01).
- Separate the axle shaft flange from the gearbox flange.

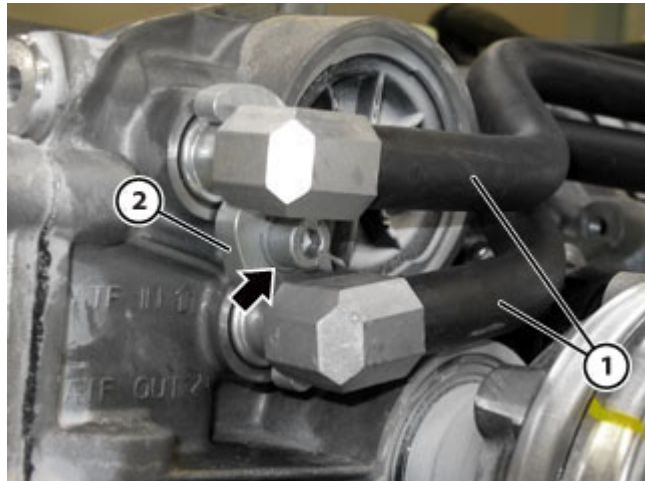


- Using a suitable degreaser, clean the area around the ATF pipe connections (1) thoroughly.
- Undo the indicated screw.
- Remove the fork (2).
- Disconnect the ATF pipes (1).
- Plug the ATF pipe unions (1) on the gearbox immediately.

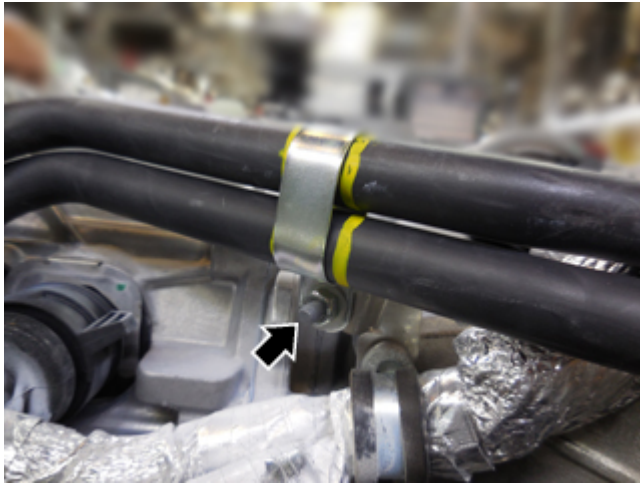


- Undo the indicated nut.

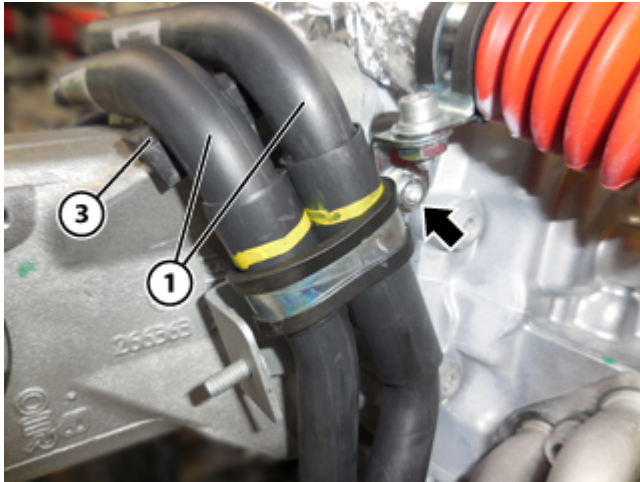


- Undo the indicated nut.
- Remove the ATF pipes (1), retrieving the shim (3).

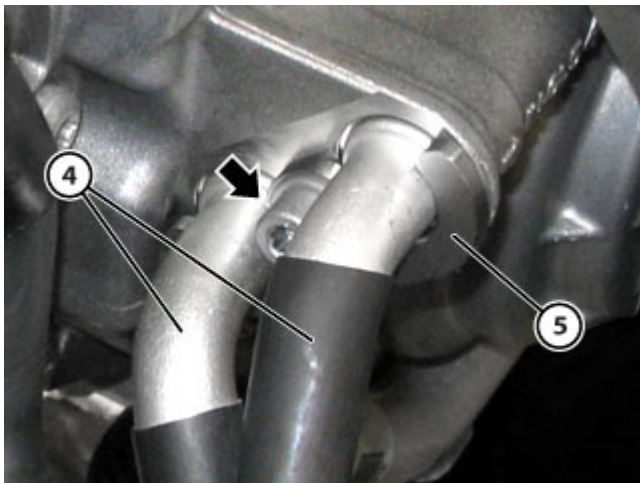

- Using a suitable degreaser, clean the area around the GL pipe connections (4) thoroughly.
- Undo the indicated screw.
- Remove the fork (5).
- Disconnect the GL pipes (4).
- Plug the GL pipe unions (4) on the gearbox immediately.

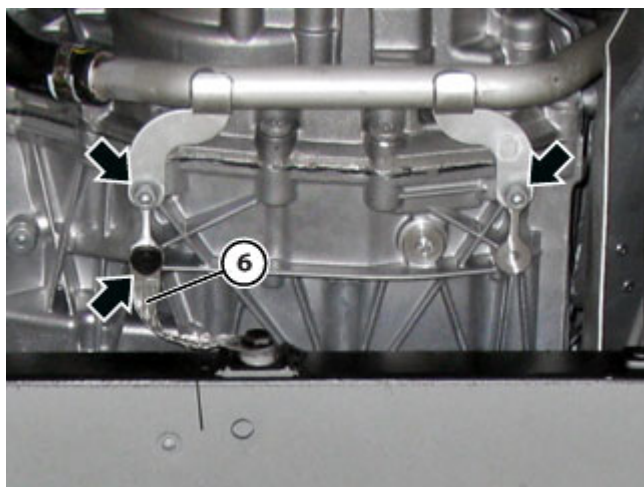


- Disconnect the ground braid (6) undoing the respective screw indicated.
- Undo the screws indicated.

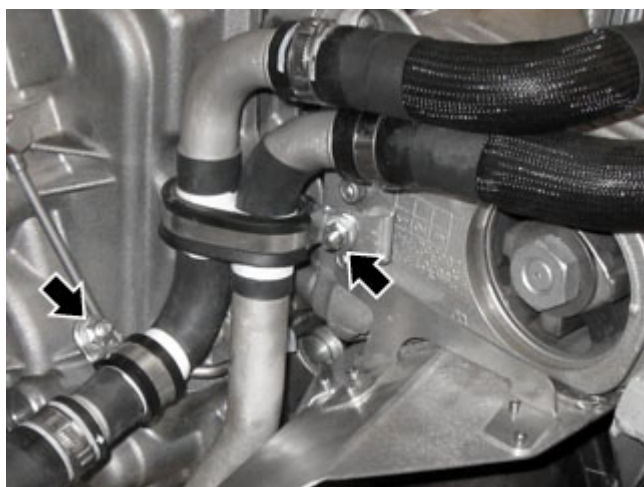


- Undo the nuts indicated.




- Undo the screws indicated.

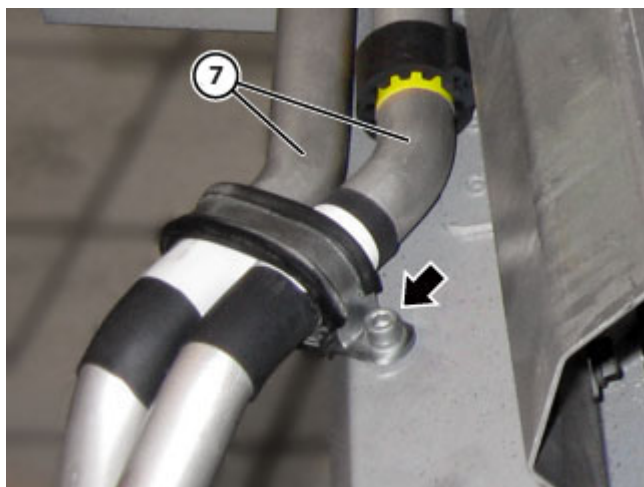


- Undo the indicated screw.
- Remove the pipes (7).

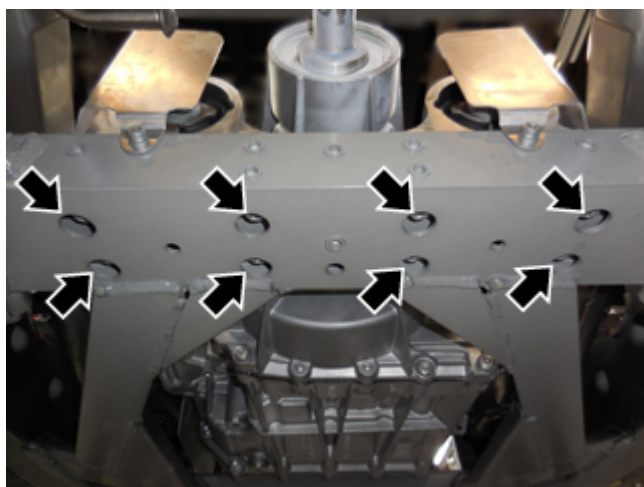

- Undo the screws indicated.

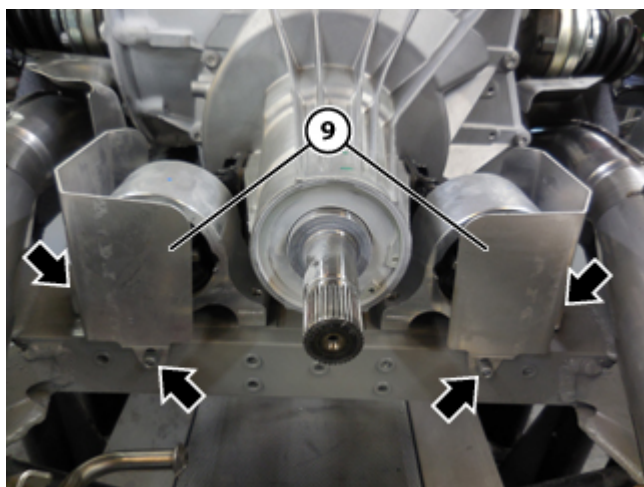


- Undo the nuts indicated.
- Remove the shields (9).

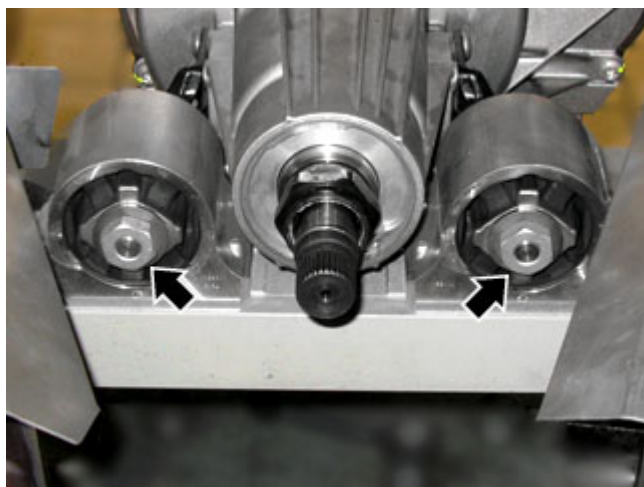


- Undo the nuts indicated.



- Undo the indicated nut.
- i* Perform the procedure on both sides of the gearbox.

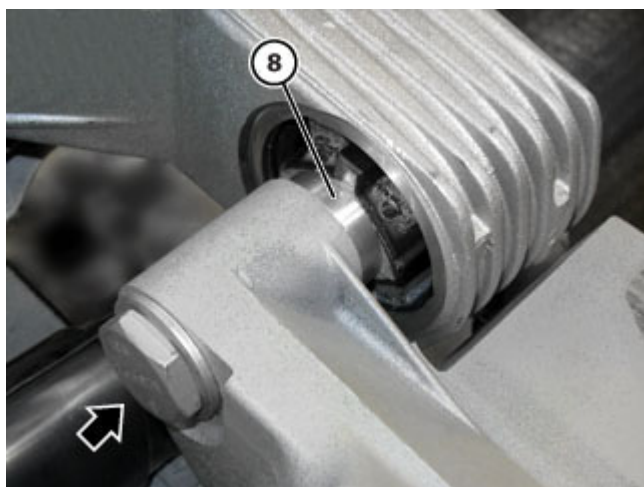


- Undo the indicated pin, retrieving the shim (8).
- i* Perform the procedure on both sides of the gearbox.

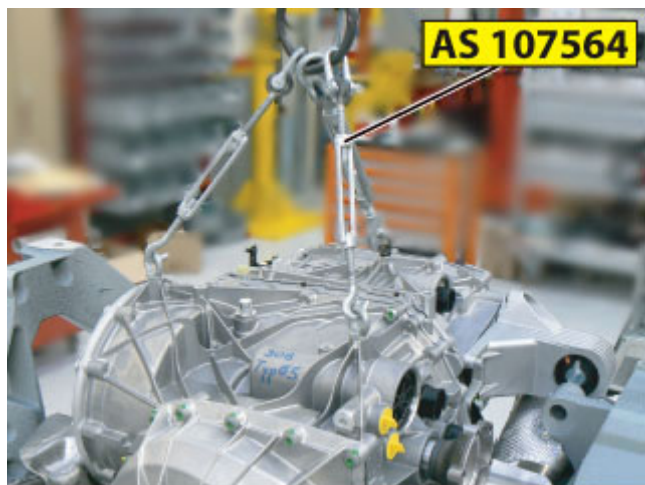

- Tighten the eye-bolts of the tool (**AS 107564**) into the respective holes on the gearbox.
- Fasten the tool (**AS 107564**) to the respective eye-bolts.
- Attach a mobile hydraulic jack to the tool (**AS 107564**).
- With the mobile hydraulic jack attached to the tool (**AS 107564**), lift the gearbox from the respective mounting subframe and set down in a suitable place.


Removing heat shields and DCT gearbox struts

Axle shaft heat shields

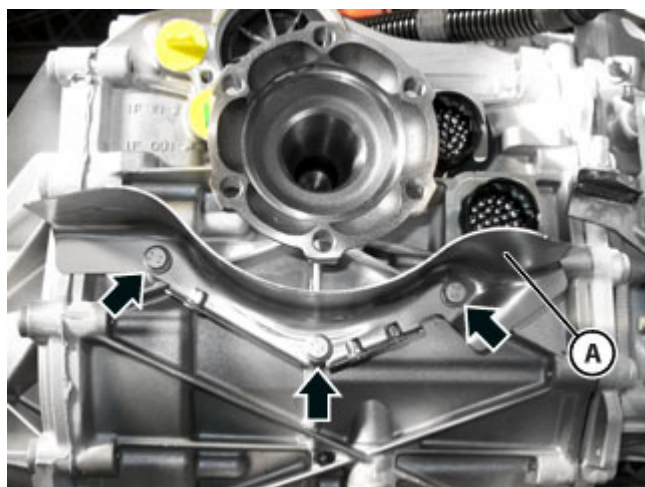

Heat shields for LH axle shaft


- Undo the screws indicated.
- Remove the heat shield (**A**).

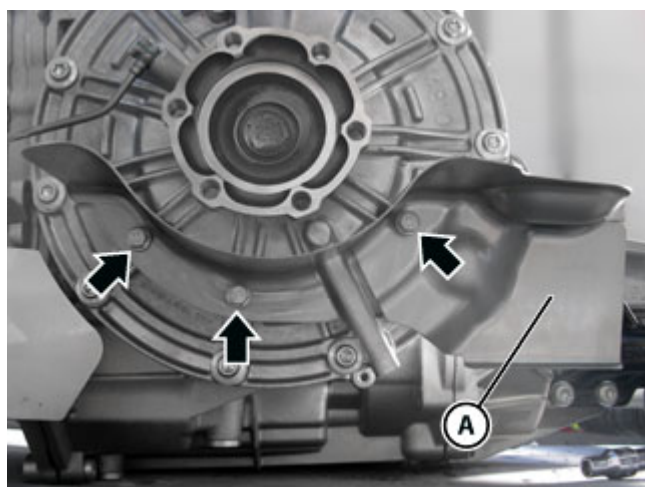

Heat shields for RH axle shaft


- Undo the screws indicated.
- Remove the heat shield (**A**).

Rear strut heat shields

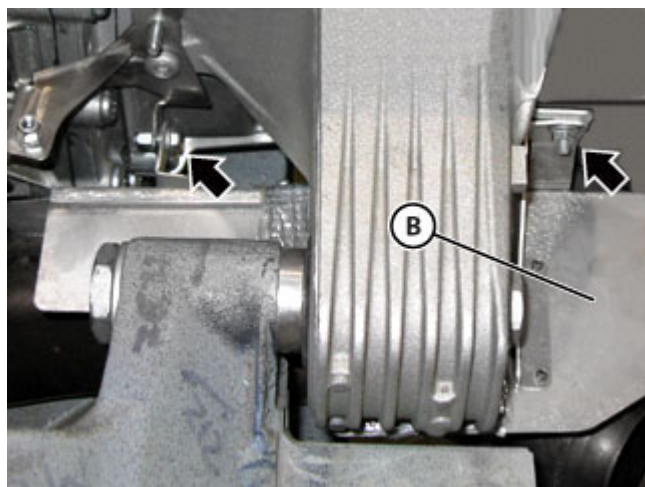

Heat shield for LH rear strut


- Undo the indicated screw.
- Undo the indicated nut.
- Remove the heat shield (B).

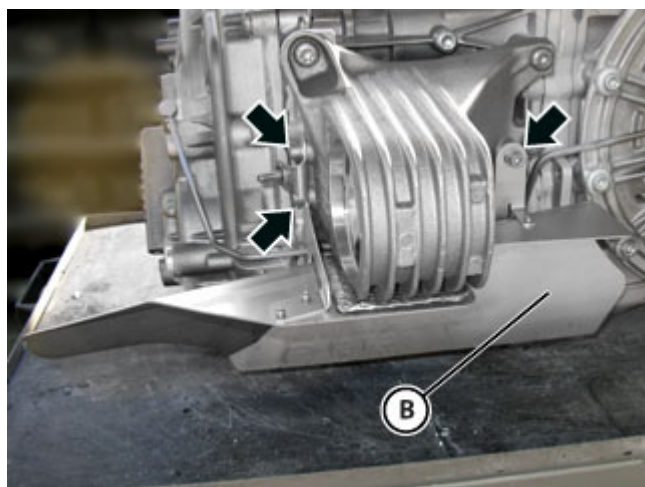

Heat shield for RH rear strut


- Undo the screws indicated.
- Undo the indicated nut.
- Remove the heat shield (B).

Front struts

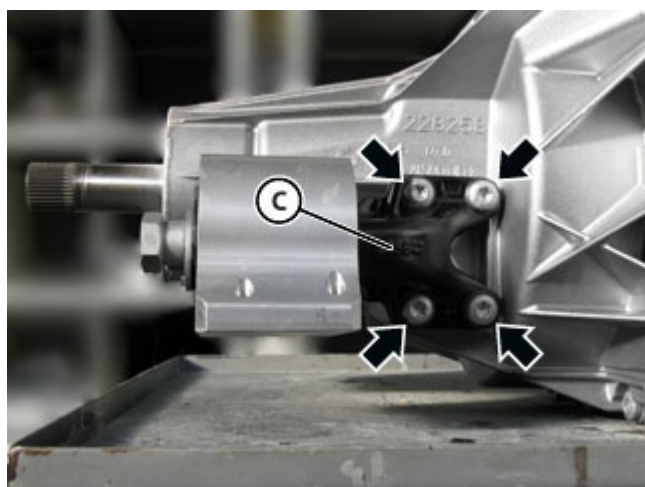

Front left hand strut


- Undo the screws indicated.
- Remove the front strut (C).

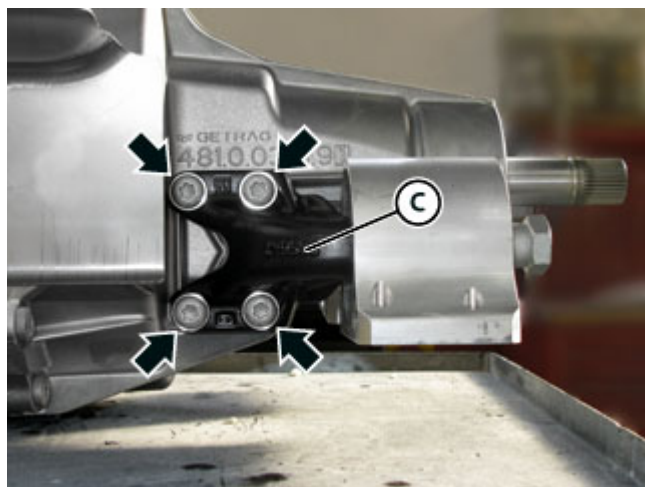

Front right hand strut


- Undo the screws indicated.
- Remove the front strut (C).

Rear struts

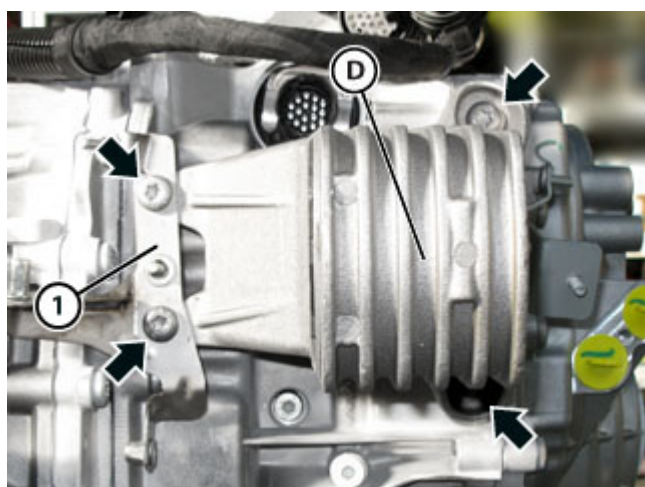

Rear left hand strut

- Undo the screws indicated.
- Remove the bracket (1).
- Remove the rear strut (D).

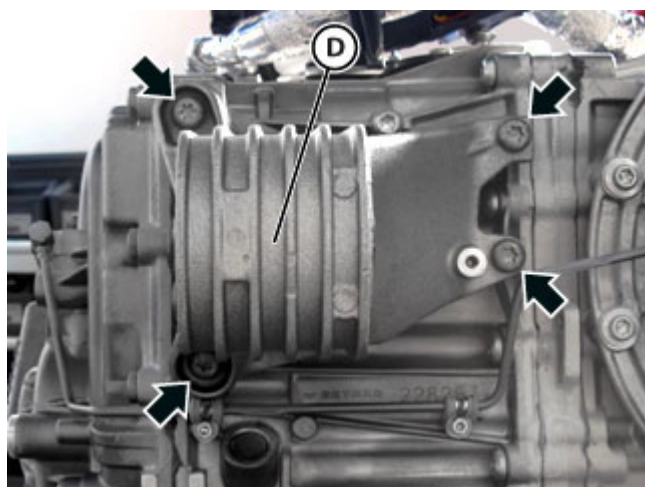

RH rear strut

- Undo the screws indicated.
- Remove the rear strut (D).