



GTC4Lusso USA - Refitting the complete DCT gearbox - Latest Update: 2021-01-26

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.


Copyright by Ferrari S.p.A. - P.IVA 00159560366

C2.03 Refitting the complete DCT gearbox

Refitting the heat shields and the DCT gearbox struts

			
Tightening torque		Nm	Class
Fastening DCT gearbox mounting struts	Screw	30 Nm	A
	Screw	30 Nm	A
Fastening axle shaft heat shield	Screw	9 Nm	B


Rear struts

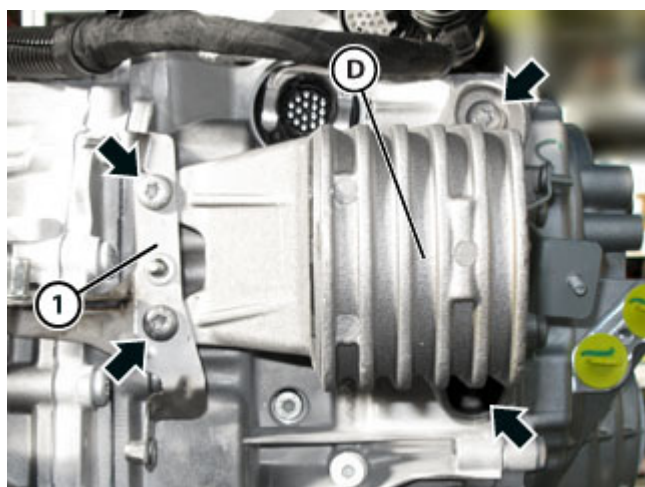

Rear left hand strut

- Fit the rear strut (**D**).
- Fit the bracket (**1**).
- Apply **AREXONS SYSTEM 52A43 - MEDIUM STRENGTH THREAD LOCK** over the entire threads of the indicated screws.
- Tighten the indicated screws in the sequence given.

		
Tightening torque	Nm	Class
Screw	30 Nm	A

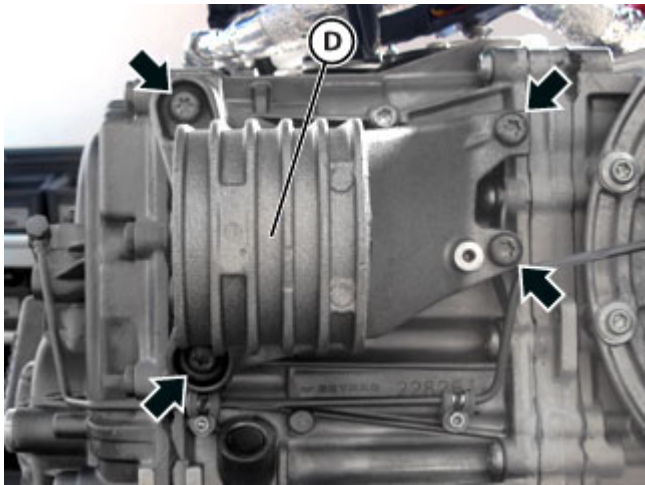


RH rear strut

- Fit the rear strut (D).
- Apply **AREXONS SYSTEM 52A43 - MEDIUM STRENGTH THREAD LOCK** over the entire threads of the indicated screws.
- Tighten the indicated screws in the sequence given.

Tightening torque	Nm	Class
Screw	30 Nm	A


Front struts

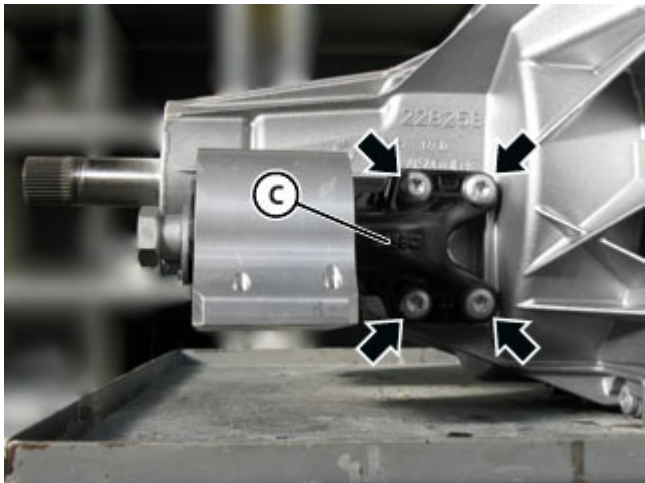

Front left hand strut

- Fit the front strut (C).
- Apply **AREXONS SYSTEM 52A43 - MEDIUM STRENGTH THREAD LOCK** over the entire threads of the indicated screws.
- Tighten the indicated screws in the sequence given.

Tightening torque	Nm	Class
Screw	30 Nm	A

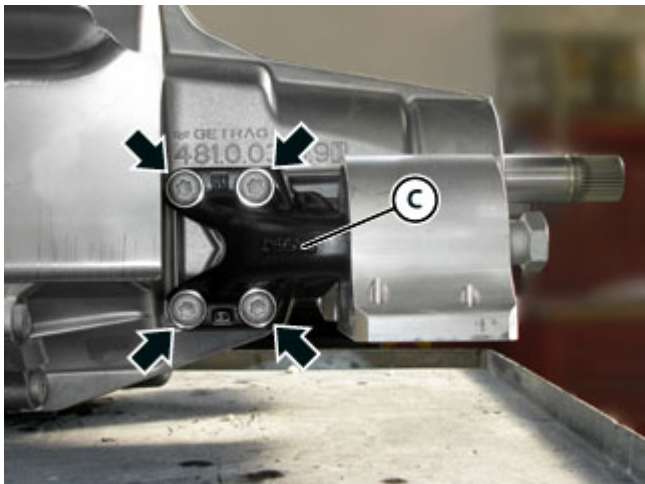


Front right hand strut

- Fit the front strut (C).
- Apply **AREXONS SYSTEM 52A43 - MEDIUM STRENGTH THREAD LOCK** over the entire threads of the indicated screws.
- Tighten the indicated screws in the sequence given.


Tightening torque	Nm	Class
Screw	30 Nm	A

Rear strut heat shields

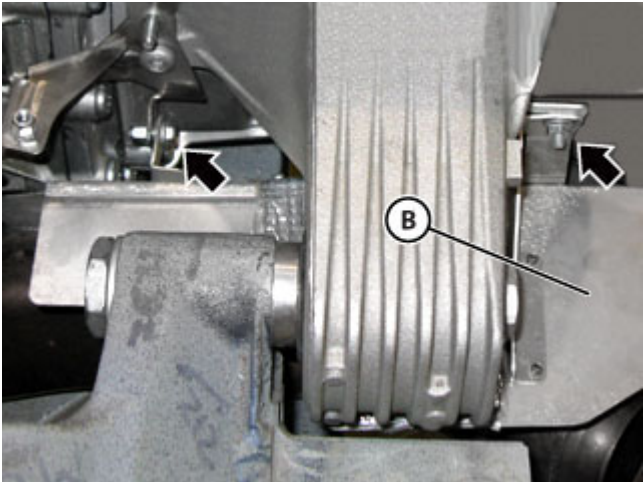

Heat shield for LH strut


- Fit the heat shield (B).
- Tighten the indicated screw.
- Tighten the indicated nut.

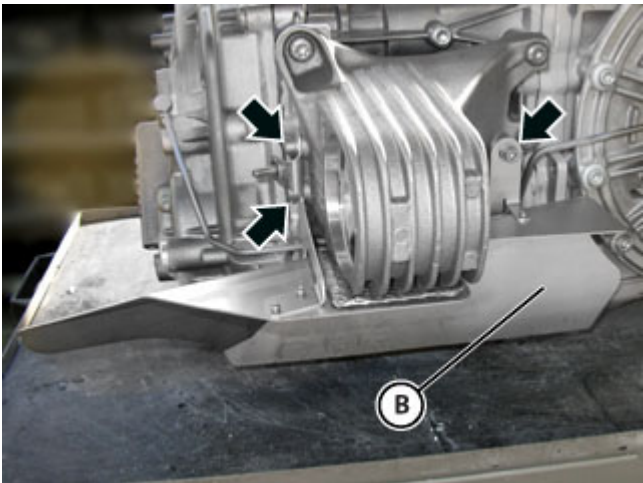

Heat shield for RH strut

- Fit the heat shield (B).
- Tighten the screws indicated.
- Tighten the indicated nut.


Axle shaft heat shields

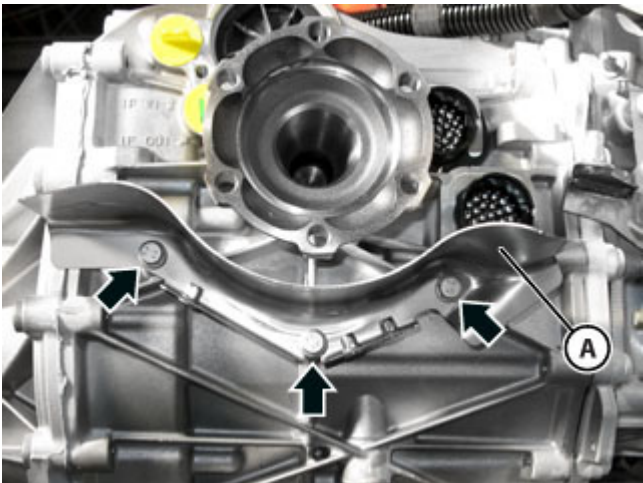

Heat shield for LH axle shaft

- Fit the heat shield (A).
- Tighten the screws indicated.

		
Tightening torque	Nm	Class
Screw	9 Nm	B

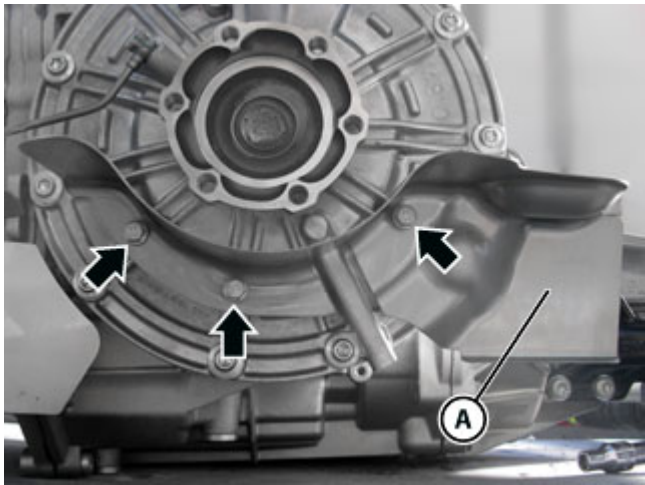


Heat shield for RH axle shaft

- Fit the heat shield (A).
- Tighten the screws indicated.


		
Tightening torque	Nm	Class
Screw	9 Nm	B

Refitting the DCT gearbox

			
Tightening torque		Nm	Class
Fastening the rear gearbox mounting struts to the rear removable subframe	Pin	200 Nm	A
	Nut (pre-tightening)	9 Nm	B
	Nut	70 Nm	B
Fastening front gearbox bushes to rear removable subframe	Screw (pre-tightening)	9 Nm	B
	Screw	25 Nm	A
Fastening front gearbox mounting struts to front gearbox bushes	Nut (pre-tightening)	9 Nm	B
	Nut	70 Nm	B
Fastening strut mount guard	Screw	9 Nm	B
Fastening single oil heat exchanger water delivery and return pipe to gearbox	Screw	9 Nm	B
	Nut	9 Nm	B
Fastening gearbox-chassis earth braid	Screw	18 Nm	B
Fastening ATF fluid delivery and return pipes to gearbox	Screw	20 Nm	A
	Screw	20 Nm	B
	Nut	9 Nm	B
Fastening GL fluid delivery and return pipes to gearbox	Screw	20 Nm	A

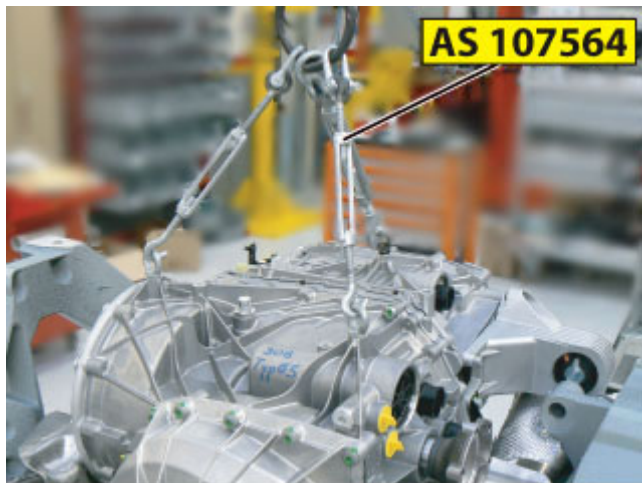

- Tighten the eye-bolts of the tool (**AS 107564**) into the respective holes on the gearbox.
- Fasten the tool (**AS 107564**) to the respective eye-bolts.
- Attach a mobile hydraulic jack to the tool (**AS 107564**).
- With the mobile hydraulic jack attached to the tool (**AS 107564**), lift the gearbox and set it down on the respective rear removable subframe.

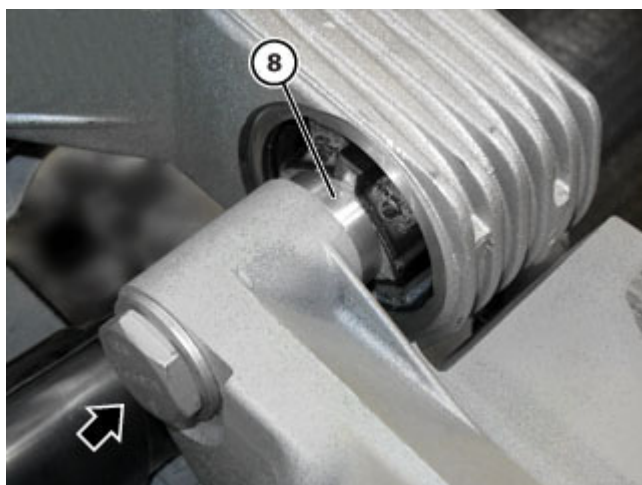


- Apply **AREXONS SYSTEM TG248 - ADHESIVE GREASE** over the entire thread of the indicated pin.
- Perform the procedure on both sides of the gearbox.
- Fit the shim (**8**) and tighten the indicated pin with the respective washer.
- Perform the procedure on both sides of the gearbox.
- Tighten the indicated pin.
- Perform the procedure on both sides of the gearbox.

		
Tightening torque	Nm	Class
Pin	200 Nm	A




- Hand-tighten the indicated nut, fitting the respective washer.
- Perform the procedure on both sides of the gearbox.

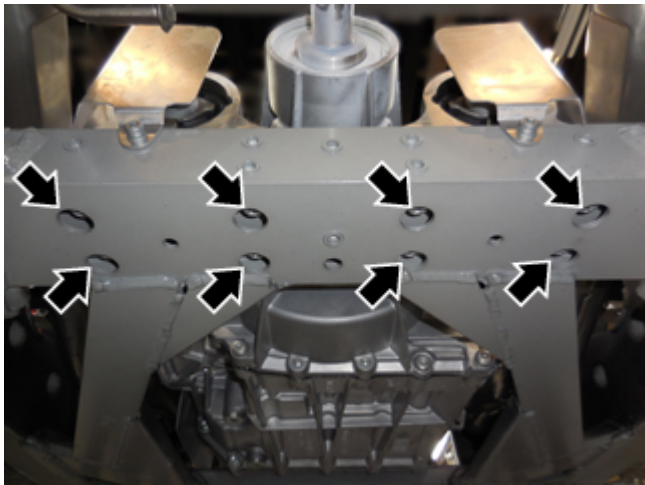


- Pre-tighten and definitively tighten the indicated screws.

		
Tightening torque	Nm	Class
Screw (pre-tightening)	9 Nm	B
Screw	25 Nm	A

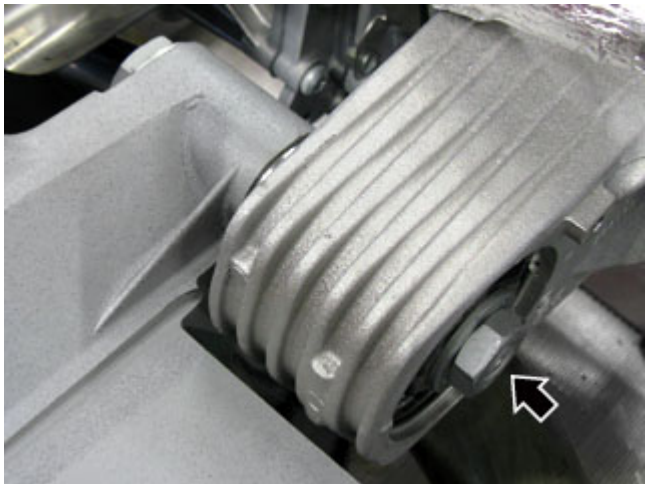


- Pre-tighten and definitively tighten the indicated nut.
- Perform the procedure on both sides of the gearbox.

		
Tightening torque	Nm	Class
Nut (pre-tightening)	9 Nm	B
Nut	70 Nm	B

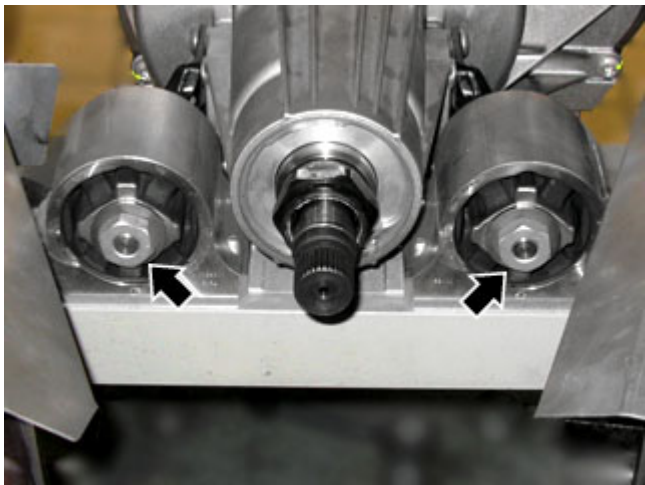


- Pre-tighten and definitively tighten the indicated nuts, fitting the respective washers.

		
Tightening torque	Nm	Class
Nut (pre-tightening)	9 Nm	B
Nut	70 Nm	B

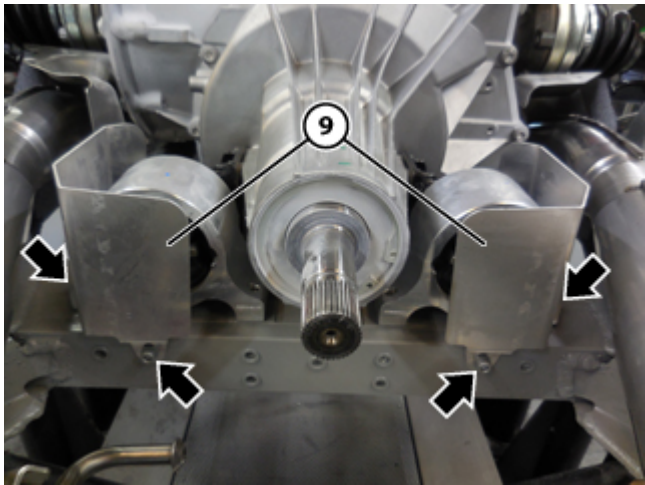

- Tighten the screws indicated.

		
Tightening torque	Nm	Class
Screw	9 Nm	B

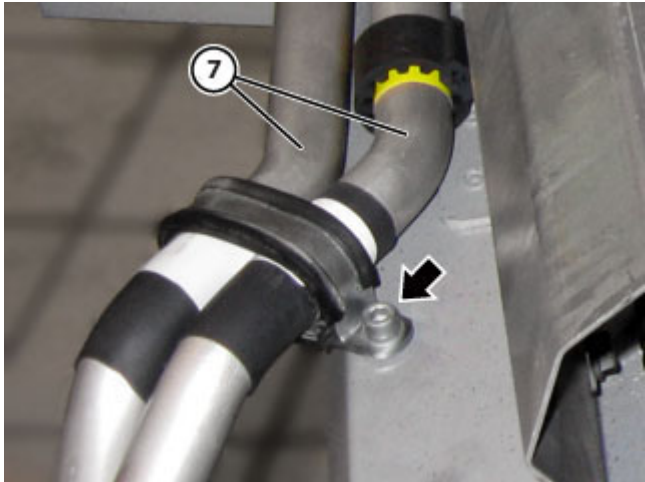


- Fit the pipes (7).
- Tighten the indicated screw, fitting the respective rubber lined bracket.

		
Tightening torque	Nm	Class
Screw	9 Nm	B




- Tighten the indicated screws, fitting the respective rubber lined brackets.

		
Tightening torque	Nm	Class
Screw	9 Nm	B

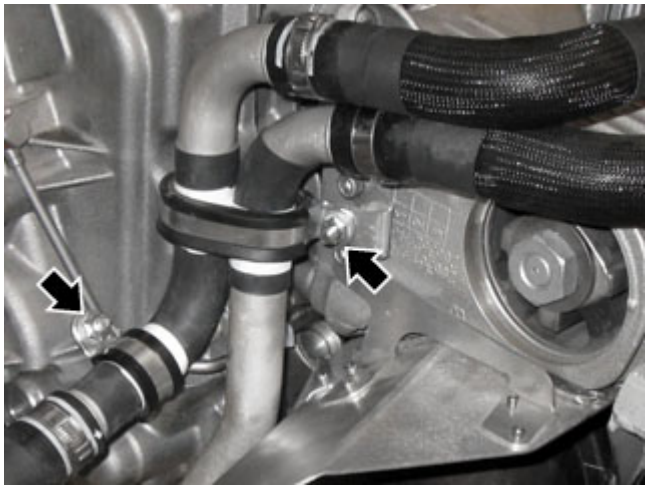

- Tighten the indicated nuts, fitting the respective rubber lined brackets.

		
Tightening torque	Nm	Class
Nut	9 Nm	B

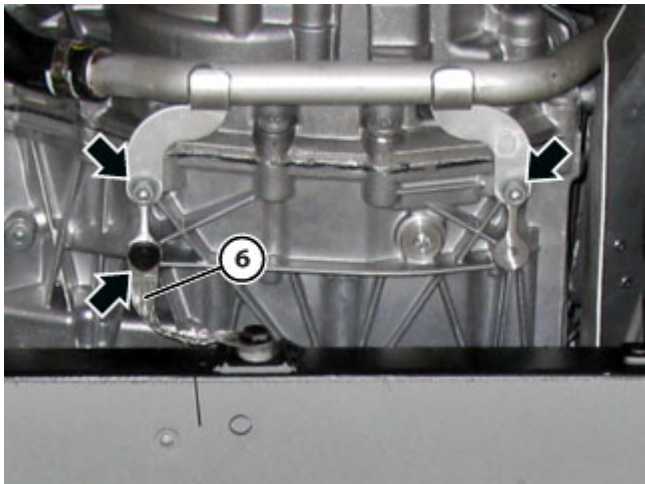


- Connect the ground braid (6), tightening the respective screw indicated.

		
Tightening torque	Nm	Class
Screw	18 Nm	B


- Tighten the screws indicated.

		
Tightening torque	Nm	Class
Screw	20 Nm	B

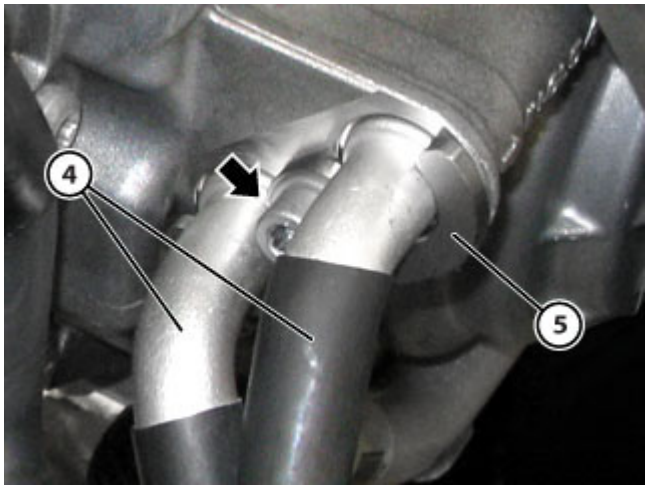


- Using a suitable degreaser, clean the area around the GL pipe connections thoroughly.
- Replace the O-rings of the GL pipes (4), lubricating the new components before installation.
- Connect the GL pipes (4).
- Fit the fork (5).
- Apply **AREXONS SYSTEM 52A43 - MEDIUM STRENGTH THREAD LOCK** to the entire thread of the indicated screw.
- Tighten the indicated screw.

		
Tightening torque	Nm	Class
Screw	20 Nm	A

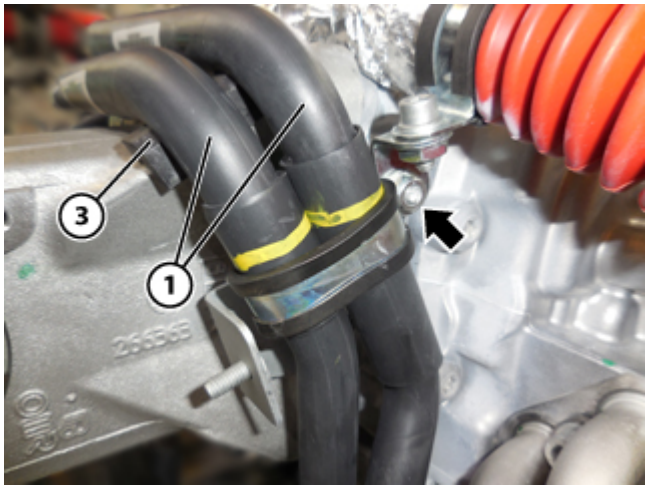


- Fit the shim (3).
- Fit the pipes (1).
- Tighten in the indicated nut, fitting the relative rubber lined bracket.

		
Tightening torque	Nm	Class
Nut	9 Nm	B

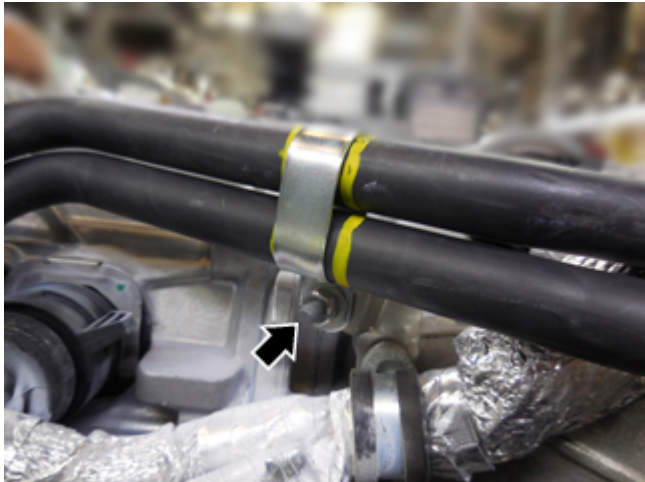

- Tighten in the indicated nut, fitting the relative rubber lined bracket.

		
Tightening torque	Nm	Class
Nut	9 Nm	B

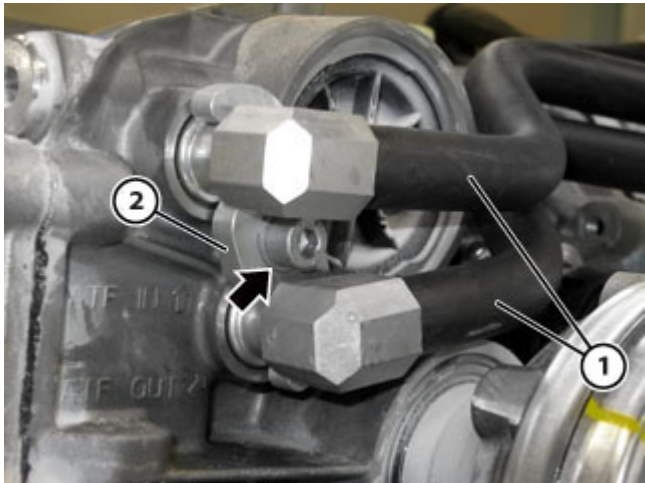

- Using a suitable degreaser, clean the area around the ATF pipe connections thoroughly.
- Replace the O-rings of the ATF pipes (1), lubricating the new components before installation.
- Connect the ATF pipes (1).
- Fit and fasten the fork (2).
- Apply **AREXONS SYSTEM 52A43 - MEDIUM STRENGTH THREAD LOCK** to the entire thread of the indicated screw.
- Tighten the indicated screw.

		
Tightening torque	Nm	Class
Screw	20 Nm	A

- Refit the rear axle shafts ( C5.01).
- Assemble the axle shaft flange with the gearbox flange.
- Refit the single oil heat exchanger ( C2.04).
- Refit the complete rear removable subframe ( E2.03).

