



GTC4Lusso USA - Single heat exchanger - Latest Update: 2021-01-26

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.

Copyright by Ferrari S.p.A. - P.IVA 00159560366

C2.04 Single heat exchanger

Removing the single oil heat exchanger



CAUTION


ALWAYS PERFORM THE OPERATIONS WITH COLD ENGINE AND EXHAUSTS.



After loosening or removal, the Caillau Visa hose clamps must be replaced with Mikalor worm drive hose clamps, following the instructions given in Technical Information 2054 of December 2012.

➤ Remove the flat undertray sections (🔧 E3.13).

➤ Remove the rear flat undertray section.

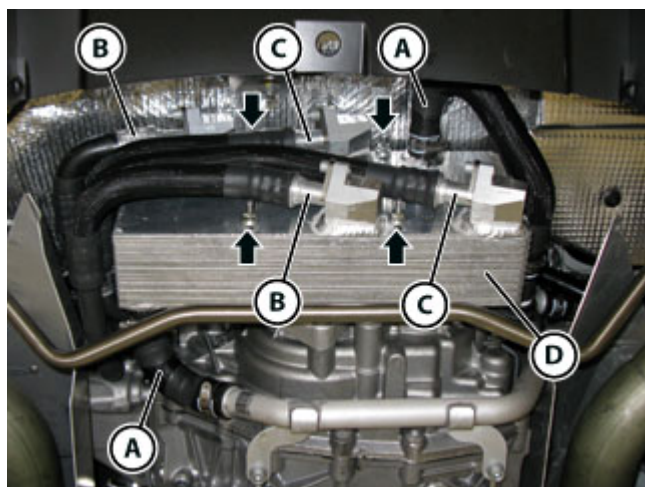

- Using a suitable degreaser that does not leave residue, clean the area where the pipes connect to the single oil heat exchanger.
- Place a container for collecting engine coolant under the single oil heat exchanger.



Pour the fluid drained from the system into a container and seal it. **DO NOT DISPOSE OF USED FLUID IN THE ENVIRONMENT.**

- Disconnect the pipes **(A)**, loosening the respective screw collars.
- Let the engine coolant drain completely.
- Clean off and dry any residue of engine coolant.
- Plug the pipes **(A)** and the respective unions on the single oil heat exchanger.
- Place a container for collecting clutch hydraulic system oil under the single oil heat exchanger.



Pour the oil drained from the system into a container and seal it. **DO NOT** dispose of used oil in the environment.

- Disconnect the pipes **(B)**, undoing the respective screws and retrieving the respective forks.
- Let the clutch hydraulic system oil drain completely.
- Clean off and dry and residue of clutch hydraulic system oil.
- Plug the pipes **(B)** and the respective unions on the single oil heat exchanger.
- Place a container for collecting gearbox gear oil under the single oil heat exchanger.



Pour the oil drained from the system into a container and seal it. **DO NOT** dispose of used oil in the environment.

- Disconnect the pipes **(C)**, undoing the respective screws and retrieving the respective forks.
- Let the gearbox gear oil drain completely.
- Clean off and dry any residue of gearbox gear oil.
- Plug the pipes **(C)** and the respective unions on the single oil heat exchanger.
- Undo the nuts indicated.
- Move the pipes out of the way.
- Remove the single oil heat exchanger **(D)** from the relative stud bolts.
- Remove the single oil heat exchanger **(D)**, tipping to facilitate removal.


Refitting the single oil heat exchanger

Tightening torque		Nm	Class
Fastening single oil heat exchanger to mounting subframe	Nut	9 Nm	B
Fastening gearbox gear oil pipes to single oil heat exchanger Products to use: AREXONS SYSTEM 52A43 - MEDIUM STRENGTH THREAD LOCK	Screw	8 Nm	B
Fastening clutch hydraulic system pipes to single oil heat exchanger Products to use: AREXONS SYSTEM 52A43 - MEDIUM STRENGTH THREAD LOCK	Screw	8 Nm	B

			
Tightening torque		Nm	Class
Fastening engine coolant pipes	Screw collar	4 Nm	B



After loosening or removal, the Caillau Visa hose clamps must be replaced with Mikalor worm drive hose clamps, following the instructions given in Technical Information 2054 of December 2012.

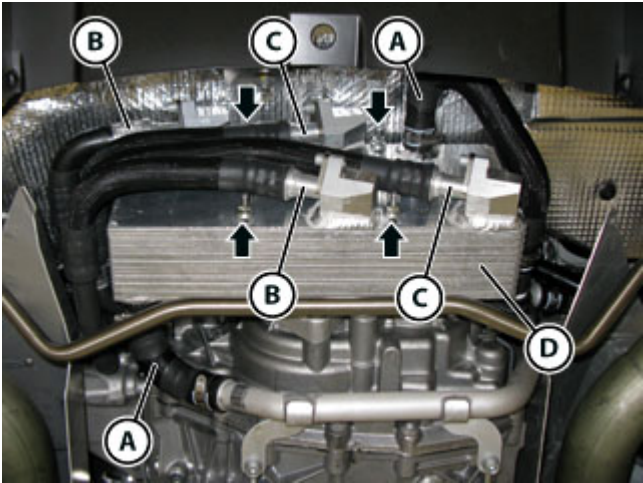

- Fit the single oil heat exchanger **(D)**, tipping to facilitate installation.
- Fit the single oil heat exchanger **(D)** on the relative stud bolts.
- Tighten the nuts indicated.

		
Tightening torque	Nm	Class
Nut	9 Nm	B

- Remove the caps from the pipes **(C)** and from the respective unions on the single oil heat exchanger.
- Connect the pipes **(C)**, replacing and lubricating the respective seals.
- Apply **AREXONS SYSTEM 52A43 - MEDIUM STRENGTH THREAD LOCK** to the threads of the screws fastening the pipe **(C)**.
- Fasten the pipes **(C)**, fitting the respective forks and tightening the respective screws.

		
Tightening torque	Nm	Class
Screw	8 Nm	B

- Remove the caps from the pipes **(B)** and from the respective unions on the single oil heat exchanger.
- Connect the pipes **(B)**, replacing and lubricating the respective seals.
- Apply **AREXONS SYSTEM 52A43 - MEDIUM STRENGTH THREAD LOCK** to the threads of the screws fastening the pipe **(C)**.
- Fasten the pipes **(B)**, fitting the respective forks and tightening the respective screws.

		
---	--	--

	ng torque	Nm	Class
Tightening torque		Nm	Class
Screw		8 Nm	B


- Remove the caps from the pipes **(A)** and from the respective unions on the single oil heat exchanger.
- Connect the pipes **(A)**, tightening the respective screw collars.

			
Tightening torque		Nm	Class
Screw collar		4 Nm	B

- Fill the engine coolant system ( [A3.07](#)).
- Check the level of the Shell SPIRAX S5 ATE 75W-90 DCT gearbox gear oil ( [A3.02](#)).
- Check the level of the Shell DCT-F3 hydraulic clutch system oil ( [A3.03](#)).
- Refit the flat undertray sections ( [E3.13](#)).
-  Refit the rear flat undertray section.

Removing the single oil heat exchanger mounting subframe


- Remove the single oil heat exchanger ( [C2.04](#)).

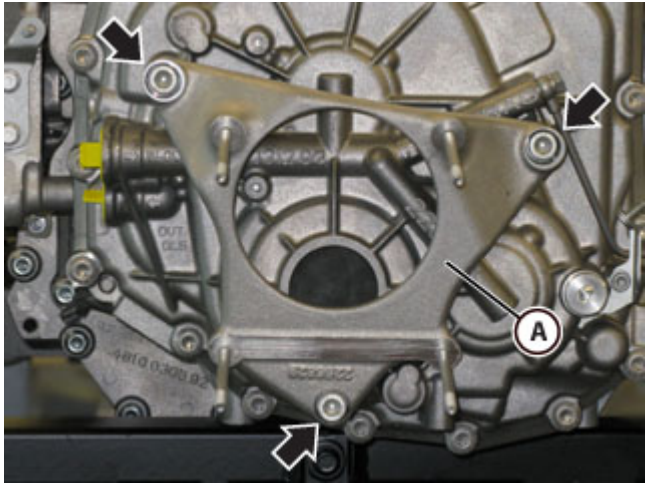

- Undo the screws indicated.
- Remove the subframe **(A)**.

Refitting the single oil heat exchanger mounting subframe

			
Tightening torque		Nm	Class
Fastening the single oil heat exchanger bracket	Screw	40 Nm	B

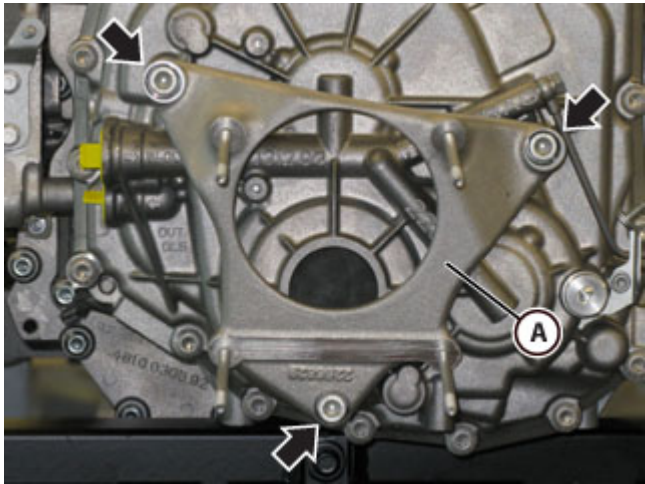

- Fit the subframe (A).
- Tighten the screws indicated.

		
Tightening torque	Nm	Class
Screw	40 Nm	B

➤ Refit the single oil heat exchanger ( C2.04).