



GTC4Lusso USA - Draining and filling the DCT gearbox clutch hydraulic system oil - Latest Update: 2021-01-26


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.
Copyright by Ferrari S.p.A. - P.IVA 00159560366

C3.02 Draining and filling the DCT gearbox clutch hydraulic system oil

Draining the gearbox clutch hydraulic system of SHELL DCT-F3 oil

 ALWAYS dispose of liquids correctly in accordance with applicable legislation.
Collect all liquids drained from the vehicle systems in appropriate airtight containers, then close the containers.


- Remove the flat undertray sections ( E3.13).
-  Remove the rear flat undertray section.

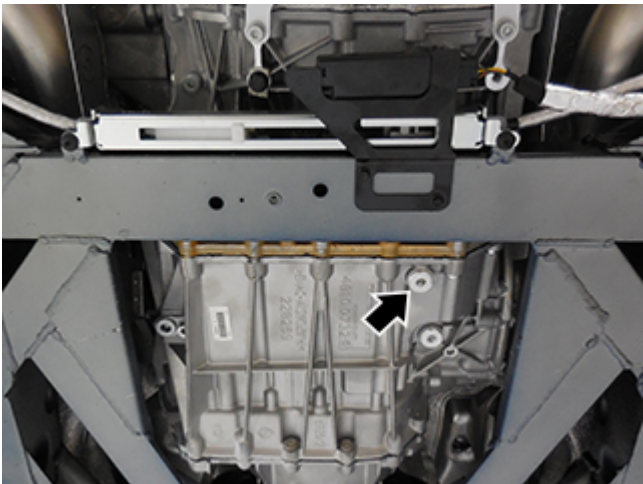

- Place a container under the gearbox for collecting oil.
- Unscrew the indicated plug.
- Let the oil drain completely.


Filling the gearbox clutch hydraulic system with SHELL DCT-F3 oil

			
Tightening torque		Nm	Class
Fastening hydraulic clutch fluid filler/drain plugs	Plug	25 Nm	B

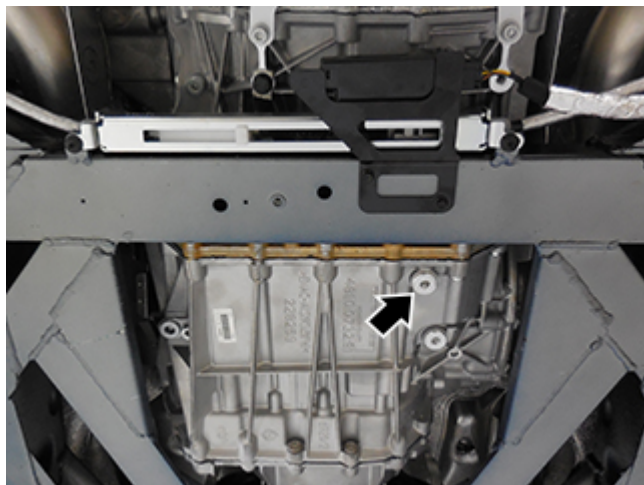

- Replace the plug, fitting and tightening the new component.

		
Tightening torque	Nm	Class
Plug	25 Nm	B

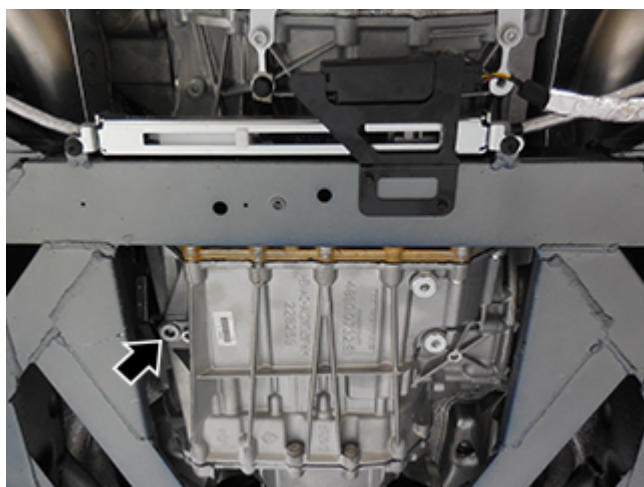

- Unscrew the indicated plug.



- Using the element **02** (with the long spout) of the pump (**AV 8174**), aspirate the specified oil from a newly opened container.
- Place a container under the oil filler orifice.
- Using the element **02** (with long spout) of the pump (**AV 8174**), fill by adding oil gradually through the filler pipe until oil starts to overflow.
- Wait a few minutes to allow the oil to distribute, then repeat the procedure in gradual steps until oil overflows immediately when added.
- Repeat this procedure until oil overflows as soon as it is added.

- Check the level of the Shell DCT-F3 hydraulic clutch system oil ( **A3.03**).
- Check that there is no leakage from the drain plug.