



GTC4Lusso USA - PTU gear oil radiator - Latest Update: 2021-01-26


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.

Copyright by Ferrari S.p.A. - P.IVA 00159560366


C4.04 PTU gear oil radiator

Removing PTU gear oil radiator

- Disconnect the battery ( F2.01).
- Remove the front bumper ( E3.03).

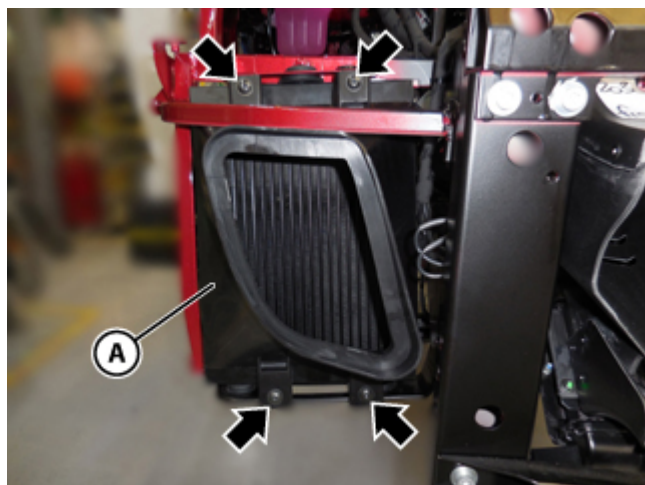


- Undo the screws indicated.
- Remove the duct (A).

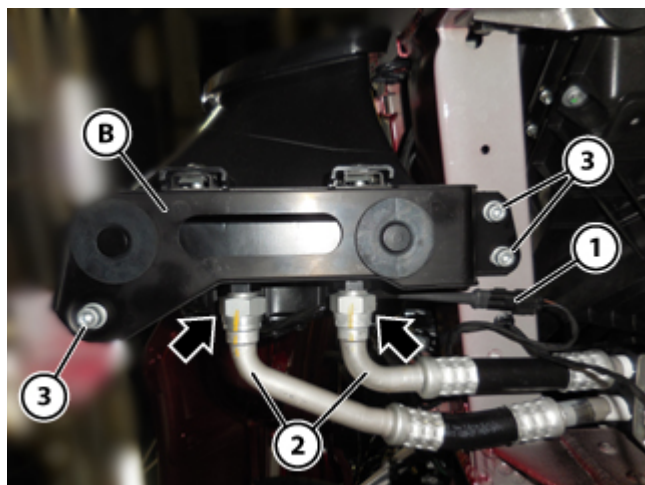

- Release and disconnect connector (1).
- Place a container for collecting oil under the PTU hydraulic system oil radiator.
- Disconnect the pipes (2), undoing the indicated unions, and plug the ends.
- Wait for the fluid to drain completely from the radiator.
- Undo the screws (3).
- Remove the bracket (B) complete with radiator.

Refitting PTU gear oil radiator

			
Tightening torque		Nm	Class
Fastening PTU gear oil radiator mounting bracket	Screw	20 Nm	B
Fastening PTU gear oil radiator pipes	Union	35 Nm	B
Fastening the duct	Screw	4 Nm	B

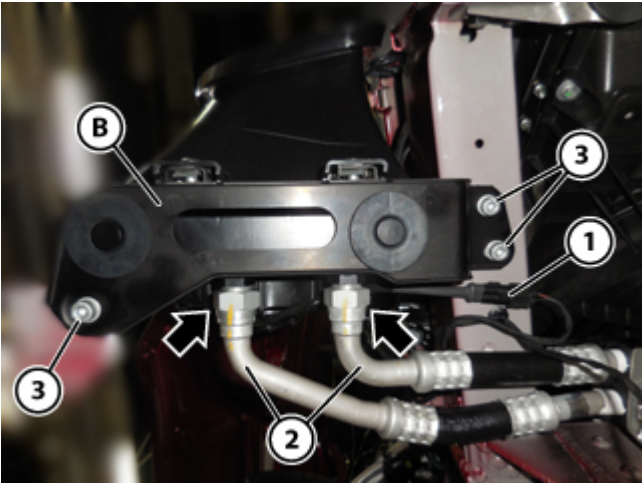


- Fit the bracket **(B)** complete with radiator.
- Tighten the screw **(3)**.

		
Tightening torque	Nm	Class
Screw	20 Nm	B

- Connect the pipes **(2)**, tightening the indicated unions.

		
Tightening torque	Nm	Class
Union	35 Nm	B

- Fasten and connect the connector **(1)**.

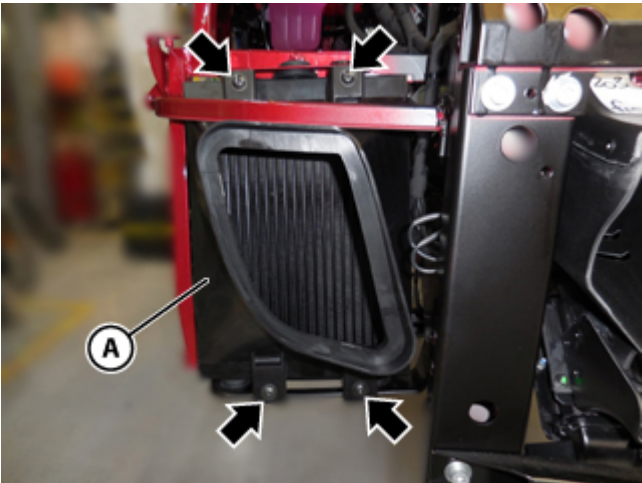

- Fit the duct **(A)**.
- Tighten the screws indicated.


		
Tightening torque	Nm	Class
Screw	4 Nm	B

- Check the PTU gear oil system level ( **A3.08**).
- Refit the front bumper ( **E3.03**).
- Connect the battery ( **F2.01**).

Replacing PTU oil radiator electric fan

			
Tightening torque		Nm	Class
Fastening electric fan to PTU oil radiator	Nut	4 Nm	B

- Disconnect the battery ( F2.01).
- Remove the front wheelhouses ( E3.05).
-  Remove the front element of the front right hand wheelhouse.

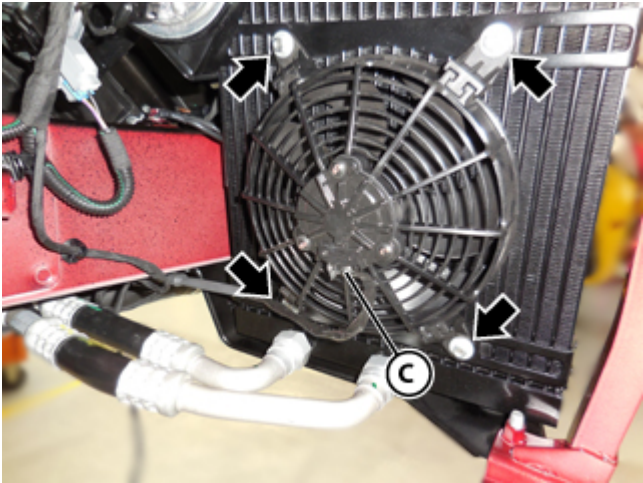

- Undo the nuts indicated.
- Remove the electric fan (C) and replace.
- Fit the new electric fan (C) on the radiator.
- Tighten the nuts indicated.

		
Tightening torque	Nm	Class
Nut	4 Nm	B

- Refit the front wheelhouses ( E3.05).
-  Refit the front element of the front right hand wheelhouse.
- Connect the battery ( F2.01).