



GTC4Lusso USA - Draining and filling PTU gear oil system - Latest Update: 2021-01-26

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.

Copyright by Ferrari S.p.A. - P.IVA 00159560366

C4.06 Draining and filling PTU gear oil system

Draining the PTU gear oil system




ALWAYS dispose of liquids correctly in accordance with applicable legislation.


Collect all liquids drained from the vehicle systems in appropriate airtight containers, then close the containers.

➤ Remove the flat undertray sections ( E3.13).

 Remove the front and central flat undertray sections.

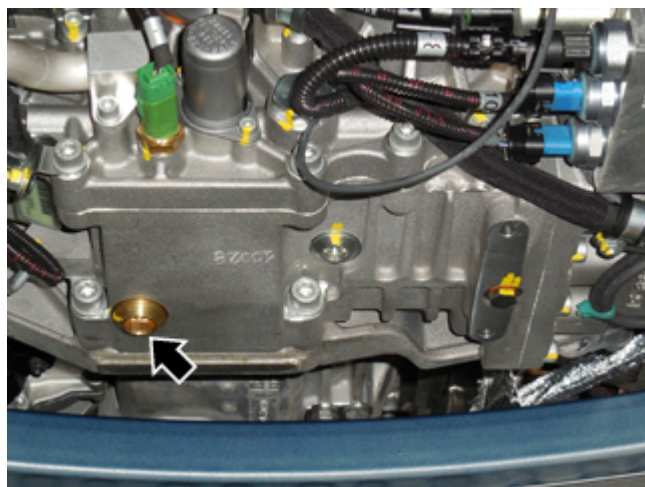

- Place a container under the PTU for collecting oil.
- Unscrew the indicated plug.
- Wait for the oil to drain completely.

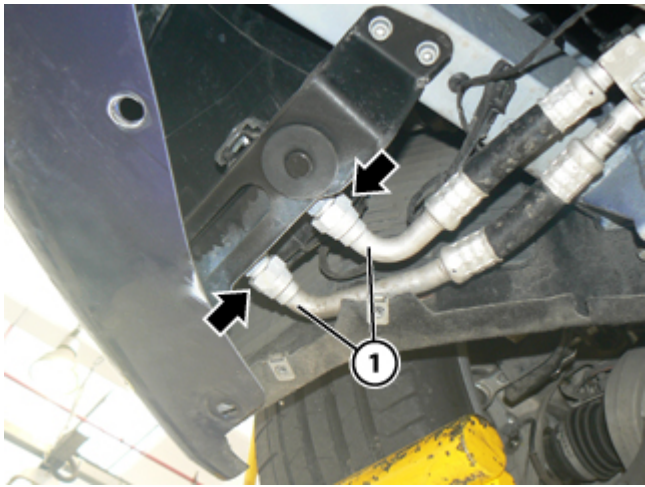


- Place a container for collecting oil under the PTU hydraulic system oil radiator.
- Disconnect the pipes (1), undoing the indicated unions.
- Wait for the oil to drain completely.

Filling the PTU gear oil system


			
Tightening torque		Nm	Class
Fastening PTU gear oil radiator pipes	Union	35 Nm	B
Fastening PTU gear oil drain plug	Threaded plug	40 Nm	B
Fastening the PTU gear oil level inspection/filler plug	Threaded plug	40 Nm	B

- Blowing with compressed air if necessary, drain all the oil from the radiator and pipes.

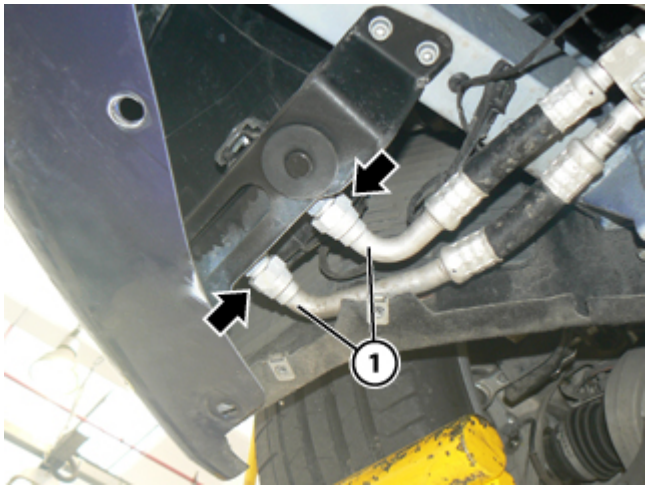


- Connect the pipes (1), tightening the indicated unions.

		
Tightening torque	Nm	Class
Union	35 Nm	B

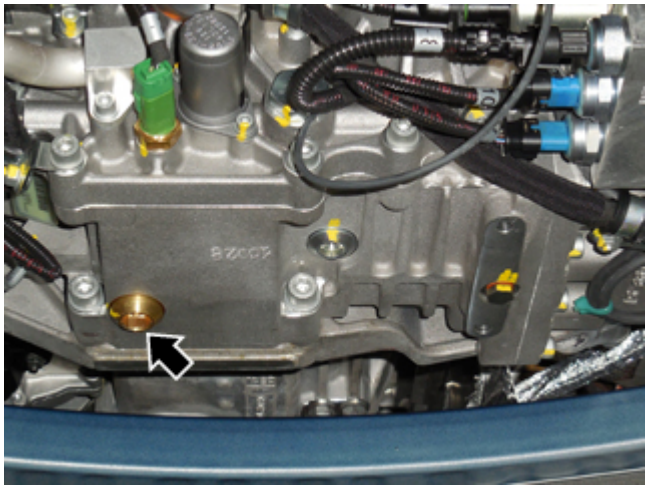

- Tighten the indicated plug.

		
Tightening torque	Nm	Class
Threaded plug	40 Nm	B

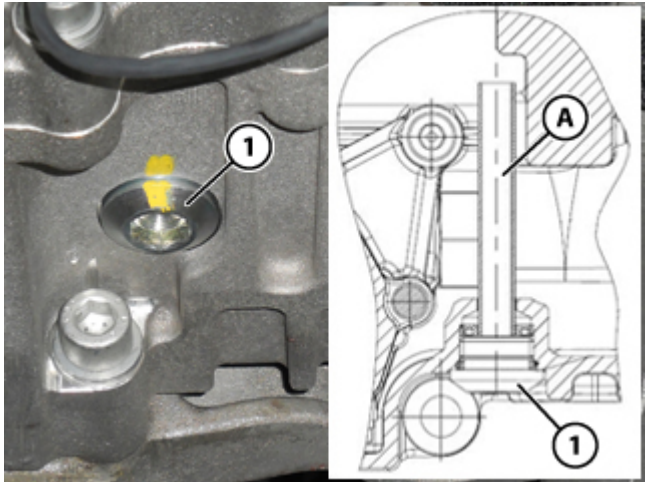

- Undo the cap **(1)**.
- Using a suitable syringe connected to a suitable rubber pipe, inject the specified oil into the PTU through the tube **(A)** until the oil overflows, then wait **2 minutes**.
- Repeat this procedure until oil overflows as soon as it is added.

- Tighten the plug **(1)**.

		
Tightening torque	Nm	Class
Threaded plug	40 Nm	B

- Check the PTU gear oil system level ( **A3.08**).