



GTC4Lusso USA - Transmission shaft - Latest Update: 2021-01-26


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.

Copyright by Ferrari S.p.A. - P.IVA 00159560366


C5.02 Transmission shaft

Removing the transmission shaft

- Remove the central exhaust extensions (🔧 B7.04).
- Remove the catalytic converters (🔧 B7.03).

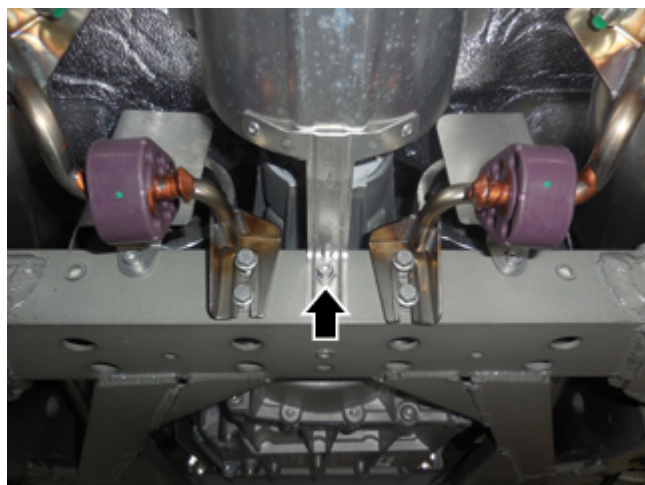

- Undo the indicated screw.

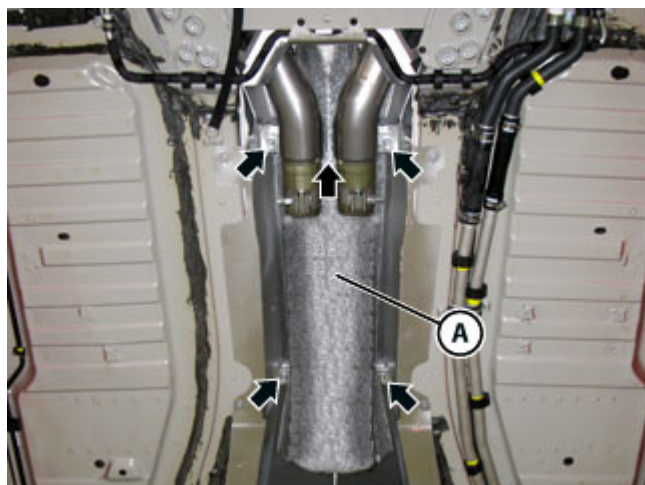

- Undo the nuts indicated.
- Remove the heat shield (A), pulling out towards the front of the vehicle.



- Engaging the relative splines, fit the upper collar (002) of tool (AV 8357) correctly on the upper part of the end of the transmission housing.




- Engaging the relative splines, fit the lower collar (001) of tool (AV 8357) correctly on the upper part of the end of the transmission housing.
- Fasten the upper and lower collars together by tightening the indicated screws.



- Fit the disc (003) of tool (AV 8357) correctly onto the octagonal part of the transmission shaft and, rotating the transmission shaft as necessary, bring the disc into contact with the lower collar, aligning the holes in both components.
- Fasten the disc of tool (AV 8357) to the lower collar, tightening the indicated screws.



- Undo the indicated nut.

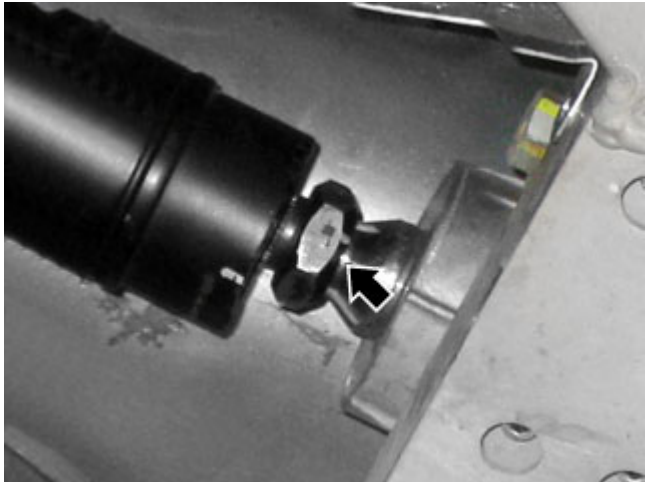

- Undo the indicated nut.


- Supporting the weight of the transmission shaft adequately, disconnect the shaft from the splined shaft of the gearbox then move the shaft toward the rear of the vehicle to detach from the splined shaft on the transmission housing.
- Remove the transmission shaft.

Refitting the transmission shaft

			
Tightening torque		Nm	Class
Fastening the transmission shaft Products to use: Loctite® 243, AREXONS SYSTEM 52A43 - MEDIUM STRENGTH THREAD LOCK	Nut	200 Nm	B
Fastening transmission shaft heat shield	Nut	5 Nm	B
	Screw	4 Nm	B



- Supporting its weight appropriately, connect the transmission shaft to the splined shaft of the transmission housing, rotating the shaft so that the marking **(1)** on the transmission shaft is opposite the marking **(2)** on the splined shaft of the transmission housing, then connect to the splined shaft of the gearbox.
- Apply **Copper based grease for high temperatures** on the circlips on the splined shaft of the transmission housing and of the gearbox.

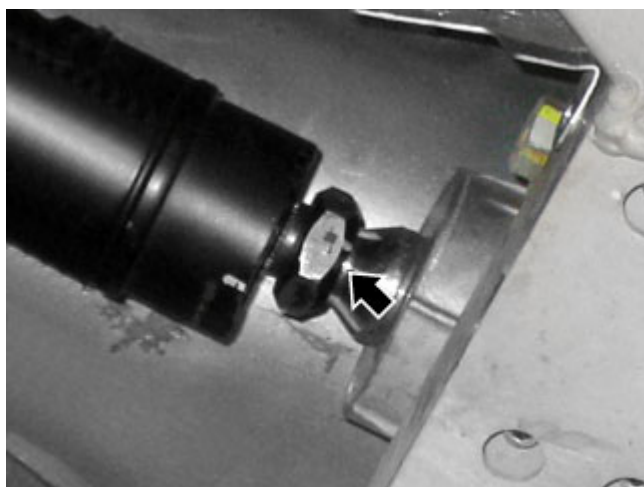

- Apply **Loctite® 243** or **AREXONS SYSTEM 52A43 - MEDIUM STRENGTH THREAD LOCK** to the thread of the indicated nut.
- Tighten the indicated nut.

		
Tightening torque	Nm	Class
Nut	200 Nm	B



- Apply **Loctite® 243** or **AREXONS SYSTEM 52A43 - MEDIUM STRENGTH THREAD LOCK** to the thread of the indicated nut.
- Tighten the indicated nut.

		
Tightening torque	Nm	Class
Nut	200 Nm	B




- Undo the screws indicated.
- Remove the disc (003) of tool (AV 8357).



- Undo the screws indicated.
- Remove the lower collar (001) of tool (AV 8357).




- Remove the upper collar (002) of tool (AV 8357).

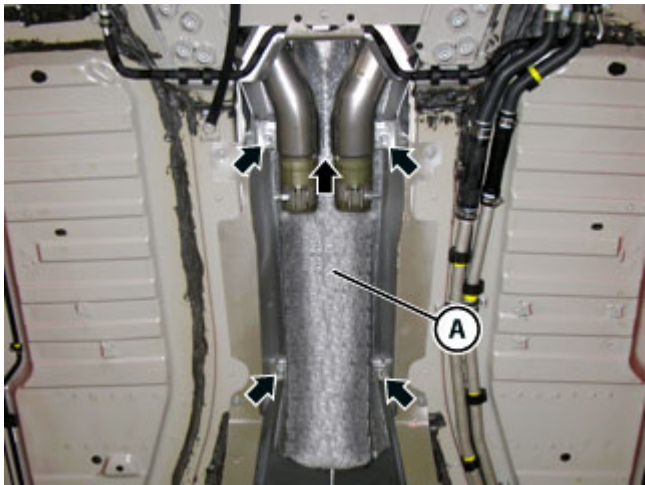

- Fit the heat shield (A), inserting towards the rear.
- Tighten the nuts indicated.

		
Tightening torque	Nm	Class
Nut	5 Nm	B

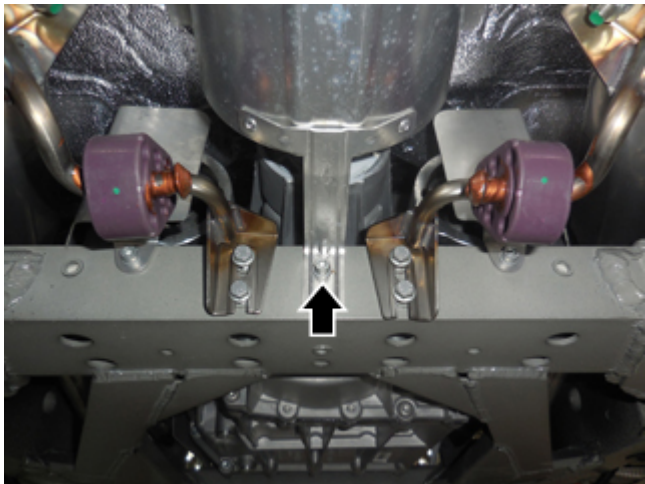

- Tighten the indicated screw.

		
Tightening torque	Nm	Class
Screw	4 Nm	B

- Refit the catalytic converters (🔧 B7.03).
- Refit the central exhaust extensions (🔧 B7.04).