



GTC4Lusso USA - Transmission housing - Latest Update: 2021-01-26


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.

Copyright by Ferrari S.p.A. - P.IVA 00159560366

## C5.03 Transmission housing

### Removing the transmission housing

- Remove the transmission shaft ( C5.02).
- Remove the front removable subframe ( E2.02).
- Remove the catalytic converters ( B7.03).

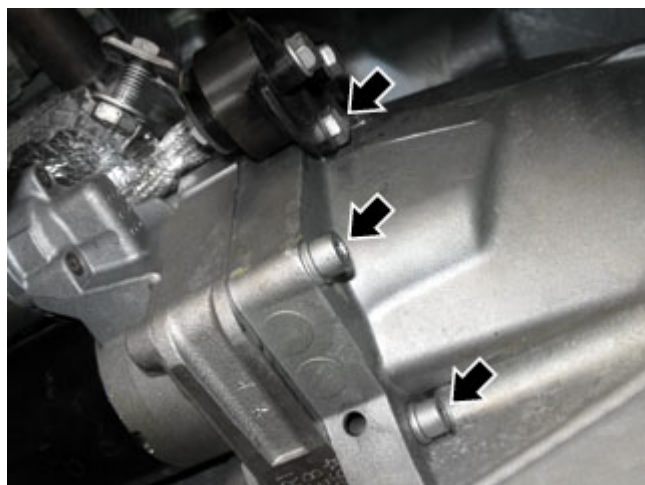


- Undo the screws indicated.



Take particular care not to bend the pipes and/or strain the cables excessively when tilting the engine assembly.


- Tilt towards the rear of the transmission housing, to allow access to the upper nuts fastening the transmission housing to the engine.

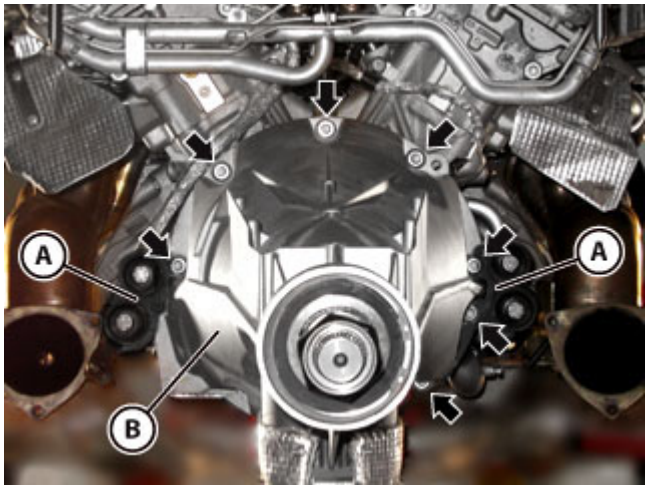

- Undo the nuts indicated.
- Remove the brackets (A).
- Separate the transmission housing (B) from the engine and remove, detaching from the respective stud bolts.

Refitting the transmission housing


|  |                     |       |       |
|-----------------------------------------------------------------------------------|---------------------|-------|-------|
| Tightening torque                                                                 |                     | Nm    | Class |
| Fastening the transmission housing                                                | Nut (pretightening) | 20 Nm | A     |
|                                                                                   | Nut                 | 60 Nm | A     |
| Fastening starter motor to transmission housing                                   | Screw               | 25 Nm | A     |

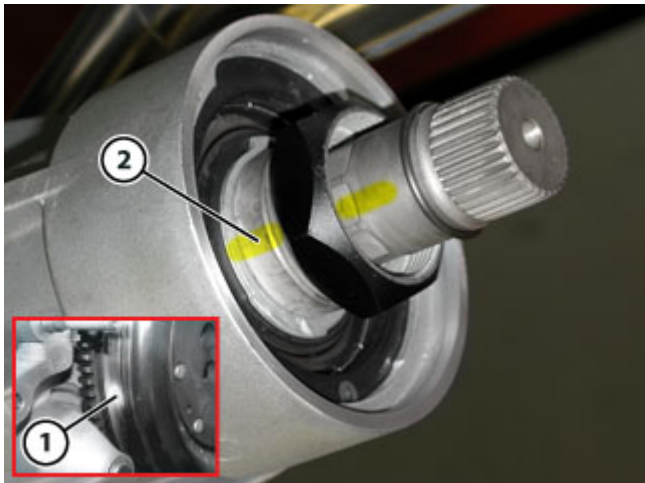

- Mark the exact position of the maximum flywheel imbalance marking (1) on the outer side of the transmission housing shaft (2).



- Thoroughly clean and degrease the transmission housing shaft.
- Apply a layer of **ROLOIL Copper Grease - copper based grease for high temperatures** over the last **2 cm** of the transmission housing shaft to completely fill the splining grooves and cover the bevelled end.

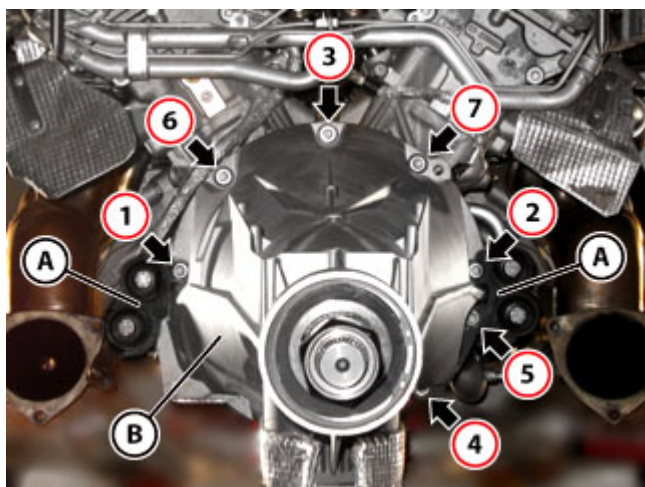

- Take particular care not to bend the pipes and/or strain the cables excessively when tilting the engine assembly.

- Move the housing **(B)** away from the end of the relative shaft, to allow a slight rotation of the shaft when fitting the shaft into the splined hub of the flywheel.
- Fit the transmission housing **(B)**, mating the splining of the relative shaft with the splined hub of the flywheel, and push completely onto the crankcase, aligning the respective stud bolts.

*i* FROM Engine No. 175495, particular care is necessary during this procedure as there are two O-rings on the flywheel, each of which exerting axial resistance during insertion. After passing the first O-ring (first point of axial resistance), the axial resistance encountered remains constant while the transmission housing is being pressed into its seat until the second O-ring is reached (second point of axial resistance). At this point, apply additional force to pass the second O-ring (second point of axial resistance).


- Taking particular care not to disengage the splined shaft of the housing from the splined hub of the flywheel, separate the housing by approximately **2 cm** and insert again until completely seated in the crankcase.
- Fit the brackets **(A)**.
- Check that the housing **(B)** is seated completely on the crankcase, then tighten the indicated nuts.
- Pre-tighten the indicated nuts in the sequence

given.

|  |       |       |
|-----------------------------------------------------------------------------------|-------|-------|
| Tightening torque                                                                 | Nm    | Class |
| Nut (pretightening)                                                               | 20 Nm | A     |

- Tighten the indicated nuts in the sequence given.

|  |       |       |
|-----------------------------------------------------------------------------------|-------|-------|
| Tightening torque                                                                 | Nm    | Class |
| Nut                                                                               | 60 Nm | A     |

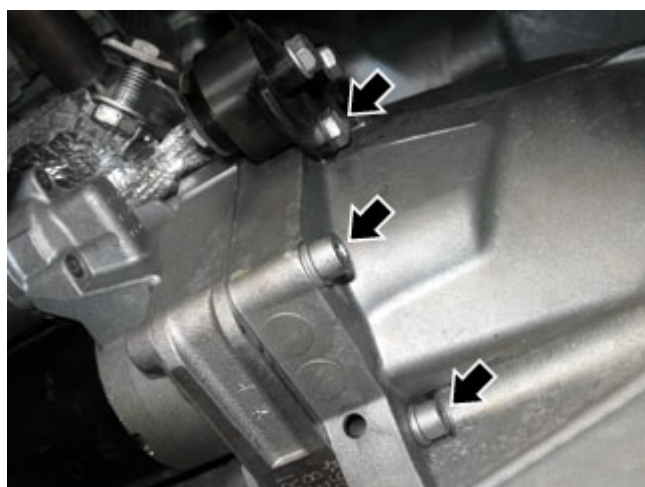

- Tighten the screws indicated.

|  |       |       |
|-----------------------------------------------------------------------------------|-------|-------|
| Tightening torque                                                                 | Nm    | Class |
| Screw                                                                             | 25 Nm | A     |

- Refit the catalytic converters ( B7.03).
- Refit the front removable subframe ( E2.02).
- Refit the transmission shaft ( C5.02).