



GTC4Lusso USA - Flywheel - Latest Update: 2021-01-26


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.

Copyright by Ferrari S.p.A. - P.IVA 00159560366


C5.04 Flywheel

Removing the flywheel


➤ Remove the transmission housing ( C5.03).

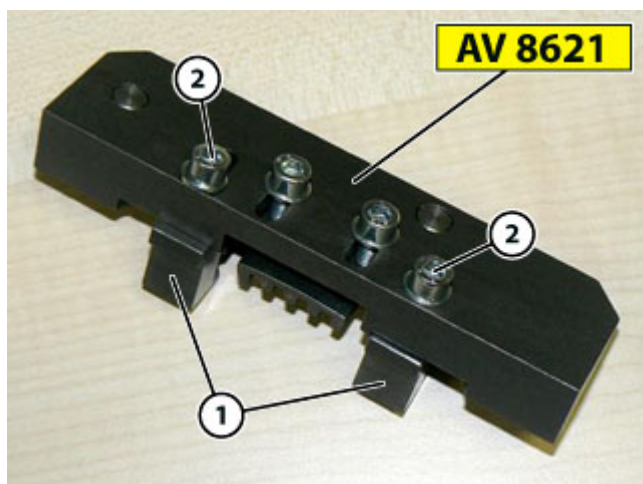


- Fit the fastener brackets (1) on the tool (AV 8621).
- For the FF, the shorter fastener brackets (1) must be used.
- Loosely tighten the screws (2).

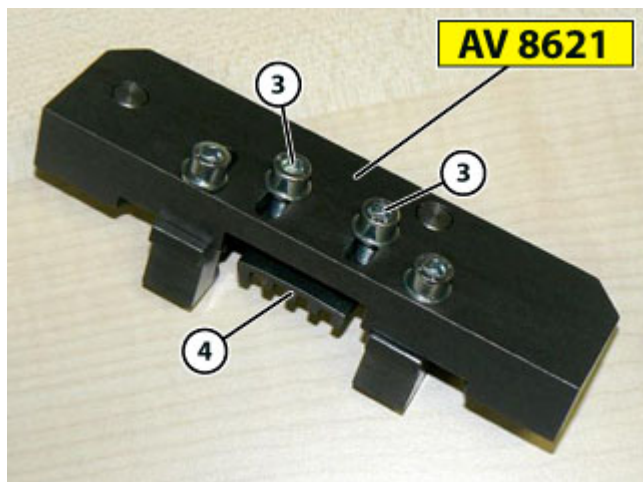


- Undo the screws (3).
- Remove the rack (4) from the tool (AV 8621).

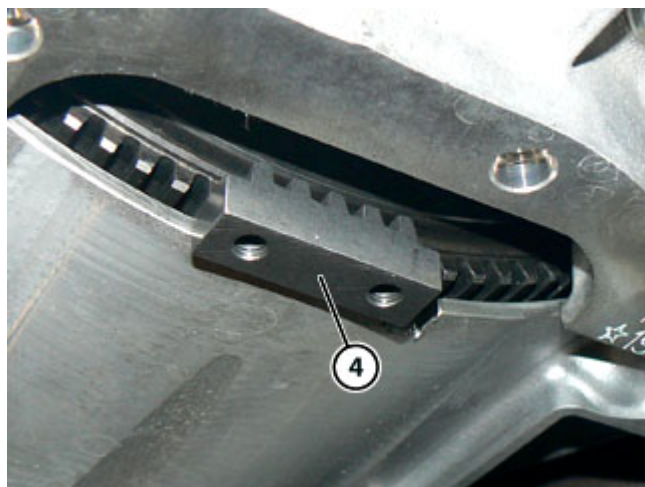


- Engage the rack (4) with the flywheel at the centre.
- Rotate the crankshaft as necessary to facilitate the operation.
- Remove the rack (4).

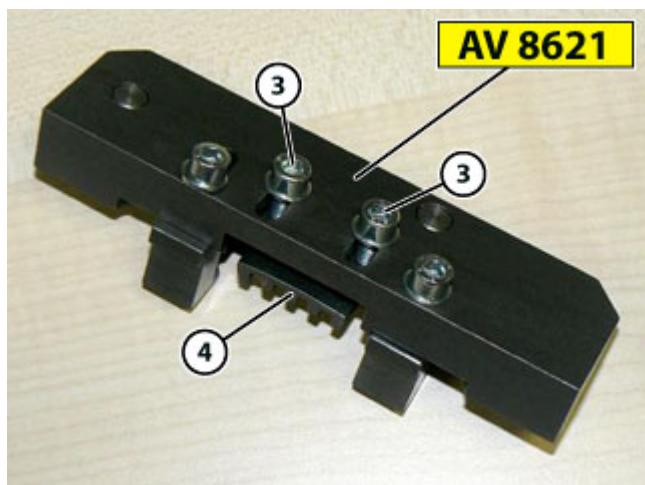


- Fit the rack (4) on the tool (AV 8621).
- Loosely tighten the screws (3).

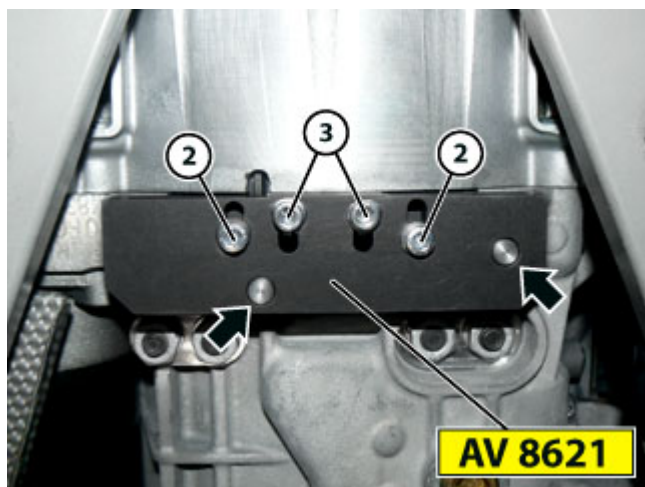

- Check that the screws fastening the rack and the fastener brackets are loosened.
- Fit the tool (AV 8621), inserting the indicated pins in the respective holes on the lower crankcase shell.
- Engage the rack with the flywheel, moving the screws (3) towards the rear of the vehicle.
- Attach the brackets to the lower crankcase shell, moving the screws (2) towards the front of the vehicle.
- Tighten the screws (2) and the screws (3).
- Check that the tool (AV 8621) is fastened correctly.

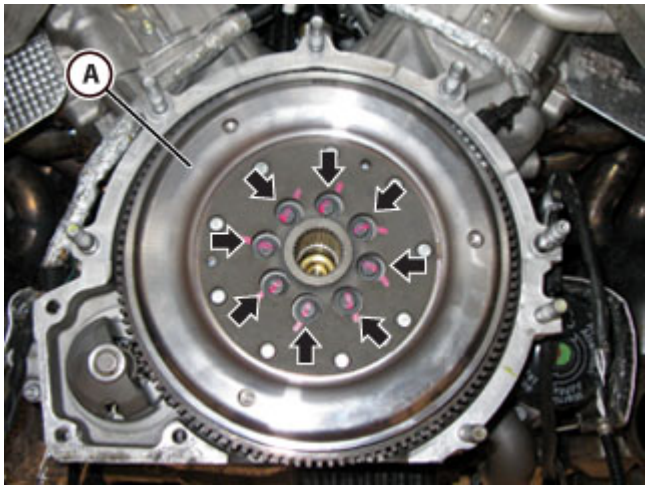


- Undo the screws indicated.
- Remove the flywheel (A).

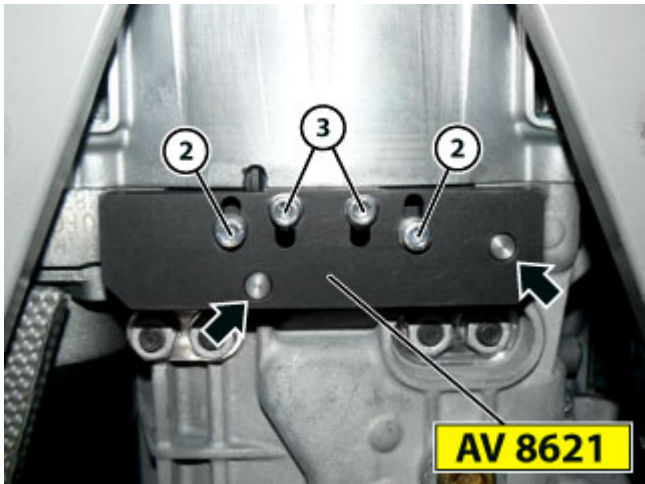

- Loosen the screws (3) and the screws (2).
- Disengage the rack from the flywheel, moving the screws (3) towards the front of the vehicle.
- Detach the brackets from the lower crankcase shell, moving the screws (2) towards the rear of the vehicle.
- Remove the tool (AV 8621), removing the indicated pins from the respective holes on the lower crankcase shell.

Refitting the flywheel


			
Tightening torque		Nm	Class
Fastening flywheel to crankshaft	Screw (pretightening)	45 Nm	A
	Screw	91 Nm	A

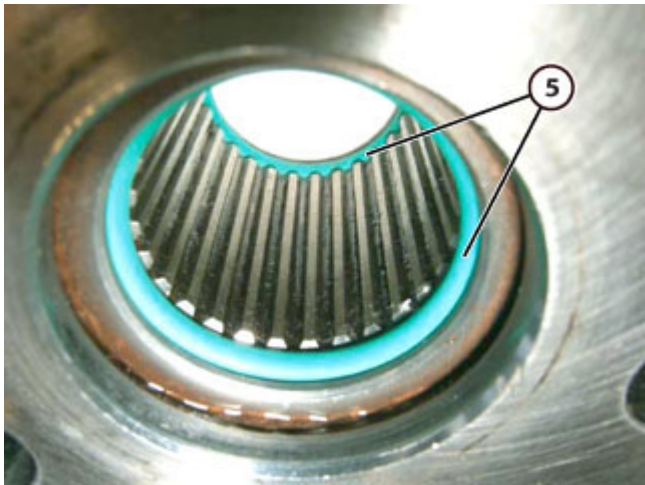


- Remove the O-rings (5) and replace.
- Clean and degrease the flywheel splining thoroughly.
- Carefully fit the new O-rings (5) in the respective seats on the flywheel splining.




- Apply a sufficient layer of **ROLOIL Copper Grease - copper based grease for high temperatures** on the splining and on the O-rings to fill the teeth grooves completely.

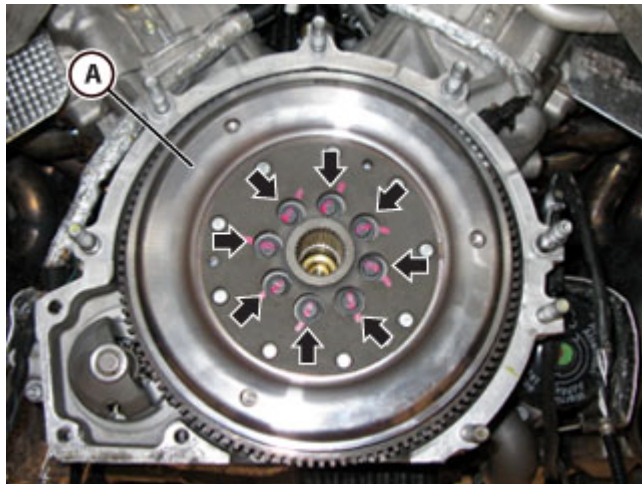


- Fit the flywheel **(A)**.
- Tighten the screws indicated.

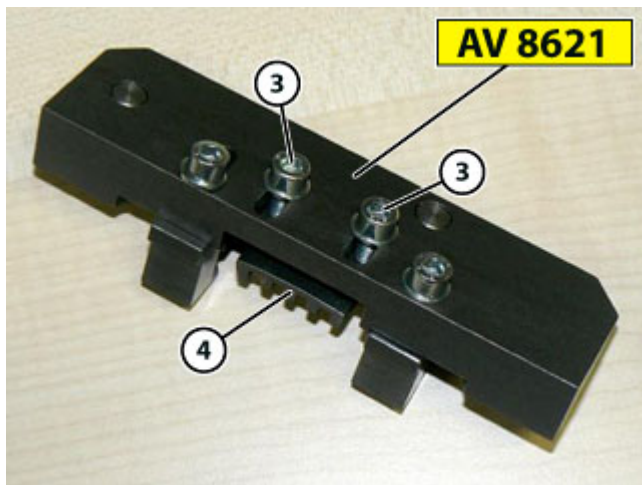


- Undo the screws **(3)**.
- Remove the rack **(4)** from the tool **(AV 8621)**.

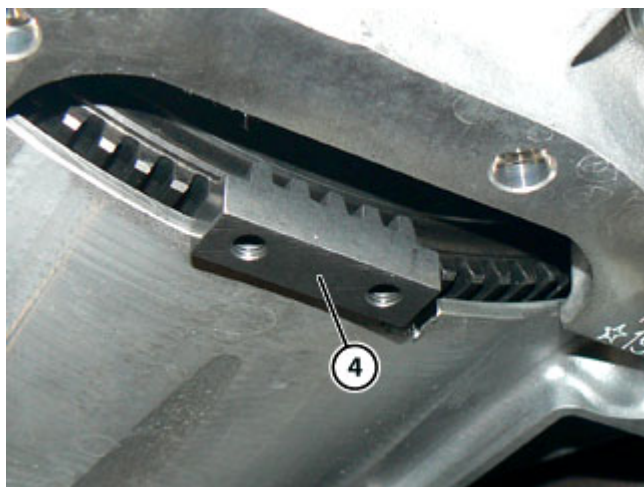


- Engage the rack (4) with the flywheel at the centre.
- Rotate the crankshaft as necessary to facilitate the operation.
- Remove the rack (4).

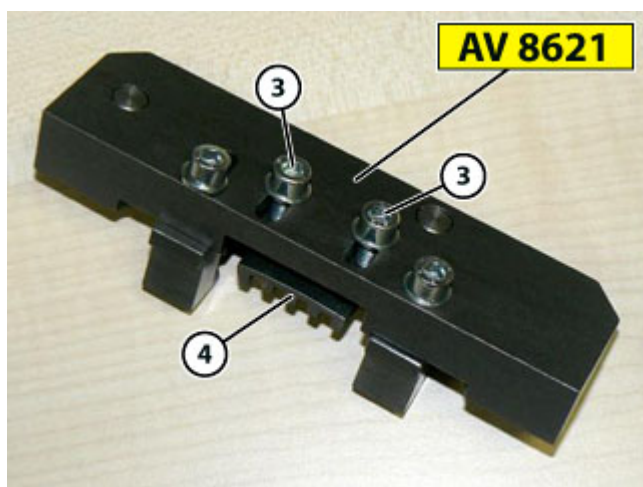

- Fit the rack (4) on the tool (AV 8621).
- Loosely tighten the screws (3).

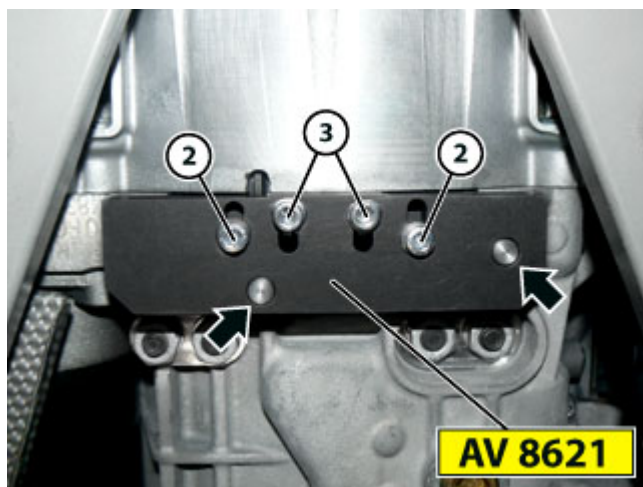

- Check that the screws fastening the rack and the fastener brackets are loosened.
- Fit the tool (AV 8621), inserting the indicated pins in the respective holes on the lower crankcase shell.
- Engage the rack with the flywheel, moving the screws (3) towards the rear of the vehicle.
- Attach the brackets to the lower crankcase shell, moving the screws (2) towards the front of the vehicle.
- Tighten the screws (2) and the screws (3).
- Check that the tool (AV 8621) is fastened correctly.

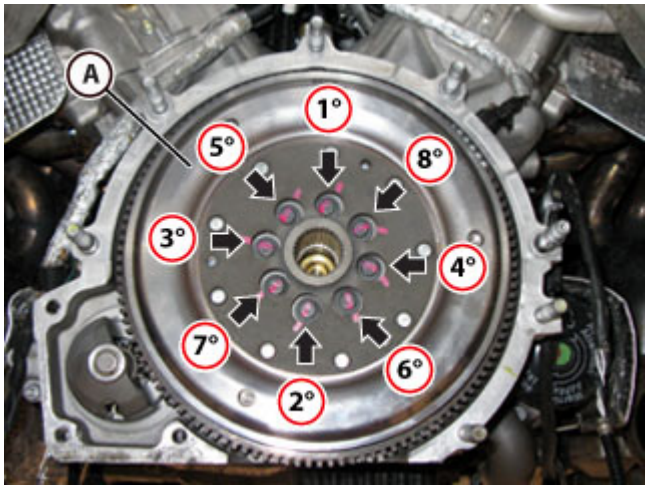


- Pretighten the indicated screws in the sequence given.

		
Tightening torque	Nm	Class
Screw (pretightening)	45 Nm	A

- Tighten the indicated screws in the sequence given.

		
Tightening torque	Nm	Class
Screw	91 Nm	A

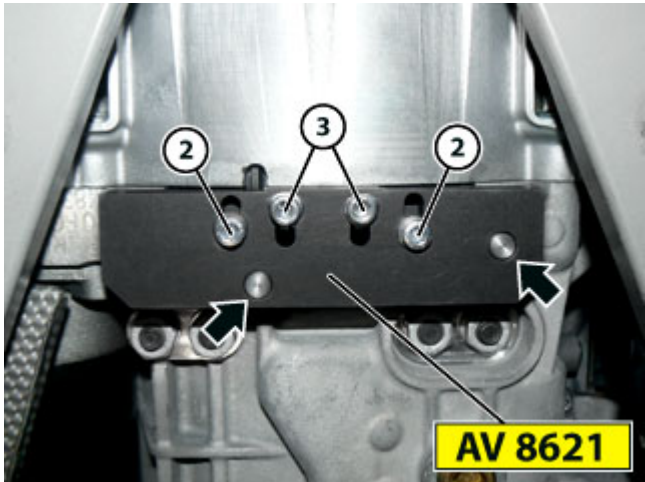

- Loosen the screws **(3)** and the screws **(2)**.
- Disengage the rack from the flywheel, moving the screws **(3)** towards the front of the vehicle.
- Detach the brackets from the lower crankcase shell, moving the screws **(2)** towards the rear of the vehicle.
- Remove the tool **(AV 8621)**, removing the indicated pins from the respective holes on the lower crankcase shell.

➤ Refit the transmission housing ( C5.03).