



GTC4Lusso USA - Brake fluid tank - Latest Update: 2021-01-26

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.

Copyright by Ferrari S.p.A. - P.IVA 00159560366

D3.02 Brake fluid tank

Removing the brake fluid tank



Hydraulic brake fluid is corrosive.

Contact with brake fluid may cause severe injury or damage to painted parts of the vehicle.

In the event of skin contact with fluid, wash the respective part of the body immediately with plenty of water.

In the event of contact between the fluid and painted parts of the vehicle, wash and dry the respective areas immediately.




Pour the oil drained from the system into a container and seal it. DO NOT dispose of used oil in the environment.

➤ Disconnect the battery (🔧 F2.01).

➤ Remove the engine compartment cosmetic shields (🔧 E3.14).

➤ Remove the left hand cosmetic inspection shield.

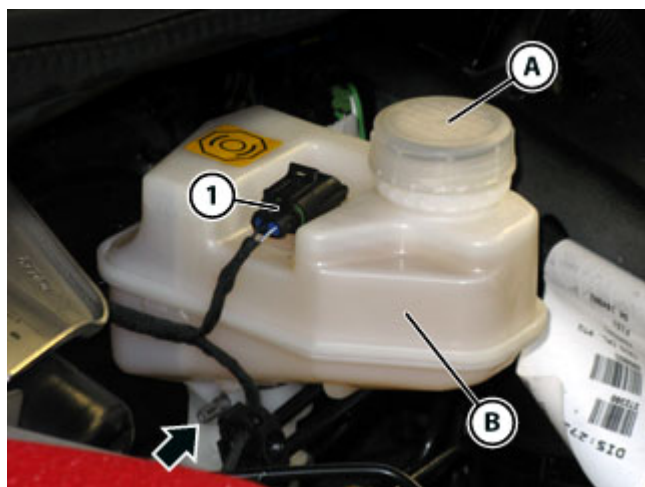

- Undo and open the cap (A).
- Use a suitable syringe to aspirate the fluid completely from the tank.
- Disconnect the connector (1).
- Undo the indicated screw.
- Remove the tank (B).

Refitting the brake fluid tank

			
Tightening torque		Nm	Class
Fastening brake fluid reservoirs Products to use: AREXONS SYSTEM 56A38 - VERY HIGH STRENGTH RETAINING COMPOUND	Screw	2 Nm	B




Hydraulic brake fluid is corrosive.

Contact with brake fluid may cause severe injury or damage to painted parts of the vehicle.

In the event of skin contact with fluid, wash the respective part of the body immediately with plenty of water.

In the event of contact between the fluid and painted parts of the vehicle, wash and dry the respective areas immediately.

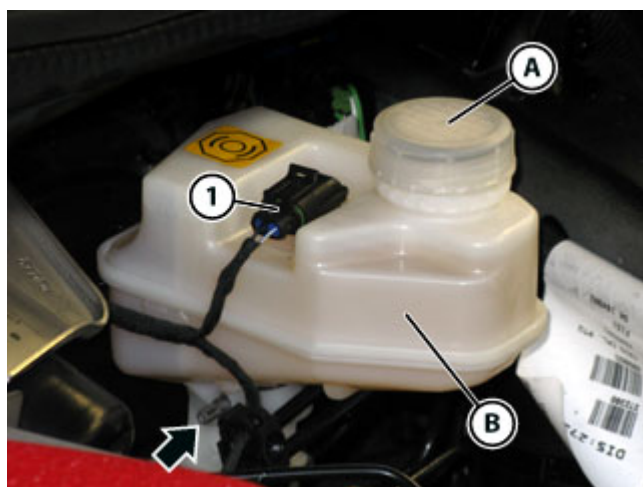

- Fit the tank (B).
- Close and tighten the cap (A) securely.
- Apply **AREXONS SYSTEM 52A43 - MEDIUM STRENGTH THREAD LOCK** on the screw (2) and tighten the screw.

		
Tightening torque	Nm	Class
Screw	2 Nm	B

- Connect the connector (1).

- Connect the battery ( F2.01).
- Fill and bleed the brake system ( D3.10).
- Refit the engine compartment cosmetic shields ( E3.14).
- Refit the left hand cosmetic inspection shield.