



GTC4Lusso USA - Brake servo - Latest Update: 2021-01-26


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.

Copyright by Ferrari S.p.A. - P.IVA 00159560366

D3.08 Brake servo

Removing the brake servo

- Remove the dashboard trim panels (E4.02).
 - Remove the driver side underdashboard trim panel from the dashboard.
- Remove the engine compartment cosmetic shields (E3.14).
 - Remove the left hand lateral cosmetic shield.
- Remove the brake fluid tank (D3.02).
- Remove the windscreen wiper unit (E3.10).

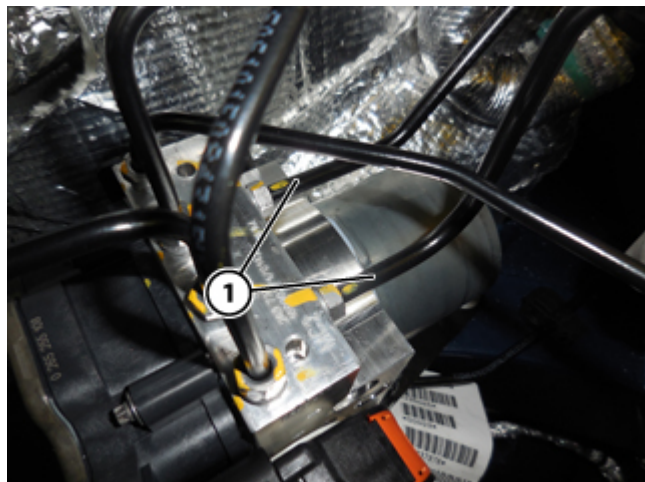

Hydraulic brake fluid is corrosive.

Contact with brake fluid may cause severe injury or damage to painted parts of the vehicle.


In the event of skin contact with fluid, wash the respective part of the body immediately with plenty of water.

In the event of contact between the fluid and painted parts of the vehicle, wash and dry the respective areas immediately.

- Disconnect the pipes (1), undoing the respective unions.



- Disconnect the vacuum pipe (2).

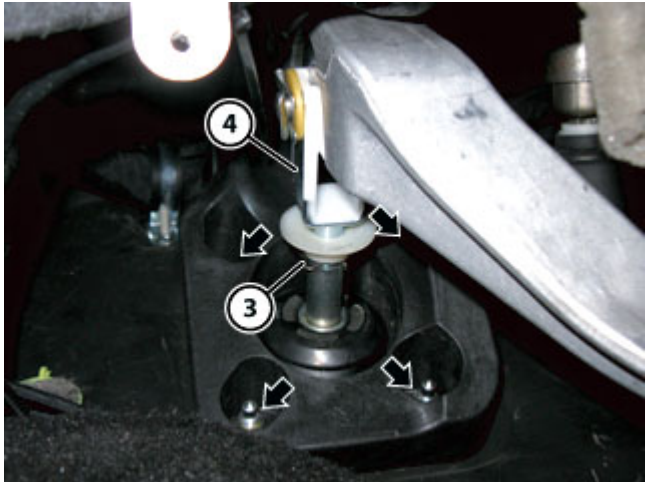


- Prise off the clip (3) then detach the fork (4) from the brake servo rod.
- Undo the nuts indicated.

- Ease out and remove the brake servo complete with pump and relative pipes, retrieving the gasket and shim.

Refitting the brake servo

			
Tightening torque		Nm	Class
Fastening brake servo	Nut	20 Nm	B
Fastening brake fluid pipes onto ABS electrohydraulic unit	Union	16 Nm	B

- Install the brake servo complete with pump and relative pipes, fitting the relative gasket and shim.

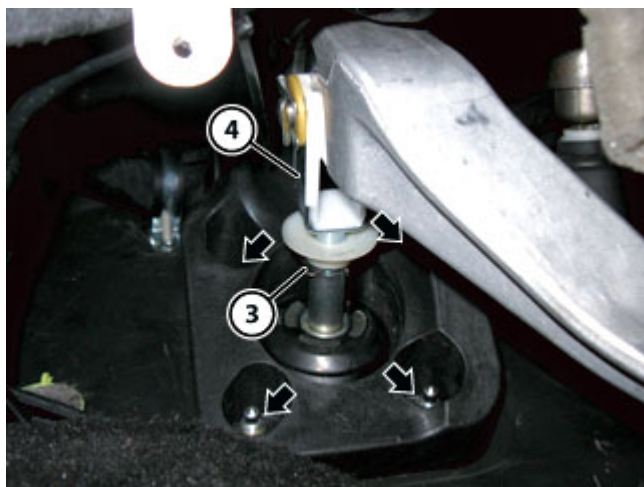

- Tighten the indicated nuts in a cross pattern.




Tightening torque	Nm	Class
Nut	20 Nm	B

- Fit and fasten the clip (3), engage the fork (4) with the brake servo rod and depress the brake pedal fully until the fork fasten audibly with the rod.



- Connect the vacuum pipe (2).

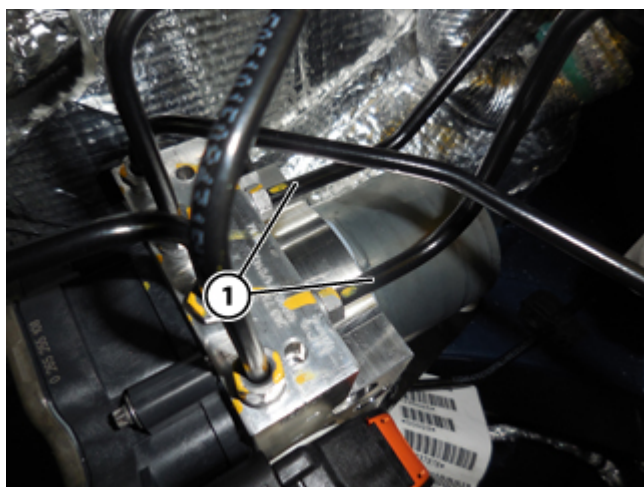

- Connect the pipes (1), tightening the respective unions.



Tightening torque	Nm	Class
Union	16 Nm	B

- Refit the windscreen wiper unit ( E3.10).
- Refit the brake fluid tank ( D3.02).
- Refit the engine compartment cosmetic shields ( E3.14).
- Refit the left hand cosmetic underwindscreen shield.
- Refit the dashboard trim panels ( E4.02).
- Refit the driver side underdashboard trim panel on the dashboard.

