



GTC4Lusso USA - Hub carriers - Latest Update: 2021-01-26

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.

Copyright by Ferrari S.p.A. - P.IVA 00159560366


D4.03 Hub carriers

Removing the front hub carriers

- Remove the front axle shafts (🔧 C5.01).
 - ❗ Detach the axle shaft from the hub carrier bearing, leaving it connected to the PTU flange.
- Remove the front brake callipers (🔧 D3.04).
- Remove the brake discs (🔧 D3.05).
 - ❗ Remove the front discs.



- Disconnect the connector (1) and release the respective cable.

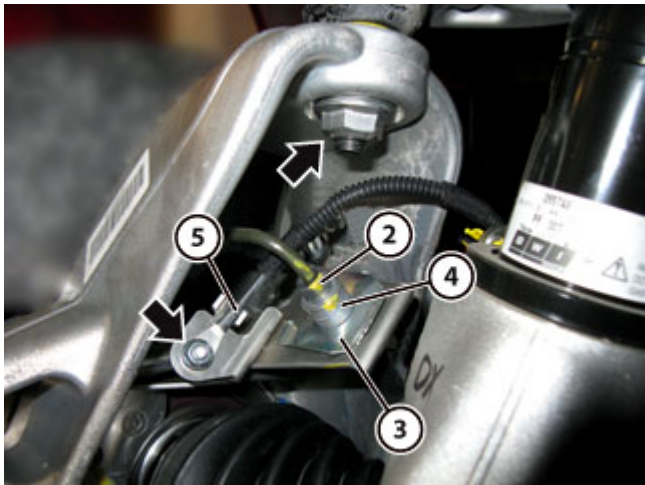


- Undo the union (2).
- Remove the clip (3).
- Disconnect the hose (4).
- Disconnect the ground cable (5) by undoing the indicated nut.
- Undo the indicated nut.

- Remove the front hub carrier.

Refitting the front hub carriers

			
Tightening torque		Nm	Class
Fastening the front suspension upper arms	Nut (pretightening)	52 Nm	A
	Nut	52 Nm	A
	Nut (pretightening)	9 Nm	A
	Nut	60 Nm	A
Fastening the brake fluid pipes	Union	16 Nm	B
	Union	20 ÷ 23 Nm	0

- Fit the front hub carrier.

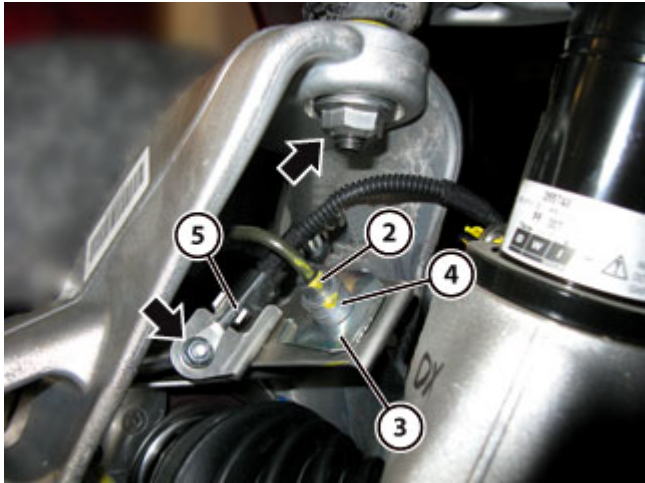

- Clean the ball stud to remove any grease residue.
- Pre-tighten the indicated nut.

Tightening torque	Nm	Class
Nut (pretightening)	52 Nm	A

- Loosen and tighten the indicated nut.

Tightening torque	Nm	Class
Nut	52 Nm	A

- Connect the ground cable (5) by tightening the respective nut.
- Connect the hose (4).
- Fit the clip (3).
- Tighten the union (2).

Tightening torque	Nm	Class
Union	16 Nm	B



- Connect the connector (1) and fasten the respective cable.

- Refit the brake discs ( D3.05).
 -  Refit the front discs.
- Refit the front brake callipers ( D3.04).
- Refit the front axle shafts ( C5.01).
 -  Fit the axle shaft in the hub carrier bearing and fasten.

Removing the rear hub carriers

- Remove the rear brake callipers ( D3.04).
- Remove the brake discs ( D3.05).
-  Remove the rear discs.
- Remove the EPB electric parking brake shoes ( D3.06).
- Remove the rear axle shafts ( C5.01).
-  Detach the axle shaft from the hub carrier bearing, leaving it connected to the differential flange.




- Disconnect the connector (1) and release the respective cable.



-  After removing the nut and/or the screw fastening the rear lower suspension arm, ALWAYS REPLACE BOTH fasteners with new components upon reassembly.

- Undo the nut (3), while holding the pin (2) to prevent it from turning.
- Remove the pin (2).


- Remove the hub carrier.

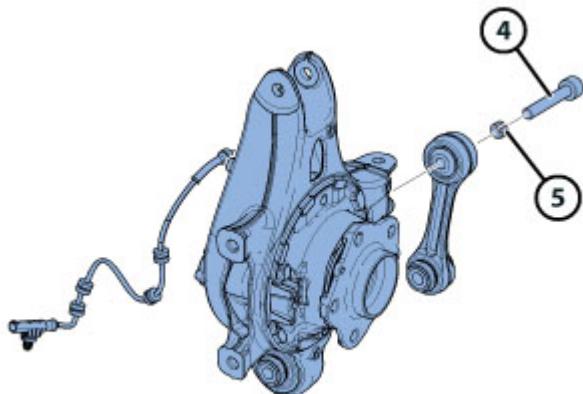

- Undo the screw (9), retrieving the compensator ring (5).
- Separate the link from the hub carrier.

Refitting the rear hub carriers

			
Tightening torque		Nm	Class
Fastening links Products to use: TUTELA ZETA 2	Screw	85 Nm	A
Fastening the rear suspension lower arms	Nut	205 Nm	A
	Nut (pretightening)	9 Nm	A
	Nut	60 Nm	A

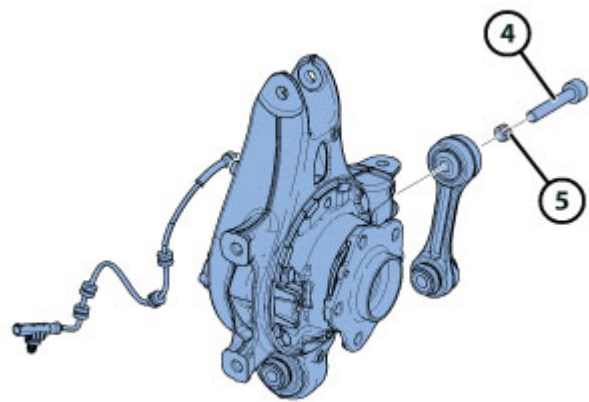

- Fit the link on the hub carrier.
- Apply an even layer of **TUTELA ZETA 2** grease to the inner surface of the compensator ring (5) in contact with the screw head (4).
- Tighten the screw (4).

		
Tightening torque	Nm	Class
Screw	85 Nm	A

- Fit the hub carrier.



- After removing the nut and/or the screw fastening the rear lower suspension arm, **ALWAYS REPLACE BOTH fasteners with new components upon reassembly.**
- Fit the new pin (2).
- Tighten the new nut (3), while holding the pin (2) to prevent it from turning.

		
Tightening torque	Nm	Class
Nut	205 Nm	A



- Connect the connector (1) and fasten the respective cable.

- Refit the rear axle shafts (🔧 C5.01).
 - 🔧 Fasten the axle shaft onto the hub carrier bearing.
- Refit the EPB electric parking brake shoes (🔧 D3.06).
- Refit the brake discs (🔧 D3.05).
- Refit the rear brake callipers (🔧 D3.04).