



GTC4Lusso USA - Stabiliser bars - Latest Update: 2021-01-26

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.


Copyright by Ferrari S.p.A. - P.IVA 00159560366

D4.05 Stabiliser bars


Removing the front stabiliser bar

➤ Remove the steering box ( D5.04).


 Remove the fasteners only (disconnecting the power steering pipes is not necessary) and remove the bar.

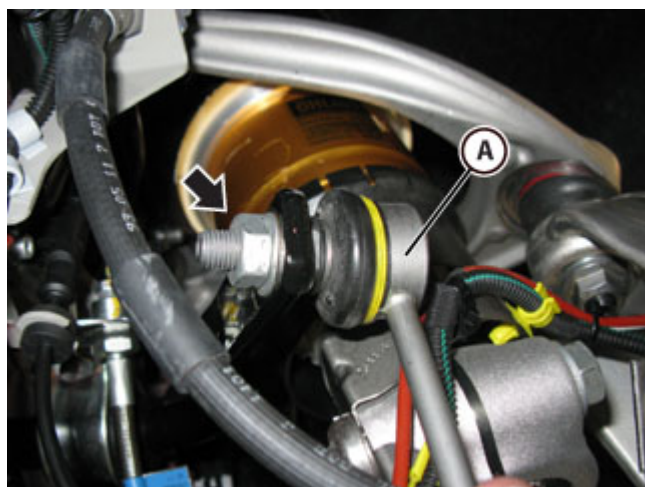


- Undo the indicated nut.
- Detach the joint of the tie-rod (**A**) from the stabiliser bar.

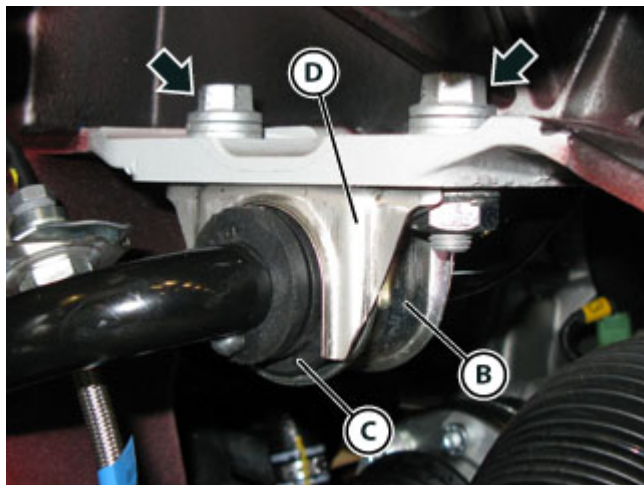

- Undo the screws indicated.
- Remove the bracket **(B)** from the respective rubber bush **(C)**.
- Remove the bracket **(D)** retaining the bush **(C)**.

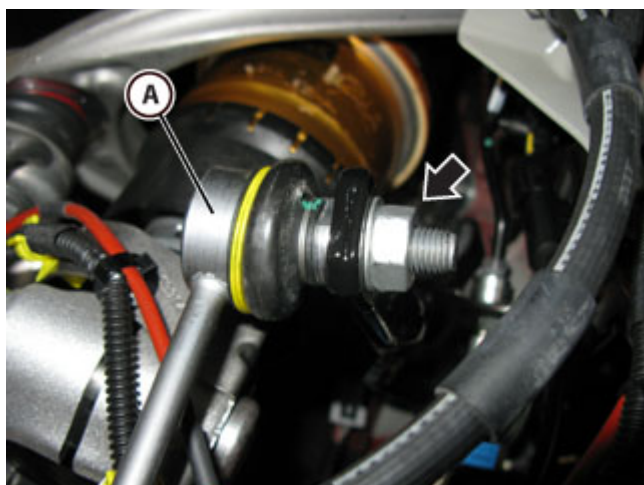

- Undo the indicated nut.
- Detach the joint of the tie-rod **(A)** from the stabiliser bar.

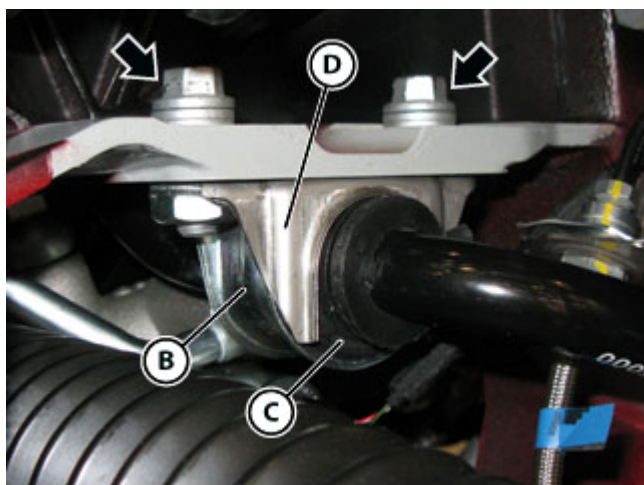

- Undo the screws indicated.
- Remove the bracket **(B)** from the respective rubber bush **(C)**.
- Remove the bracket **(D)** retaining the bush **(C)**.

- Move the steering box aside so that it does not hinder the procedure.
- Detach and remove the stabiliser bar.
- Note the respective positions and orientation, then remove the rubber bushes from the stabiliser bar.

Refitting the front stabiliser bar



ng torque	Nm	Class

Tightening torque		Nm	Class
Fastening the stabiliser bars	Screw (pretightening)	9.5 Nm	B
	Screw	30 Nm	B
	Nut (pretightening)	10 Nm	B
	Nut	30 Nm	A
Fastening the suspension tie-rods	Joint	50 Nm	B
	Nut	50 Nm	B




- Apply a uniform layer of grease **DuPont Lubricants Krytox® 205 GPL Standard Grade Grease** on the surfaces of shoulder bushings in contact with the rubber bushes.



- Apply 1 ml of grease **DuPont Lubricants Krytox® 205 GPL Standard Grade Grease** uniformly on the inner surfaces of the rubber bushes.


- Pressing into place by hand, fit the rubber bushes on the stabiliser bar in the same position and orientation noted during disassembly.
- Fit the stabiliser bar complete with rubber bushes.

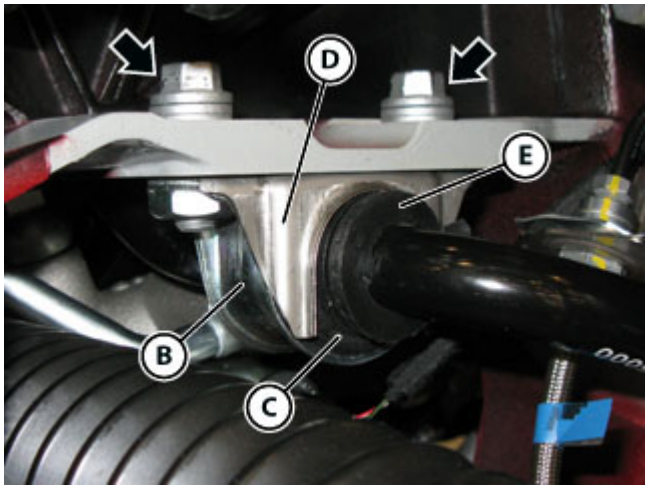

- Turning into the correct position with the arrow pointing towards the interior of the vehicle, fit the bracket (D) retaining the bush (C).
- Using a cloth moistened with heptane, thoroughly clean and degrease the outer surface of the rubber bush (C) and the inner surface of the bracket (B).
- Fit the bracket (B) correctly on the rubber bush (C).
- Insert a 1 mm thick shim between the rubber bush (C) and the respective shoulder bushing.
- Pre-tighten and definitively tighten the indicated screws.


Tightening torque	Nm	Class
Screw (pretightening)	9.5 Nm	B
Screw	30 Nm	B

- Remove the shim.
- Check that the grommet (E) is in contact with the bush (C).
- Remove any excess grease from the rubber bush (C) and bracket (B).

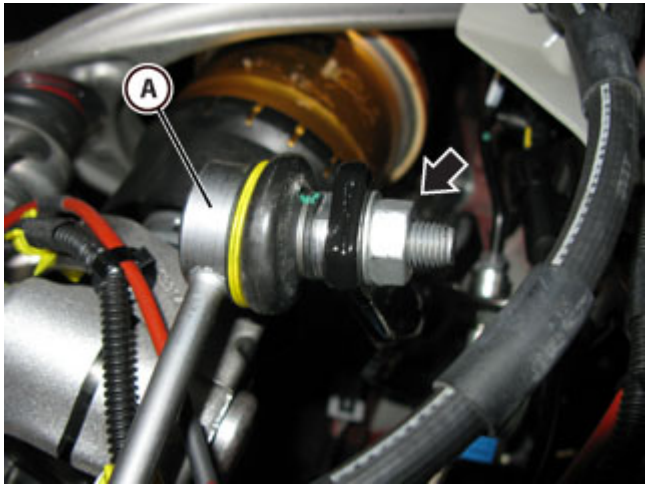

- Fit the joint of the tie-rod (A) onto the stabiliser bar.
- Tighten the indicated nut.


Tightening torque	Nm	Class
Nut	50 Nm	B

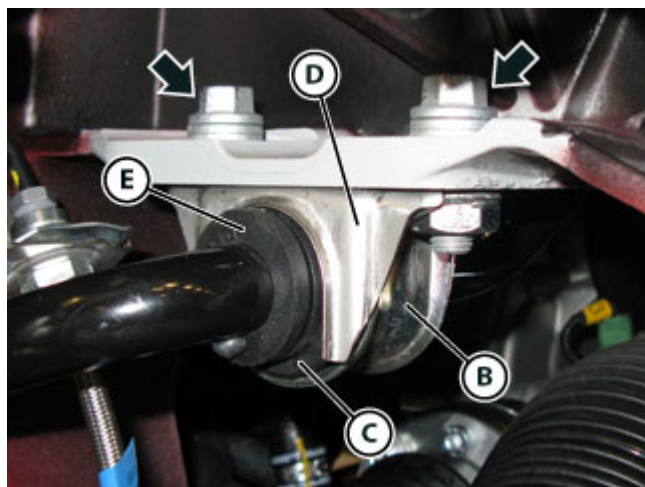

- Turning into the correct position with the arrow pointing towards the interior of the vehicle, fit the bracket (D) retaining the bush (C).
- Using a cloth moistened with heptane, thoroughly clean and degrease the outer surface of the rubber bush (C) and the inner surface of the bracket (B).
- Fit the bracket (B) correctly on the rubber bush (C).
- Insert a 1 mm thick shim between the rubber bush (C) and the respective shoulder bushing.
- Pre-tighten and definitively tighten the indicated screws.

		
Tightening torque	Nm	Class
Screw (pretightening)	9.5 Nm	B
Screw	30 Nm	B

- Remove the shim.
- Check that the grommet (E) is in contact with the bush (C).
- Remove any excess grease from the rubber bush (C) and bracket (B).

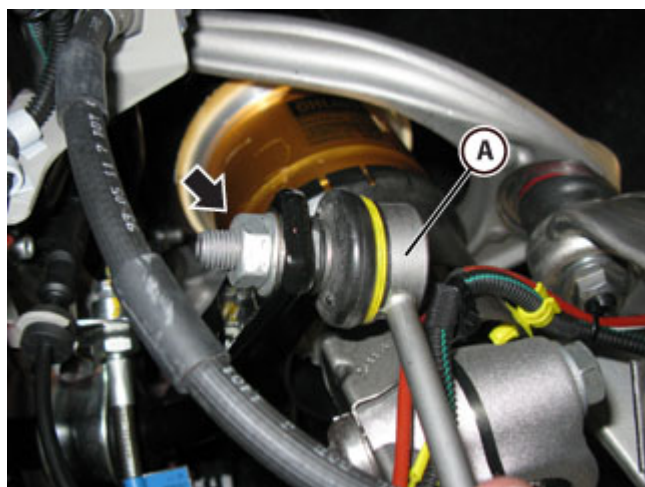


- Fit the joint of the tie-rod (A) onto the stabiliser bar.
- Tighten the indicated nut.

		
Tightening torque	Nm	Class
Nut	50 Nm	B


➤ Refit the steering box ( D5.04).

Removing the rear stabiliser bar

- Remove the rear bumper ( E3.04).
- Remove the silencers ( B7.05).

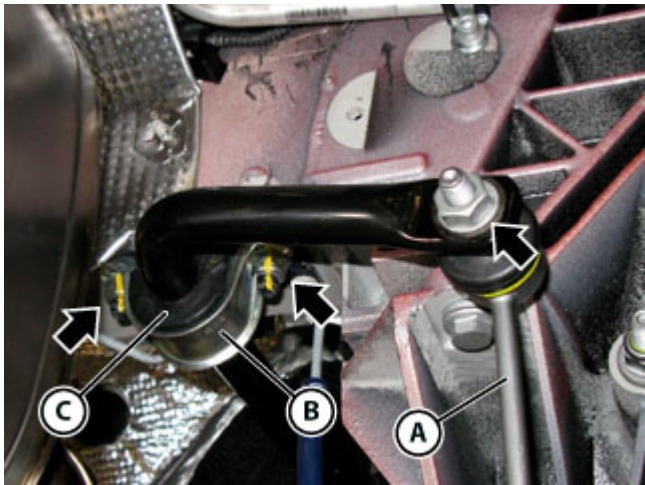

- Detach the joint of the tie-rod (A) from the stabiliser bar, undoing the indicated nut.
- Remove the bracket (B) from the rubber bush (C), undoing the indicated nuts.

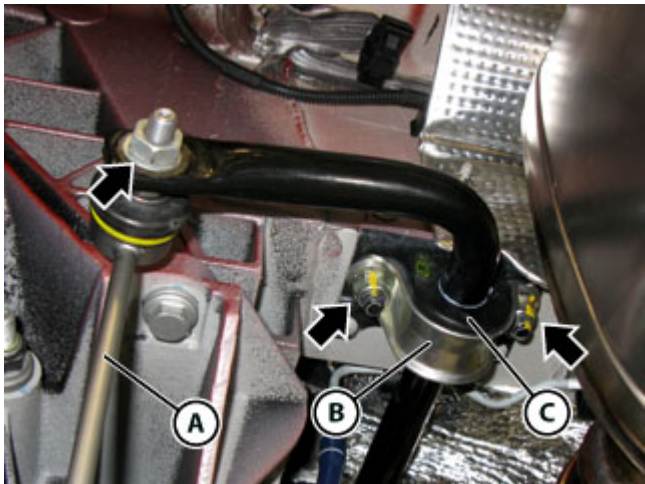

- Detach the joint of the tie-rod (A) from the stabiliser bar, undoing the indicated nut.
- Remove the bracket (B) from the rubber bush (C), undoing the indicated nuts.

- Remove the stabiliser bar, easing out from the rear of the vehicle over the single heat exchanger.
- Note the respective positions and orientation, then remove the rubber bushes from the stabiliser bar.

Refitting the rear stabiliser bar

			
Tightening torque		Nm	Class
Fastening the stabiliser bars	Screw (pretightening)	9.5 Nm	B
	Screw	30 Nm	B
	Nut (pretightening)	10 Nm	B
	Nut	30 Nm	A
Fastening the suspension tie-rods	Joint	50 Nm	B
	Nut	50 Nm	B




- Apply a uniform layer of grease **DuPont Lubricants Krytox® 205 GPL Standard Grade Grease** on the surfaces of shoulder bushings in contact with the rubber bushes.



- Apply 1 ml of grease **DuPont Lubricants Krytox® 205 GPL Standard Grade Grease** uniformly on the inner surfaces of the rubber bushes.

- Pressing into place by hand, fit the rubber bushes on the stabiliser bar in the same position and orientation noted during disassembly.
- Fit the stabiliser bar complete with rubber bushes.

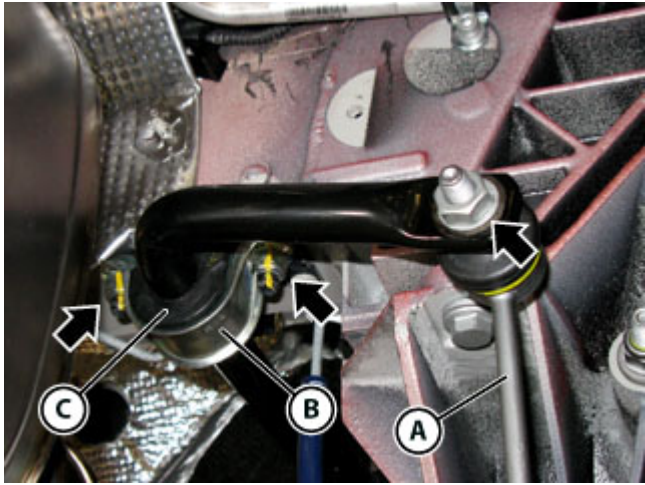


- Using a cloth moistened with heptane, thoroughly clean and degrease the outer surface of the rubber bush (C) and the inner surface of the bracket (B).
- Fit the bracket (B) correctly on the rubber bush (C).
- Pre-tighten and definitively tighten the indicated nuts.

		
Tightening torque	Nm	Class
Nut (pretightening)	10 Nm	B
Nut	30 Nm	A

- Remove any excess grease from the rubber bush (C) and bracket (B).
- Fit the joint of the tie-rod (A) onto the stabiliser bar and tighten the indicated nut.

		
Tightening torque	Nm	Class
Nut	50 Nm	B

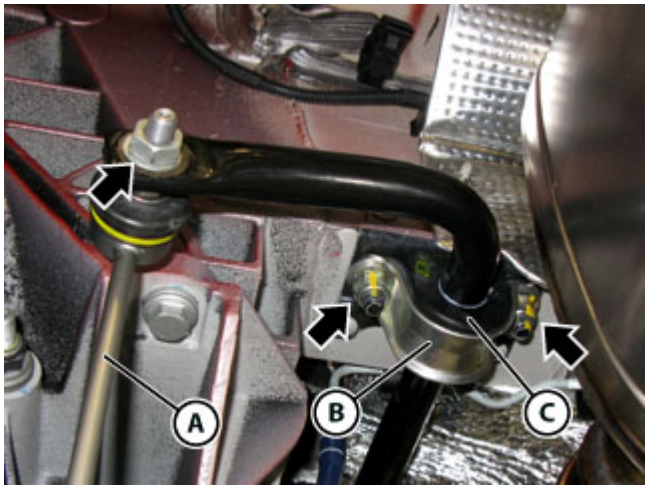

- Using a cloth moistened with heptane, thoroughly clean and degrease the outer surface of the rubber bush (C) and the inner surface of the bracket (B).
- Fit the bracket (B) correctly on the rubber bush (C).
- Pre-tighten and definitively tighten the indicated nuts.

		
Tightening torque	Nm	Class
Nut (pretightening)	10 Nm	B
Nut	30 Nm	A


- Remove any excess grease from the rubber bush (C) and bracket (B).
- Fit the joint of the tie-rod (A) onto the stabiliser bar and tighten the indicated nut.

		
Tightening torque	Nm	Class
Nut	50 Nm	B

- Refit the silencers ( B7.05).
- Refit the rear bumper ( E3.04).

Replacing the front suspension tie-rods

			
Tightening torque		Nm	Class
Fastening the suspension tie-rods	Joint	50 Nm	B
	Nut	50 Nm	B

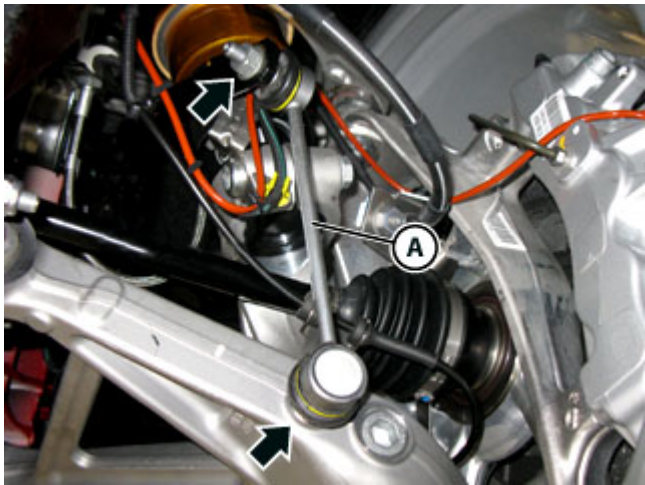

- Undo the indicated nut.
- Undo the indicated joint.
- Remove the tie-rod **(A)** and replace.
- Fit the new tie-rod **(A)**.
- Tighten the indicated joint.


		
Tightening torque	Nm	Class
Joint	50 Nm	B

- Tighten the indicated nut.

		
Tightening torque	Nm	Class
Nut	50 Nm	B

Replacing the rear suspension tie-rods

			
Tightening torque		Nm	Class
Fastening the suspension tie-rods	Joint	50 Nm	B
	Nut	50 Nm	B

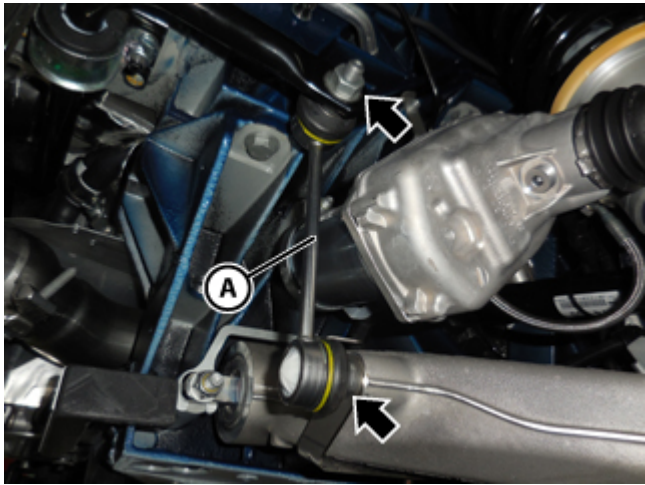

- Undo the indicated nut.
- Undo the indicated joint.
- Remove the tie-rod **(A)** and replace.
- Fit the new tie-rod **(A)**.
- Tighten the indicated joint.

		
Tightening torque	Nm	Class
Joint	50 Nm	B

- Tighten the indicated nut.

		
Tightening torque	Nm	Class
Nut	50 Nm	B

