



GTC4Lusso USA - Vehicle set-up - Latest Update: 2021-01-26

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.

Copyright by Ferrari S.p.A. - P.IVA 00159560366

D4.06 Vehicle set-up

Checking vehicle set-up

- Check tightness of wheel fasteners.
- Check that the tyre pressure is correct.
- Check that the steering box functions correctly.
- Check that the suspension components function correctly.
- Place the vehicle on a wheel alignment lift, **filled with all fluids as necessary** and with the electric parking brake engaged.

 **For this procedure**, the fuel tank must be full and all fluids must be filled to the correct levels.

- Using suitable equipment, check that the vehicle setup parameters comply with the specifications given in the "Vehicle Setup Parameter Check Form".
- Adjust the vehicle suspension/wheel alignment ( [D4.06](#)).

 Perform if the vehicle setup parameters measured do not comply with the specifications given in the "Vehicle Setup Parameter Check Form".

Adjusting the vehicle suspension/wheel alignment



Tightening torque		Nm	Class
Fastening toe-in tie-rods	Nut	60 Nm	B

➤ Check the vehicle set-up ( [D4.06](#)).

 The vehicle parameters specified in the "Vehicle Setup Parameter Check Form" are given in chapter **A3.24**.

➤ Remove the flat undertray sections ( [E3.13](#)).


 Remove the rear flat undertray section.

Front




Adjusted vehicle height

- Check that the distance between the spot-facing of the masterpoint and the ground is as specified.
-  The horizontal line in the image represents the ground line.
- If the ground clearance of the vehicle at the masterpoint is not as specified, adjust the shock absorber length as described in chapter **D4.04**.

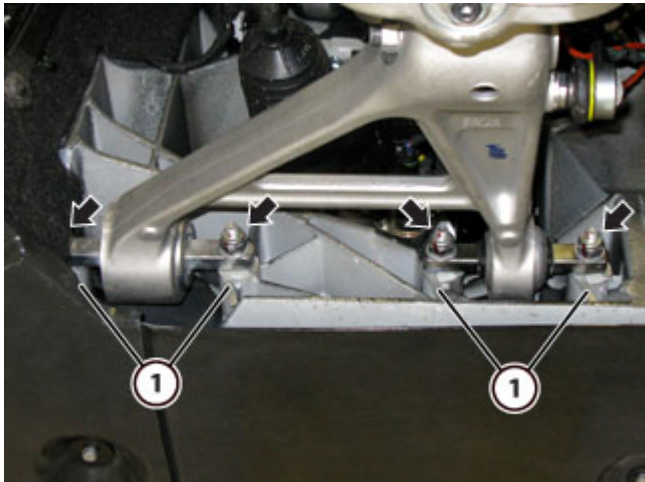

Camber

- Check that the wheel camber value is as specified.
- If the wheel camber value is not as specified, loosen the indicated nuts as described in chapter **D4.02** and add or remove shims as necessary **(1)** to bring the wheel camber value within the specified range.
- Tighten the indicated nuts as described in chapter **D4.02**.

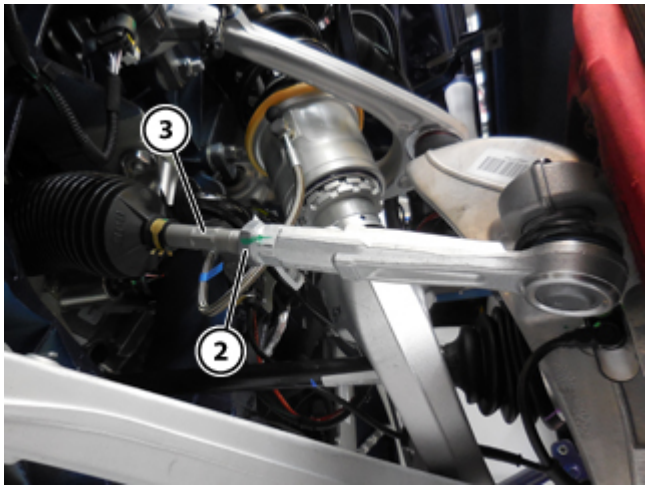

Toe-in

- Check that the toe value is as specified.
- If the toe value is not as specified, ensure that the steering box is centred and that the steering wheel is perfectly straight, placing a tool with a spirit level on the steering wheel itself.
- Loosen the nut **(2)** and turn the tie-rod **(3)** to bring the toe value within the correct range.
- Tighten the nut **(2)**.


		
Tightening torque	Nm	Class
Nut	60 Nm	B

Rear



Adjusted vehicle height

- Check that the distance of the masterpoint from the ground is as specified.
- The horizontal line in the image represents the ground line.
- If the ground clearance of the vehicle at the masterpoint is not as specified, adjust the shock absorber length as described in chapter **D4.04**.

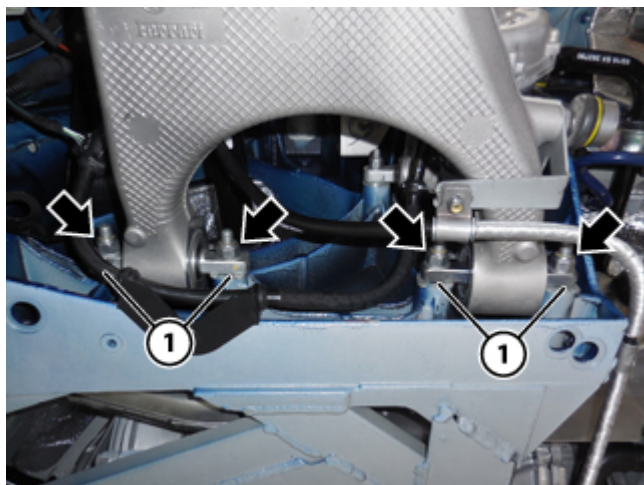

Camber

- Check that the wheel camber value is as specified.
- If the wheel camber value is not as specified, loosen the indicated nuts as described in chapter **D4.02** and add or remove shims as necessary **(1)** to bring the wheel camber value within the specified range.
- Tighten the indicated nuts as described in chapter **D4.02**.



Toe-in



The electric rear toe adjustment tie-rods are not mechanically adjustable.

- Check that the toe value is as specified.
- If the toe-in value is not correct, adjust with the DEIS diagnostic tester without performing any mechanical adjustment.
- Connect the DEIS tester to the diagnostic socket ( F2.09).



Perform the cycle "**10 - Electronic Toe Adjustment**".



The DEIS diagnostic tester must be used to adjust rear toe-in; to read/check the toe-in value, see the monitor of the wheel alignment machine.

- Adjust the toe-in value with the DEIS diagnostic tester.



After toe-in adjustment, the system automatically performs a Key-OFF / Key-ON cycle.

- Check again that the toe-in value is as specified.
- If the toe-in value is not correct, adjust again with the DEIS diagnostic tester without performing any mechanical adjustment.