




GTC4Lusso USA - Vehicle lift system (optional) - Latest Update: 2021-01-26

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.

Copyright by Ferrari S.p.A. - P.IVA 00159560366

D4.08 Vehicle lift system (optional)

System layout

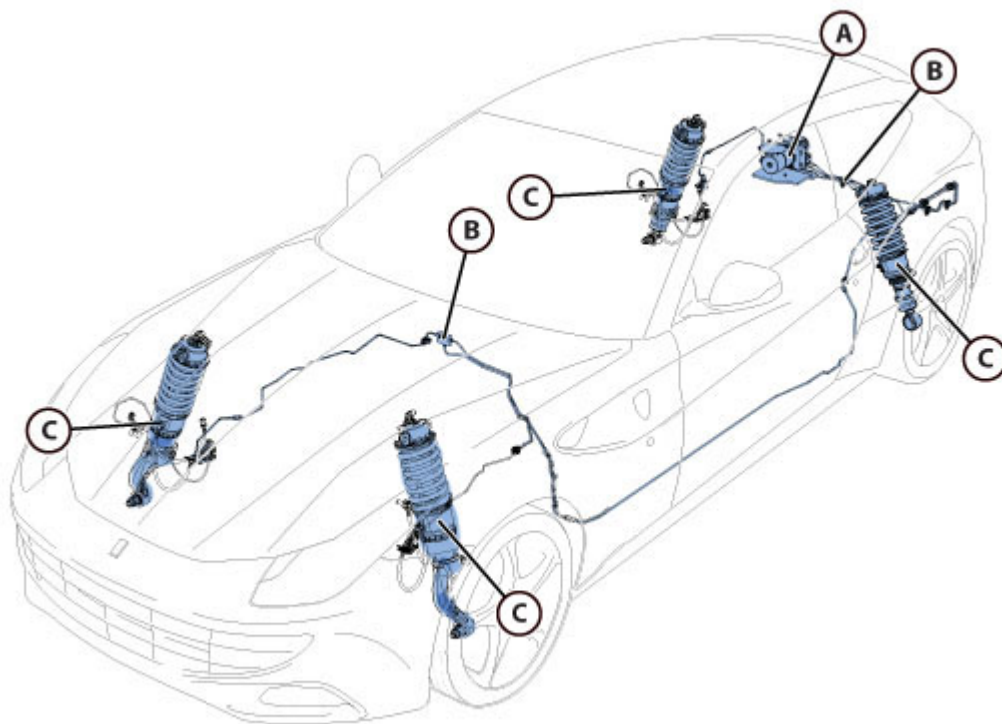

- A** - Electric pump / Reservoir
- B** - Distributor blocks
- C** - Actuators

"Lift" system function



The system is not designed to remain active with the engine switched off while the vehicle is parked. If the vehicle is switched off with the lift function active, the vehicle lowers after 15 seconds.



Do not use the vehicle lift to park the vehicle on obstacles (e.g. kerbs) as the underside of the vehicle may come into contact with the obstacle and be damaged when the lift function deactivates.




The "Lift" system uses the front and rear shock absorbers to raise the vehicle by approximately **40 mm**, allowing the vehicle to be driven on particularly poor road surfaces or in snowy conditions, and allow access to garages or steep ramps, without damaging the vehicle itself.

The "Lift" system may be activated with the engine on and at speeds not greater than **40 Km/h**, pressing the relative button **(A)** on the dashboard to the right of the steering wheel.

At speeds above 40 Km/h, the "Lift" system is inhibited. If already active, the system deactivates automatically when the vehicle speed exceeds 40 Km/h.

In the event of engine malfunction, the "Lift" system may still be activated by pressing and holding the relative button for **10 seconds**.

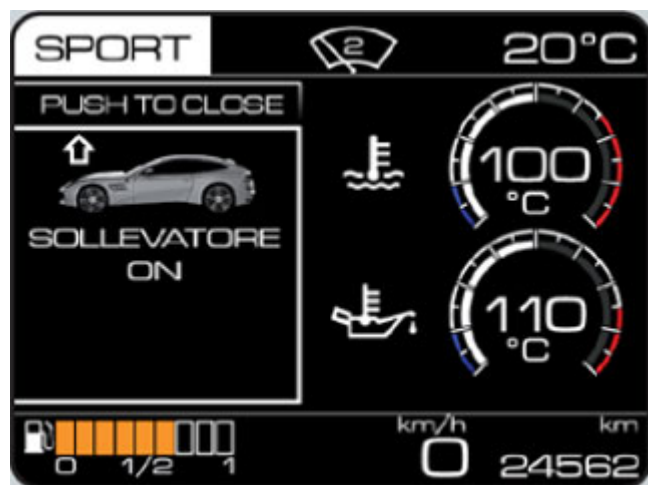

While the "Lift" system is raising the front of the vehicle, the specific indicator flashes and the TFT display displays the vehicle symbol with an arrow pointing upward, together with the specific message **"LIFT moving"**.

While the system is active (vehicle raised completely), the TFT display displays the vehicle symbol with an arrow pointing upward with the specific message **"LIFT ON"** for 5 seconds, accompanied by a warning sound.

The indicator on the dial remains lit constantly until the function is deactivated.

If the driver turns the ignition switch to 0 while the system is active, the TFT display shows the specific message **"LIFT ON. Set Front Lift to OFF"**.

If the driver does not deactivate the function, it is deactivated automatically 15 seconds after the engine is switched off.

While the "Lift" system is lowering the front of the vehicle, the specific indicator flashes and the TFT display displays the vehicle symbol with an arrow pointing downward, together with the specific message **"LIFT moving"**.

The symbol and message are displayed until the manoeuvre is complete and the function is deactivated (vehicle completely lowered).

Removing the lift system electric pump




Only hold the lift system electric pump by the body of the pump itself to lift and manoeuvre.


Holding the electric pump unit by the reservoir may damage the pump itself.

DO NOT hold the electric pump unit by the reservoir.

- Disconnect the battery ( F2.01).
- Remove the flat undertray sections ( E3.13).
-  Remove the rear flat undertray section.

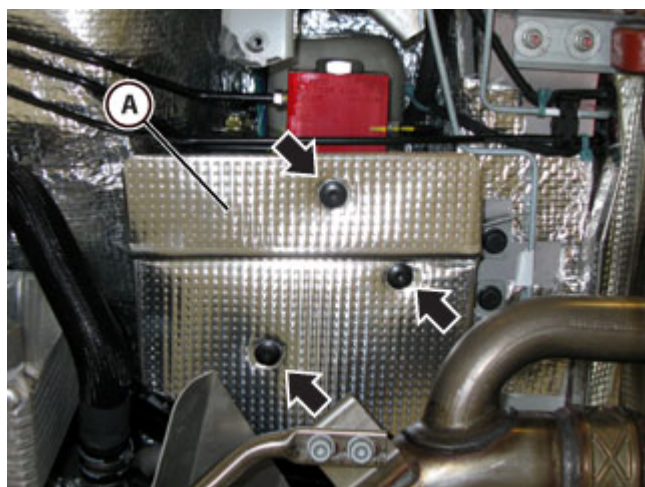


- Undo the screws indicated.
- Remove the heat shield (A).

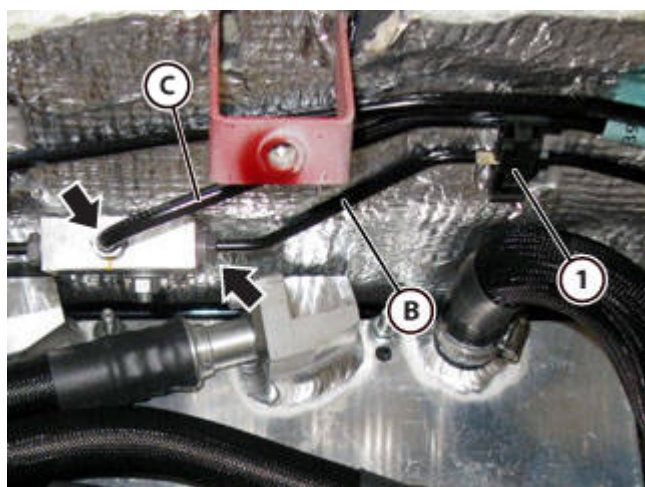


Take all precautions necessary to collect any escaping oil when disconnecting the unions.

- Disconnect the pipes (B) and (C), undoing the indicated unions.
- Detach the pipe (B) from the clip (1).

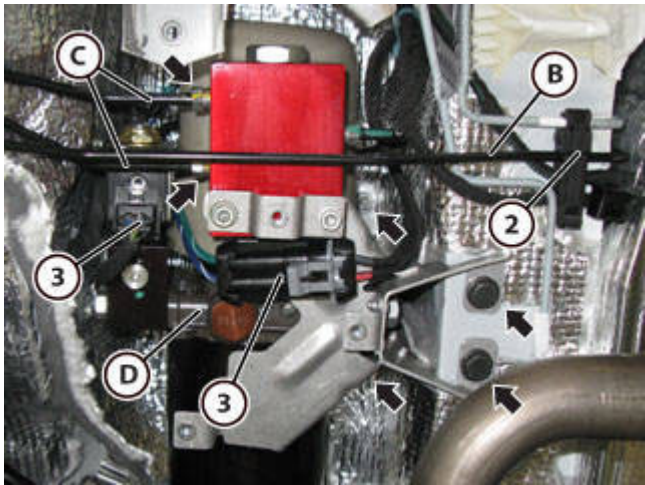

- Detach the pipe **(B)** from the clip **(2)**.
- Disconnect the connectors **(3)**.
-  Take all precautions necessary to collect any escaping oil when disconnecting the unions.
- Disconnect the pipes **(C)**, undoing the indicated unions.
- Undo the screws and nuts indicated.

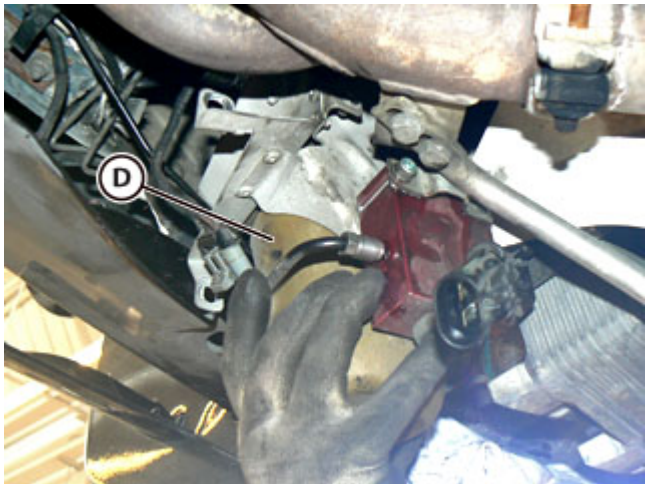


-  When handling the electric pump, take care not to damage the rear bumper.
- Remove the electric pump **(D)**, complete with the relative mounting bracket.

Refitting the lift system electric pump


			
Tightening torque		Nm	Class
Fastening the lift system electric pump	Screw	24 Nm	B
	Nut	9 Nm	B
Fastening "Lift" system pipe union on front and rear suspension	Union	16 Nm	B
Fastening the lift system electric pump heat shield	Screw	5 Nm	B

-  Only hold the lift system electric pump by the body of the pump itself to lift and manoeuvre. Holding the electric pump unit by the reservoir may damage the pump itself.
DO NOT hold the electric pump unit by the reservoir.

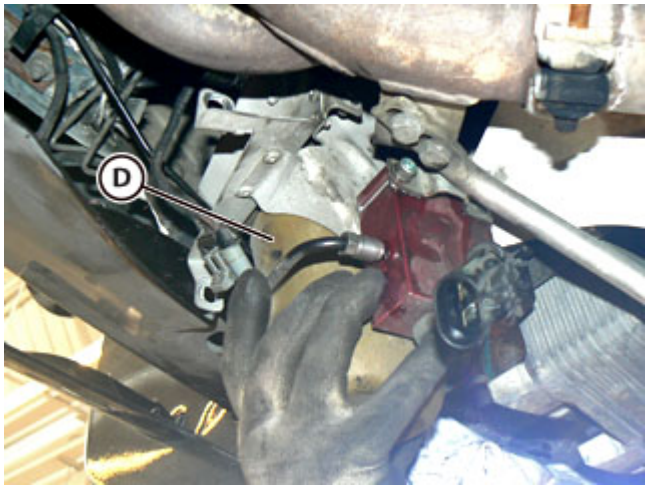

When handling the electric pump, take care not to damage the rear bumper.

- Fit the electric pump (D), complete with the relative mounting bracket, in the relative seat.

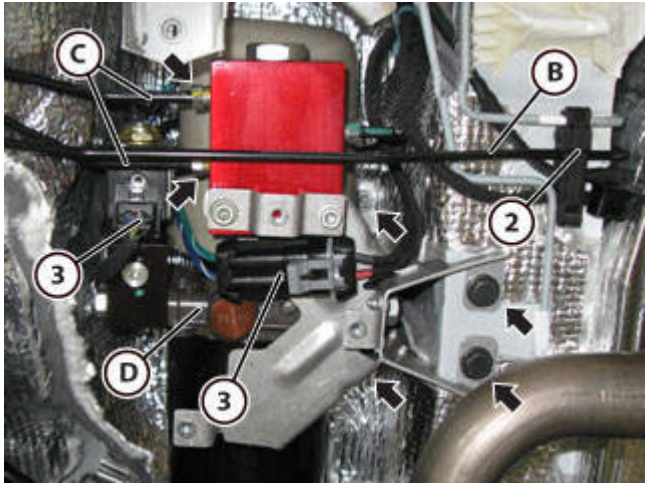

- Tighten the screws and nuts indicated.



Tightening torque	Nm	Class
Screw	24 Nm	B
Nut	9 Nm	B

- Connect the pipes (C), tightening the indicated unions.





Tightening torque	Nm	Class
Union	16 Nm	B

- Connect the connectors (3).
- Attach the pipe (B) to the clip (2).
- Attach the pipe (B) to the clip (1).
- Connect the pipes (B) and (C), tightening the indicated unions.



Tightening torque	Nm	Class
Union	16 Nm	B

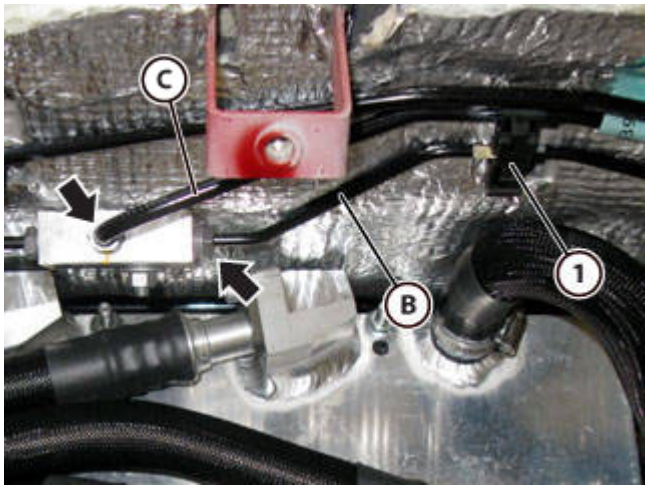

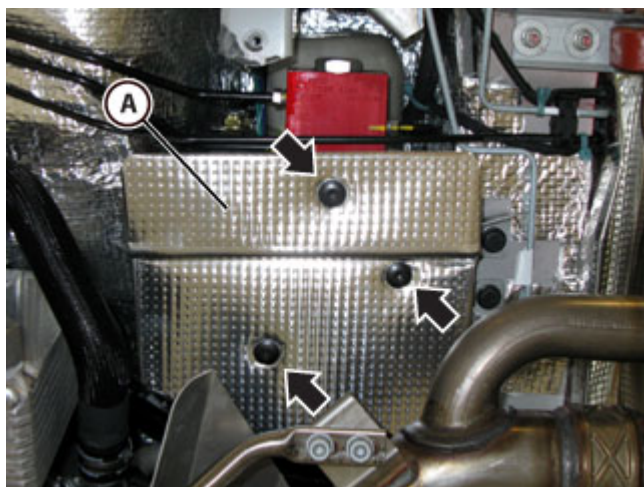

- Fit the heat shield **(A)**.
- Tighten the screws indicated.

		
Tightening torque	Nm	Class
Screw	5 Nm	B


- Refit the flat undertray sections ( **E3.13**).
- Refit the rear flat undertray section.
- Connect the battery ( **F2.01**).
- Fill and bleed the suspension "Lift" system ( **D4.08**).

Filling and bleeding the suspension "Lift" system




Always use fresh oil of the recommended type and in the quantity indicated, taken from sealed containers.


- Park the vehicle on a flat and level surface.
- Remove the luggage compartment trim panels ( **E4.06**).
- Remove the tool kit trim panel in the luggage compartment.
- Remove the complete wheels ( **D2.01**).

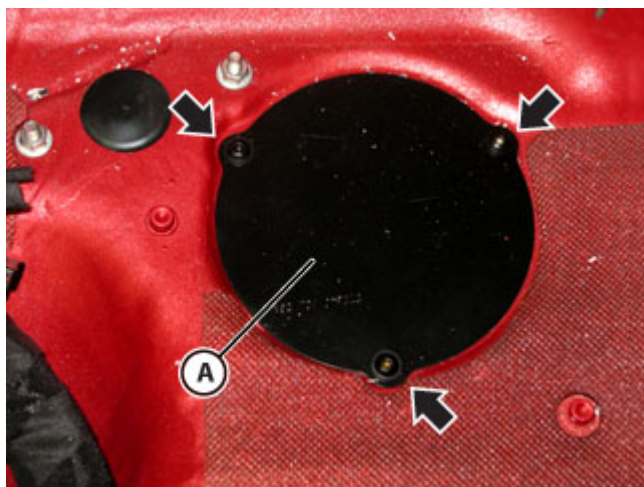


- Undo the screws indicated.
- Remove the cover **(A)**.

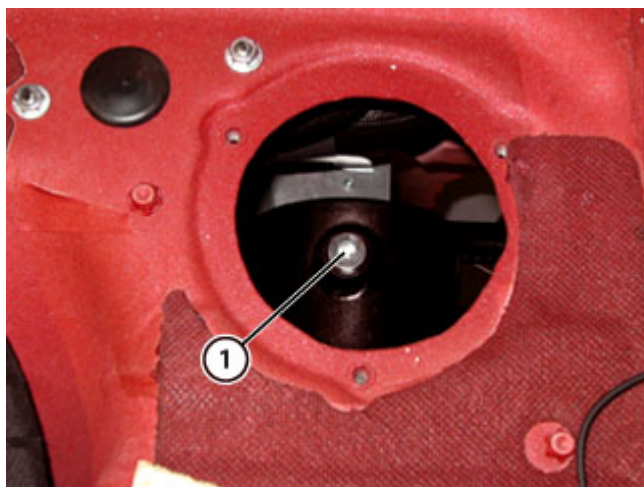

- Undo the cap (1).

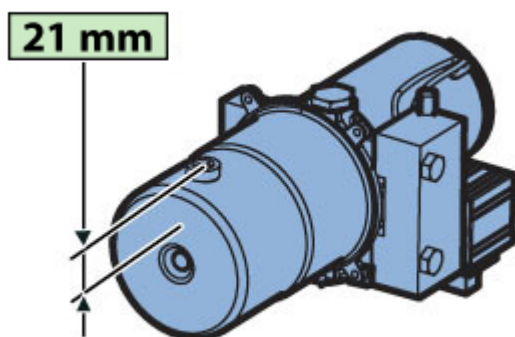


- Pour the specified fluid into the tank up to the **MAX** level (21 mm from the bottom of the cap on the tank).

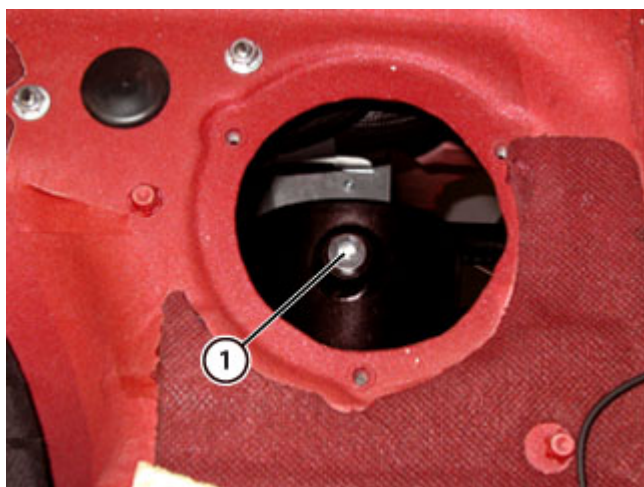

- Tighten the cap (1).

- Turn the ignition switch to **Key-ON**.
- Start the engine.
- Wait at least **10 seconds**.
- Connect the DEIS tester to the diagnostic socket (🔧 F2.09).
- Using the DEIS diagnostic tester perform the **"NSV vehicle lift test"** cycle **5 consecutive times**.
- Check the fluid level in the "Lift" hydraulic system (🔧 D4.08).
- Using the DEIS diagnostic tester perform the **"NSV vehicle lift test"** cycle **5 consecutive times**.
- Check the fluid level in the "Lift" hydraulic system (🔧 D4.08).

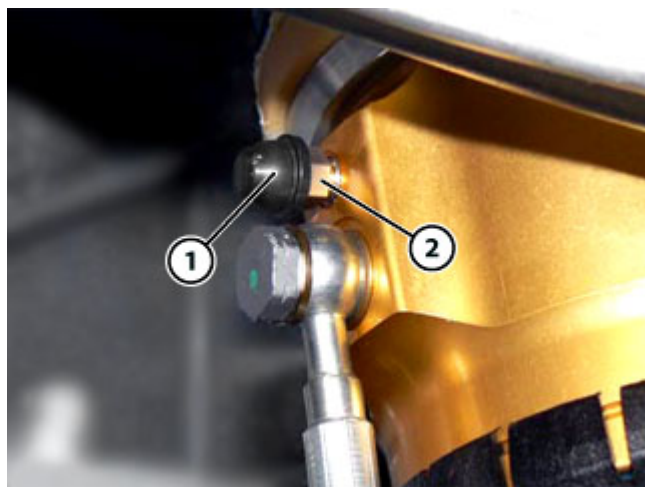

The following procedures must always be repeated on each individual shock absorber.

- Prise off and remove the protective cap (1).
- Connect a suitable transparent rubber pipe to the bleed union (2).
- Place the other end of the transparent rubber pipe in a suitable container for collecting the fluid.
- With the DEIS diagnostic tester, activate the **"NSV bleeding"** cycle.
- Wait for the electric pump to activate fully.
- Loosen the bleed union (2).



DO NOT bleed more than 100 ml of fluid from each shock absorber.

As the lift system tank only has a small capacity, draining excessive fluid from the system would cause air to be aspirated into the system and damage the electric pump.


- Repeat the bleed cycle as many times as necessary until the fluid draining from the transparent rubber pipe contains no air bubbles.
- Tighten the bleed union (2).
- Disconnect the transparent rubber pipe from the bleed union (2).
- Fit the protective cap (1).
- With the DEIS diagnostic tester, deactivate the **"NSV bleeding"** cycle.

- Check the fluid level in the "Lift" hydraulic system (🔧 D4.08).
- Refit the complete wheels (🔧 D2.01).
- Refit the luggage compartment trim panels (🔧 E4.06).
- Refit the tool kit trim panel in the luggage compartment.


Checking the fluid level in the "Lift" hydraulic system

Tightening torque		Nm	Class
Fastening the lift system electric pump tank cap	Plug	7 Nm	B
Fastening the lift system inspection hatch cover	Screw	4 Nm	B


- Remove the luggage compartment trim panels (🔧 E4.06).
- Remove the tool kit trim panel in the luggage compartment.

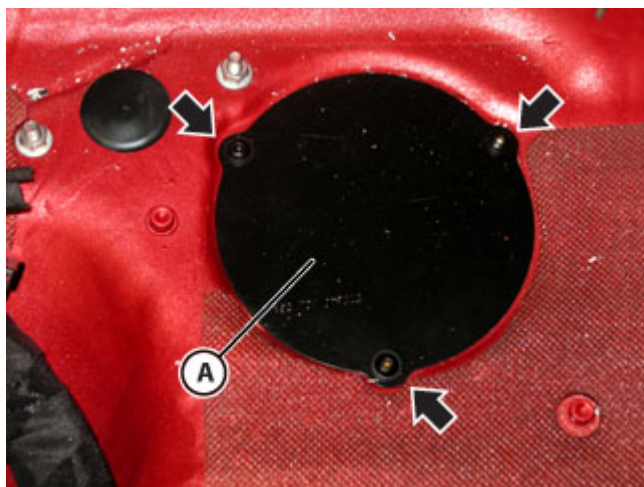

- Undo the screws indicated.
- Remove the cover (**A**).

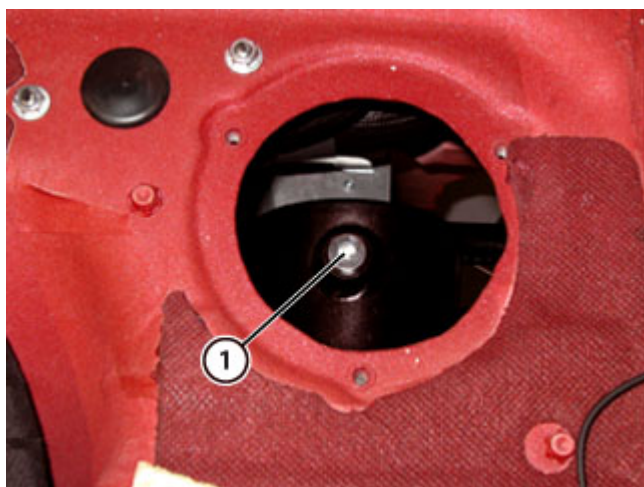

- Undo the cap (**1**).

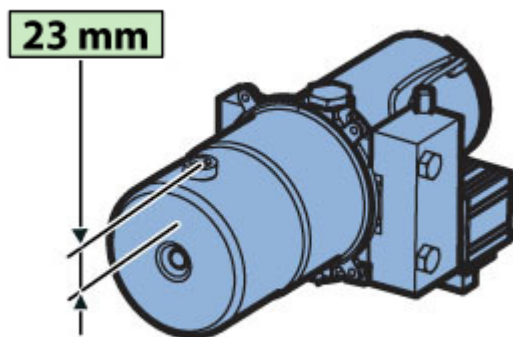
**CAUTION**

Do not exceed the maximum level. Fluid may escape from the system if overfilled.

**CAUTION**


Do not let the level drop below the minimum level indicated. An insufficient fluid level may cause functional problems.

- Check that the fluid level in the tank is **23 mm** from the bottom of the cap on the tank.
- If the fluid is near the **MIN** level (**26 mm** from the bottom of the cap on the tank), top up with the quantity of fluid necessary to reach the correct level.

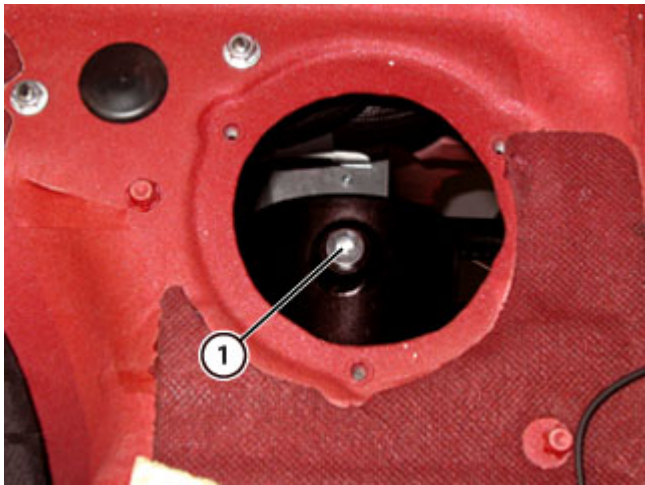

- Tighten the plug **(1)**.

		
Tightening torque	Nm	Class
Plug	7 Nm	B

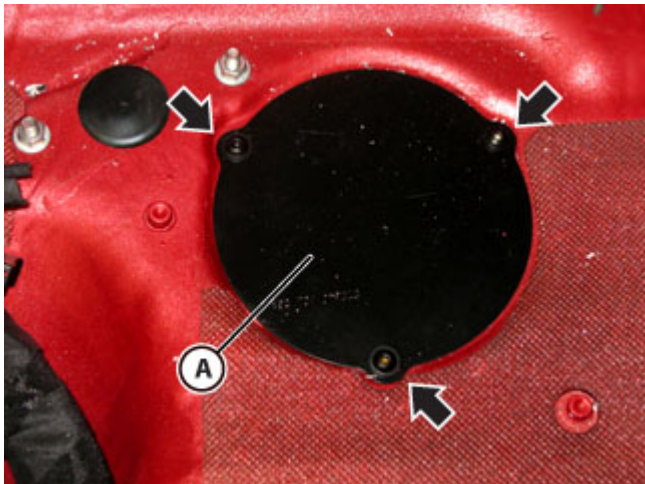

- Fit the cover **(A)**.
- Tighten the screws indicated.

		
Tightening torque	Nm	Class
Screw	4 Nm	B

- Refit the luggage compartment trim panels ( E4.06).
-  Refit the tool kit trim panel in the luggage compartment.