



GTC4Lusso USA - Power steering fluid tank - Latest Update: 2021-01-26

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.

Copyright by Ferrari S.p.A. - P.IVA 00159560366

D5.02 Power steering fluid tank

Removing the power steering fluid tank




CAUTION

The oil contained in the hydraulic steering system is harmful to the eyes and skin and may also damage the vehicle bodywork.



Pour the oil drained from the system into a container and seal it. DO NOT dispose of used oil in the environment.

- Remove the engine compartment cosmetic shields ( E3.14).
-  Remove the central cosmetic shield.
- Unscrew and open the tank cap.
- Use a suitable syringe to aspirate the fluid completely from the tank.

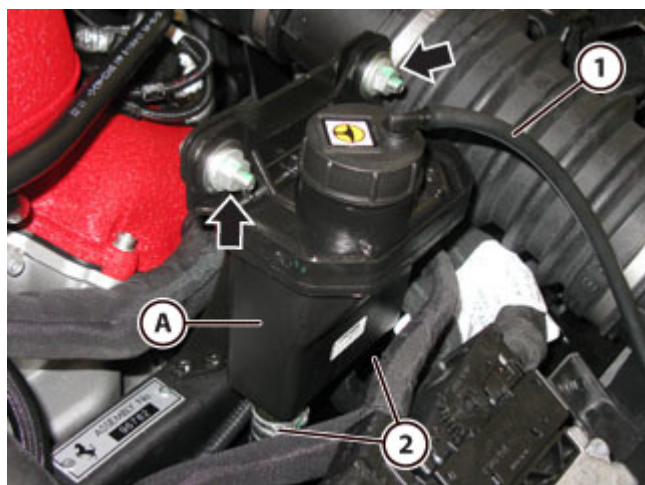


- Disconnect the vent pipe (1).
- Undo the nuts indicated.
- Lift the power steering fluid tank (A)
- Disconnect the pipes (2), loosening the respective clamps.
- Remove the power steering tank (A).

Refitting the power steering tank

			
Tightening torque		Nm	Class
Fastening the power steering fluid reservoir to the bracket	Nut	16 Nm	B



The oil contained in the hydraulic steering system is harmful to the eyes and skin and may also damage the vehicle bodywork.

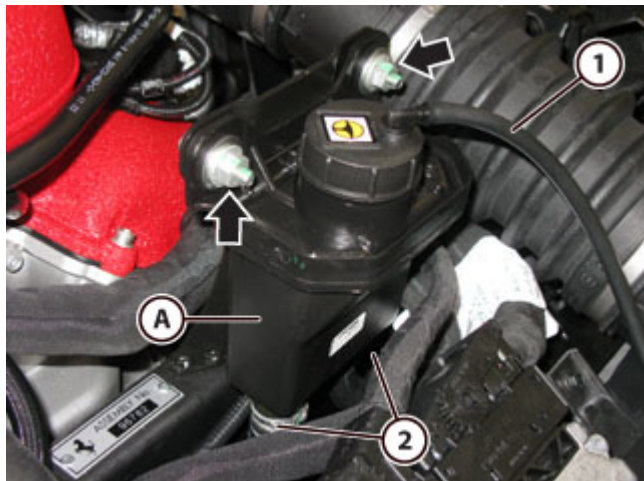

- Connect the pipes (2) and fasten the respective new clamps.
- Fit the power steering tank (A).
- Tighten the nuts indicated.

		
Tightening torque	Nm	Class
Nut	16 Nm	B

- Connect the vent pipe (1).

- Fill the power steering system ( D5.08).
- Refit the engine compartment cosmetic shields ( E3.14).
- Refit the central cosmetic shield.