



GTC4Lusso USA - Power steering pump - Latest Update: 2021-01-26


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.

Copyright by Ferrari S.p.A. - P.IVA 00159560366


D5.03 Power steering pump

Removing the power steering pump

- Remove the ancillary belt ( A3.14).
- Drain the power steering system ( D5.08).

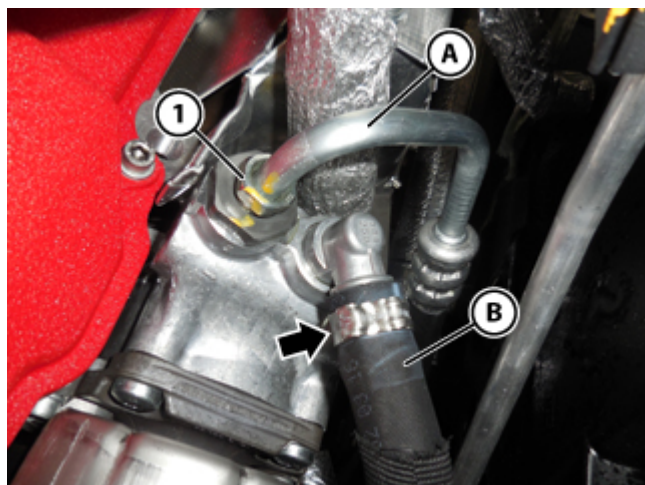


- Undo the union (1).
- Disconnect the pipe (A).
- Remove the clamp indicated.
- Disconnect the pipe (B).

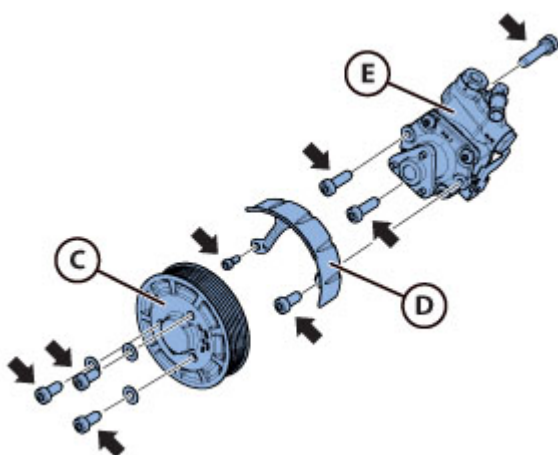

- Remove the pulley (C), undoing the indicated screws.
- Remove the cover (D), undoing the indicated screws.
- Remove the pump (E), undoing the indicated screws.

Refitting the power steering pump

			
Tightening torque		Nm	Class
Fastening the power steering pump	Screw	24 Nm	A
Fastening the power steering pump pulley	Screw	20 Nm	A
Fastening steering pump pipe	Union	37 Nm	B

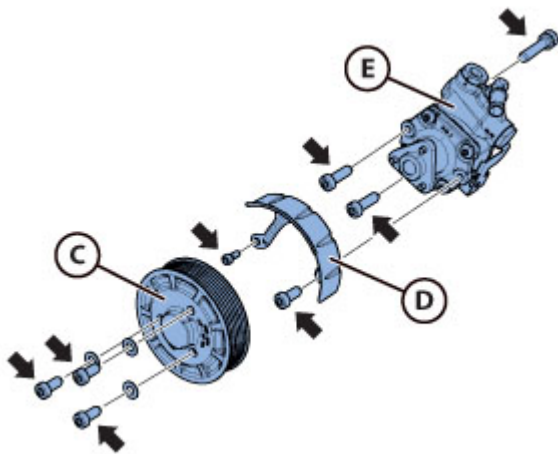


- Fit the pump (E) and tighten the indicated screws.

		
Tightening torque	Nm	Class
Screw	24 Nm	A

- Fit the cover (D) and tighten the indicated screws.
- Fit the pulley (C) and tighten the indicated screws.

		
Tightening torque	Nm	Class
Screw	20 Nm	A

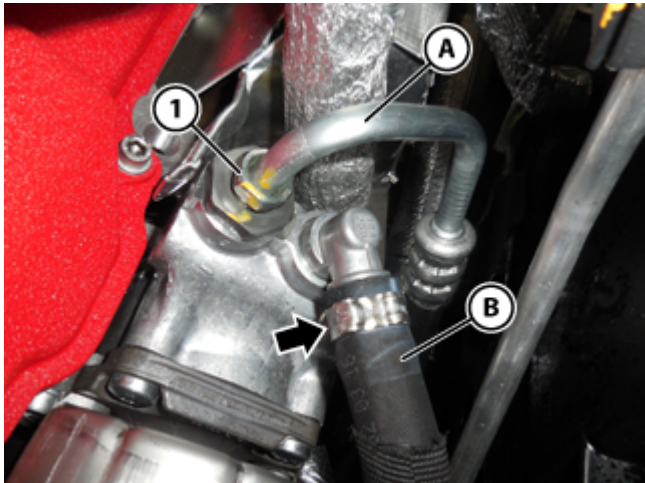

- Connect the pipe (B).
- Fit and tighten a new clamp as indicated.
- Connect the pipe (A).
- Tighten the union (1).

		
Tightening torque	Nm	Class
Union	37 Nm	B

- Refit the ancillary belt ( A3.14).
- Fill the power steering system ( D5.08).