



GTC4Lusso USA - Steering box - Latest Update: 2021-01-26


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.

Copyright by Ferrari S.p.A. - P.IVA 00159560366


D5.04 Steering box

Removing the steering box

- Disconnect the battery ( F2.01).
- Remove the complete wheels ( D2.01).
 -  Remove the front wheels.
- Remove the flat undertray sections ( E3.13).
 -  Remove the central flat undertray section.
- Drain the power steering system ( D5.08).

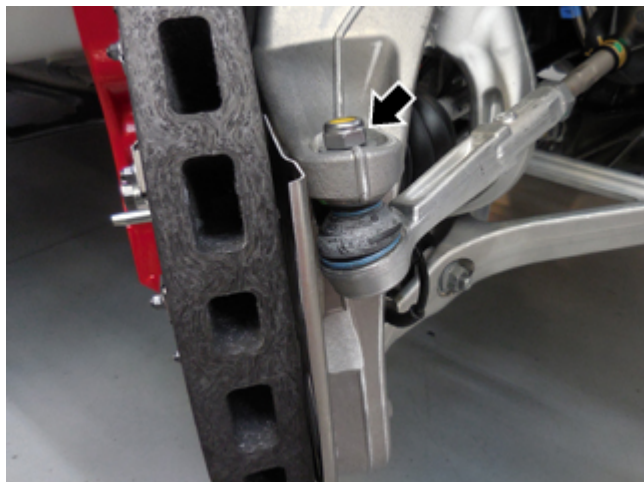


- Undo the indicated nut.
- Remove the steering tie-rod pin from the hub carrier.

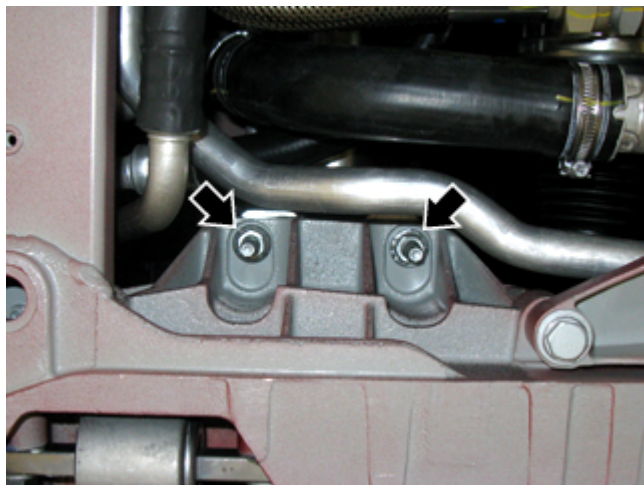


- Undo the indicated nuts, retrieving the respective screws.




- Undo the indicated nut.
- Remove the steering tie-rod pin from the hub carrier.

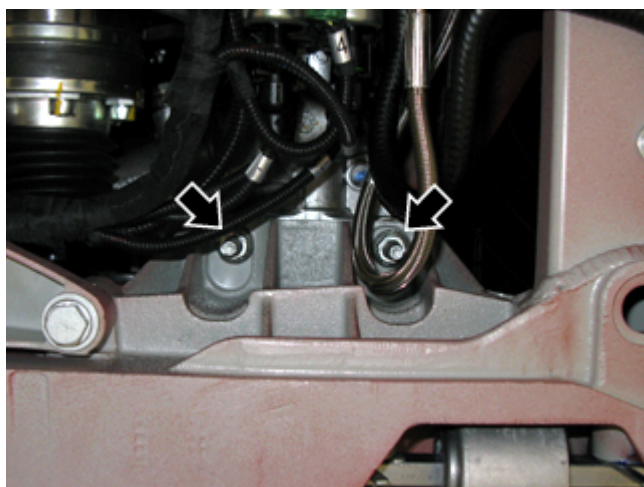


- Undo the indicated nuts, retrieving the respective screws.

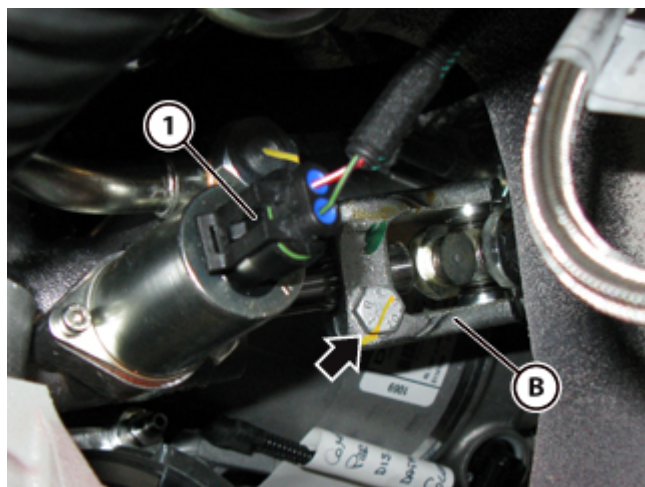

- Disconnect the connector **(1)**.
- Undo the indicated screw.
- Disconnect the joint **(B)** from the steering box.

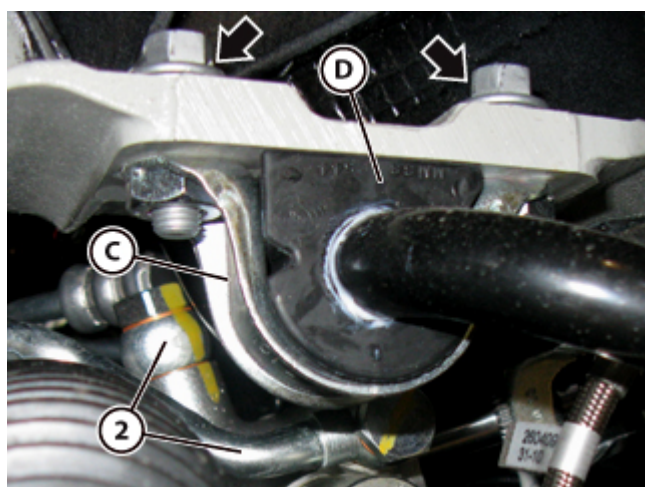

- Undo the screws indicated.
- Remove and retrieve the bracket **(C)** and the bushing **(D)**.
- Disconnect the pipes **(2)**, undoing the respective unions.

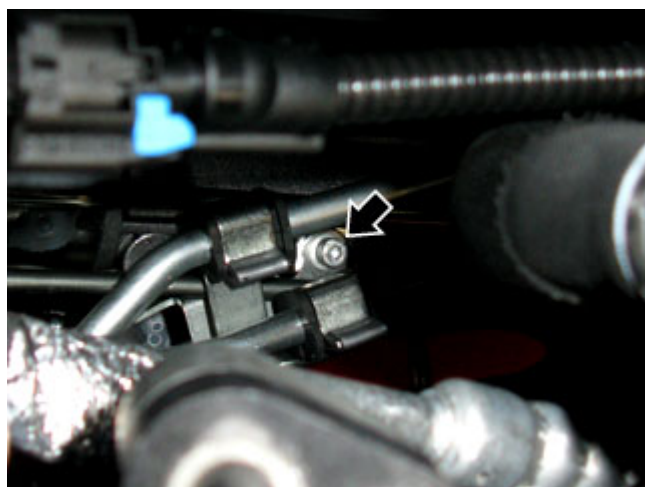

- Undo the indicated screw.
- Move the hydraulic pipe mounting bracket out of the way.



- Undo the indicated nut.
- Move the hydraulic pipe mounting bracket out of the way.

- Remove the steering box, easing out from the driver side wheel bay.

Refitting the steering box


			
Tightening torque		Nm	Class
Fastening steering box pipes	Nut	9 Nm	B
	Screw	5 Nm	B
Fastening pipes to steering box	Union	35 Nm	B
Fastening the stabiliser bars	Screw (pretightening)	9.5 Nm	B
	Screw	30 Nm	B
	Nut (pretightening)	10 Nm	B
	Nut	30 Nm	A
Fastening steering column	Screw	30 Nm	B
Fastening steering box	Nut (pretightening)	25 Nm	B
	Nut	60 Nm	A
Fastening the steering tie-rods	Nut (pretightening)	40 Nm	A
	Nut	40 Nm	A

- Fit the steering box, installing from the driver side wheel bay.




- Fit the hydraulic pipe mounting bracket.
- Tighten the indicated nut.

		
Tightening torque	Nm	Class
Nut	9 Nm	B

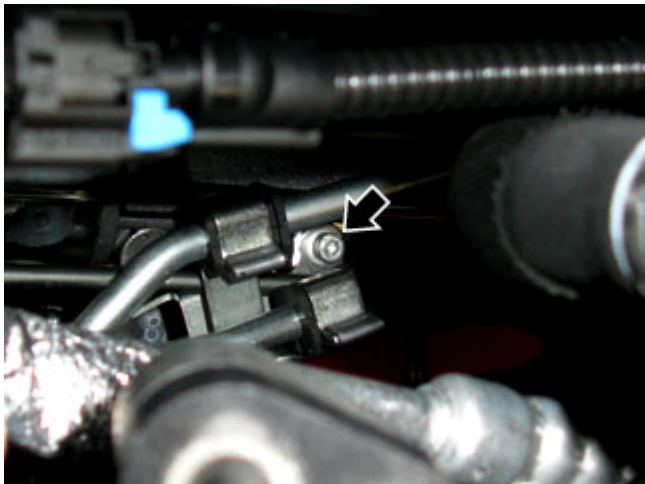

- Fit the hydraulic pipe mounting bracket.
- Tighten the indicated screw.

		
Tightening torque	Nm	Class
Screw	5 Nm	B

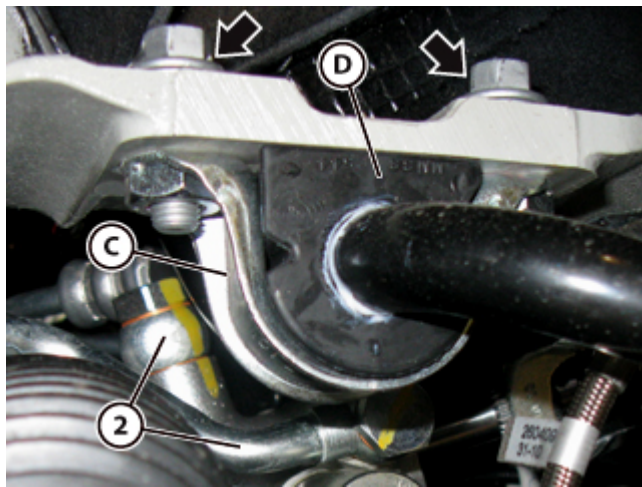


- Connect the pipes (2), tightening the respective unions.

		
Tightening torque	Nm	Class
Union	35 Nm	B

- Apply a uniform film of **DuPont Lubricants Krytox® 205 GPL Standard Grade Grease** on the surface of the shoulder bushing in contact with the rubber bush (D).
- Apply **1 ml** of grease **DuPont Lubricants Krytox® 205 GPL Standard Grade Grease** on the inner surface of the rubber bush (D).
- Using a cloth moistened with heptane, thoroughly clean and degrease the outer surface of the rubber bush (D) and the inner surface of the bracket (C).
- Fit the bracket (C) correctly on the rubber bush (D).
- Insert a **1 mm** thick shim between the bush (D) and the respective shoulder bushing.
- Fit the bushing (D) and the mount (C).
- Pre-tighten and definitively tighten the indicated screws.

		
Tightening torque	Nm	Class
Screw (pretightening)	9.5 Nm	B
Screw	30 Nm	B


- Remove the shim.
- Remove any excess grease from the rubber bush (D) and from the mount (C).

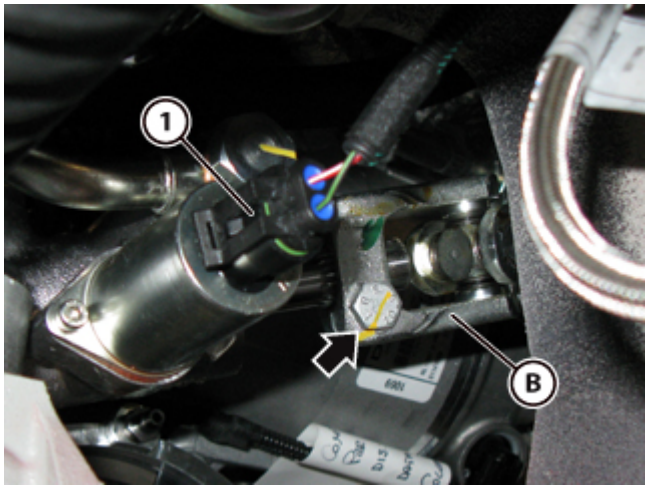

- Connect the joint **(B)** to the steering box.
- Tighten the indicated screw.


		
Tightening torque	Nm	Class
Screw	30 Nm	B

- Connect the connector **(1)**.

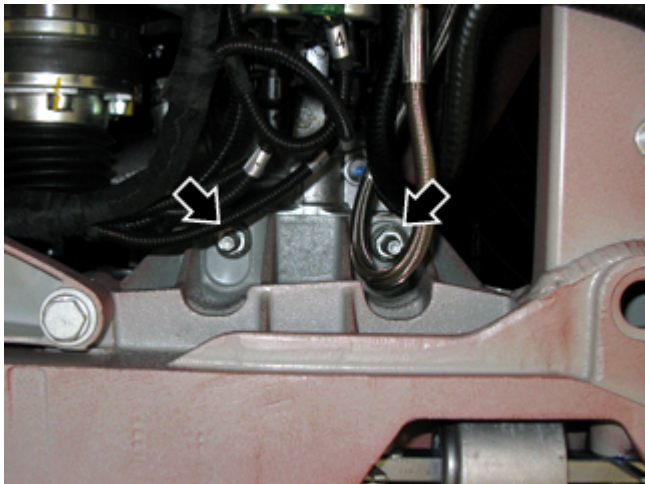


- Fit the respective screws and pretighten the indicated nuts.

		
Tightening torque	Nm	Class
Nut (pretightening)	25 Nm	B

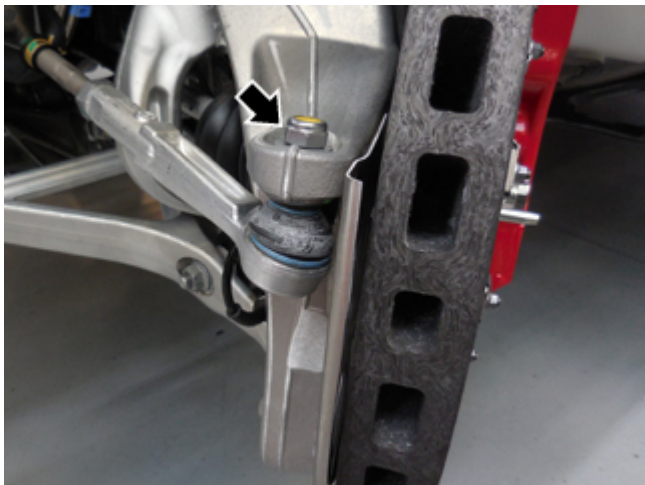


- Fit the steering tie-rod pin on the hub carrier.
- Pre-tighten the indicated nut, then loosen and tighten fully.

		
Tightening torque	Nm	Class
Nut (pretightening)	40 Nm	A
Nut	40 Nm	A

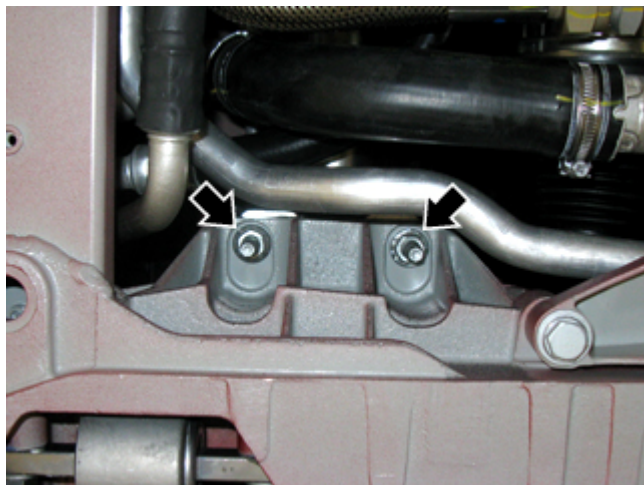

- Fit the respective screws and pretighten the indicated nuts

		
Tightening torque	Nm	Class
Nut (pretightening)	25 Nm	B

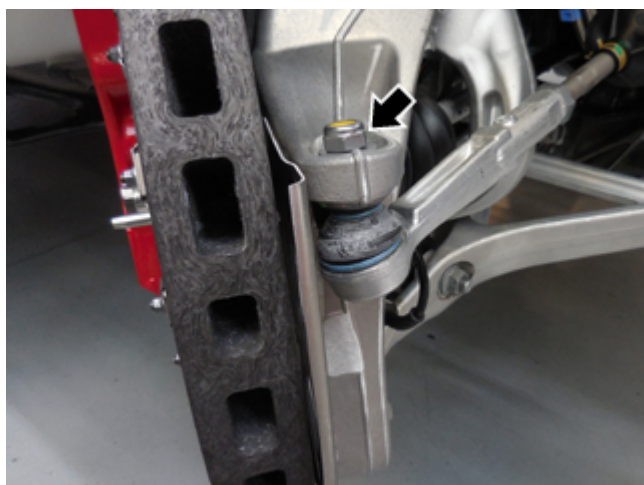

- Fit the steering tie-rod pin on the hub carrier.
- Pre-tighten the indicated nut, then loosen and tighten fully.

		
Tightening torque	Nm	Class
Nut (pretightening)	40 Nm	A
Nut	40 Nm	A

- Tighten the nuts fastening the steering box in an X pattern.

		
Tightening torque	Nm	Class
Nut	60 Nm	A

➤ Refit the complete wheels ( D2.01).

 Refit the front wheels.

➤ Connect the battery ( F2.01).

➤ Fill the power steering system ( D5.08).

➤ Refit the flat undertray sections ( E3.13).

 Refit the central flat undertray section.