



GTC4Lusso USA - Power steering fluid coil - Latest Update: 2021-01-26


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.

Copyright by Ferrari S.p.A. - P.IVA 00159560366


D5.05 Power steering fluid coil

Removing the power steering fluid coil

- Remove the front bumper ( E3.03).
- Remove the engine air duct ( B4.02).
- Drain the power steering system ( D5.08).

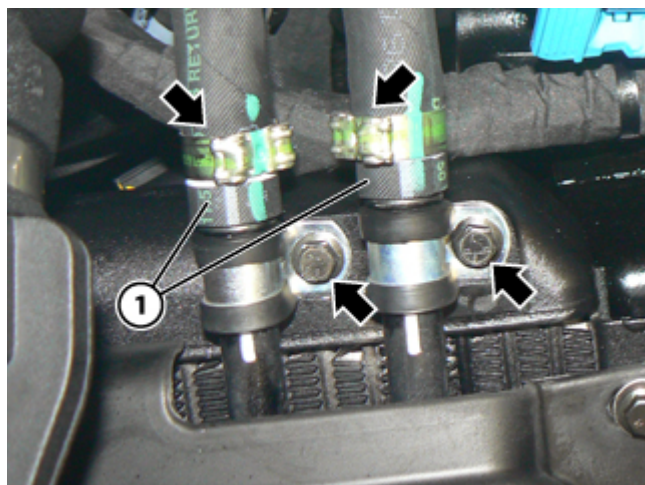


- Undo the screws indicated.
- Remove the indicated collars.
- Disconnect the pipes (1) from the power steering fluid coil.

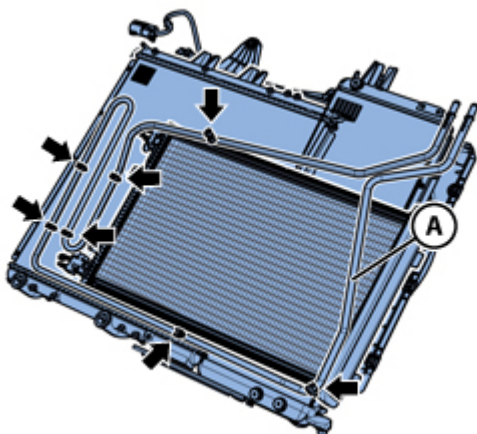


- Detach the power steering fluid coil (A) from the indicated clips.
- Clean off any power steering fluid.

Refitting the power steering fluid radiator

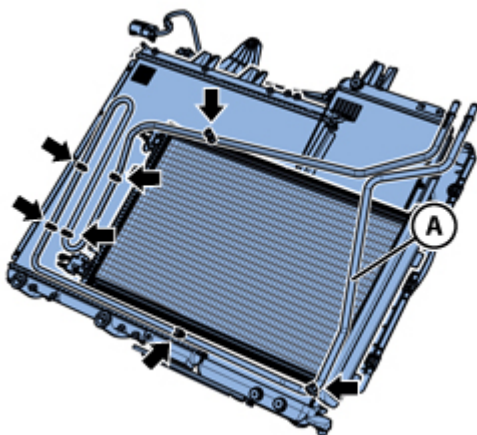

- Fit the power steering fluid coil **(A)**.
- Replace the gaskets of the power steering fluid coil **(A)**.
- Fasten the power steering fluid coil **(A)** to the indicated clips.

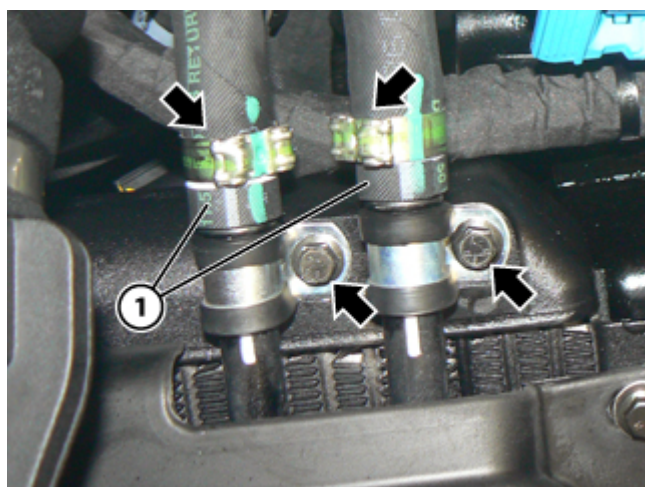

- Connect the pipes **(1)** to the power steering fluid coil.
- Tighten the indicated collars.
- Tighten the screws indicated.

- Refit the engine air duct ( B4.02).
- Refit the front bumper ( E3.03).
- Fill the power steering system ( D5.08).