



GTC4Lusso USA - Steering column - Latest Update: 2021-01-26

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.

Copyright by Ferrari S.p.A. - P.IVA 00159560366


D5.07 Steering column

Removing the steering column

- Disconnect the battery ( F2.01).
- Remove the steering wheel ( D5.06).
- Remove the dashboard trim panels ( E4.02).
 -  Remove the driver side lower dashboard trim panel.
- Remove the instrument panel ( E5.02).
- Remove the shift paddle assembly ( E5.08).
- Remove the windscreen wiper unit ( E3.10).
- Remove the complete wheels ( D2.01).
 -  Remove the left hand front wheel.




- Mark the position of the steering column joint with respect to the splined steering box shaft.
- Undo the indicated screw.

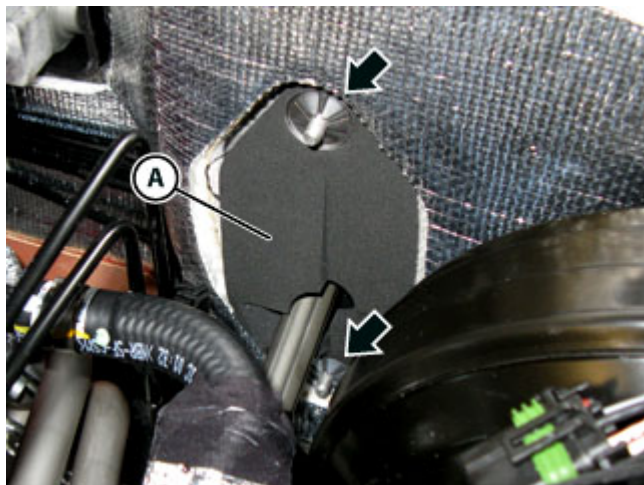


- Remove the indicated ring nuts.
- Remove the soundproofing pad **(A)**.




- Undo the nuts indicated.

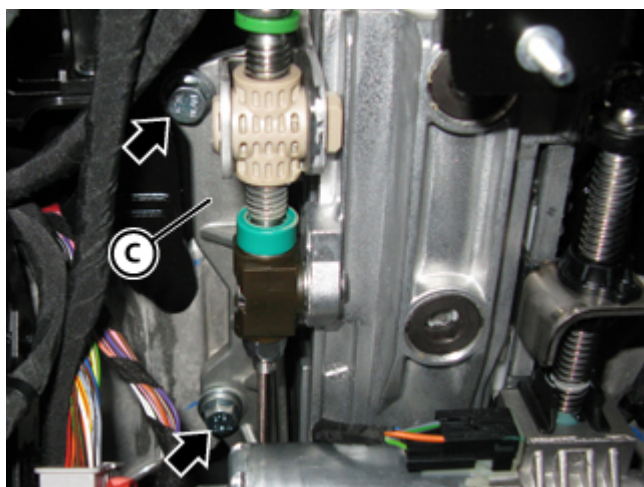

- On the left hand side, undo the two lower screws fastening the steering column **(C)**.

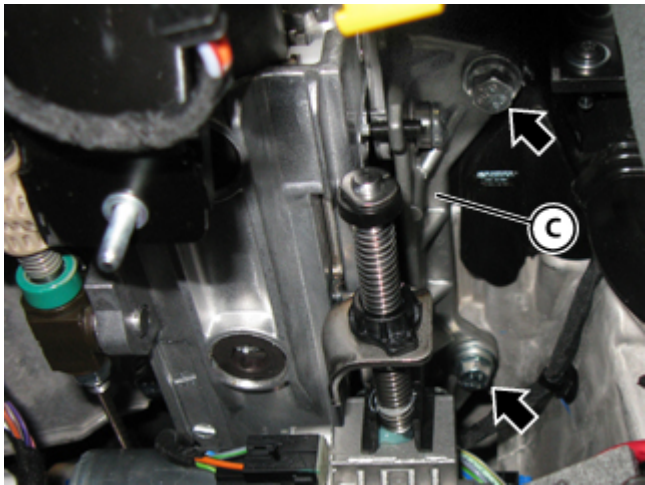

- On the right hand side, undo the two lower screws fastening the steering column **(C)**.

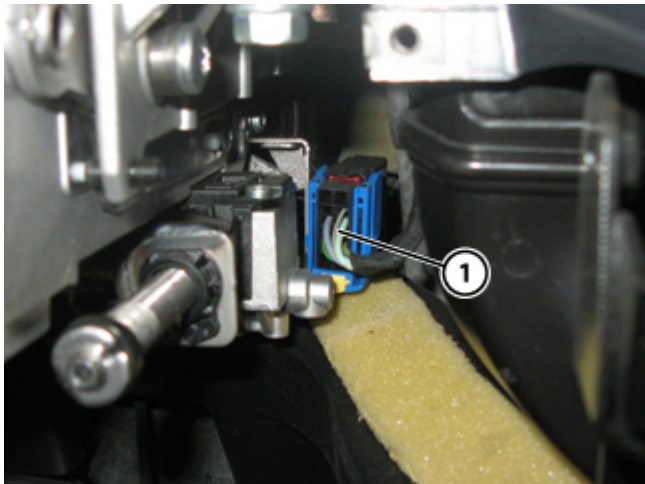


- Disconnect the connector **(1)**.

- Remove the steering column.


Refitting the steering column

			
Tightening torque		Nm	Class
Fastening steering column to dashboard	Screw	8 Nm	B
	Screw	25 Nm	B
Fastening the steering column gaiter	Nut	9 Nm	B
Fastening steering column to steering box	Screw	30 Nm	B


- Fit the steering column, engaging the respective joint with the splined steering box shaft and using the markings made during removal as reference.

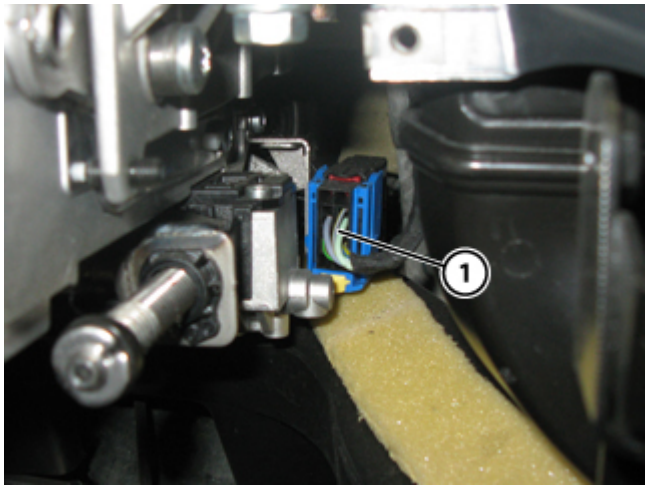

- Connect the connector **(1)**.

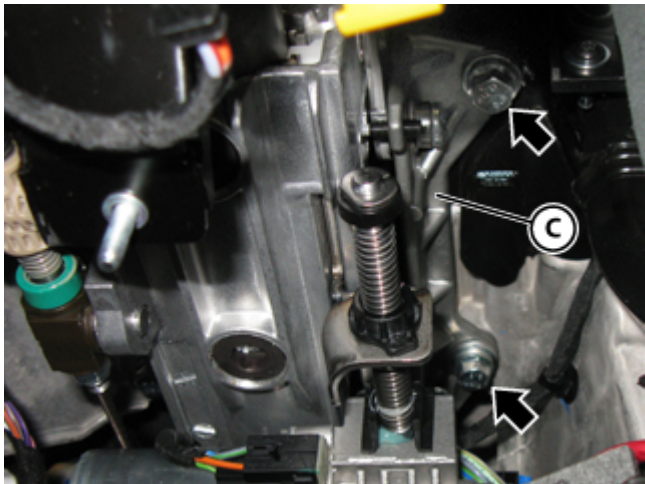


- On the right hand side, tighten the two lower screws fastening the steering column **(C)**.

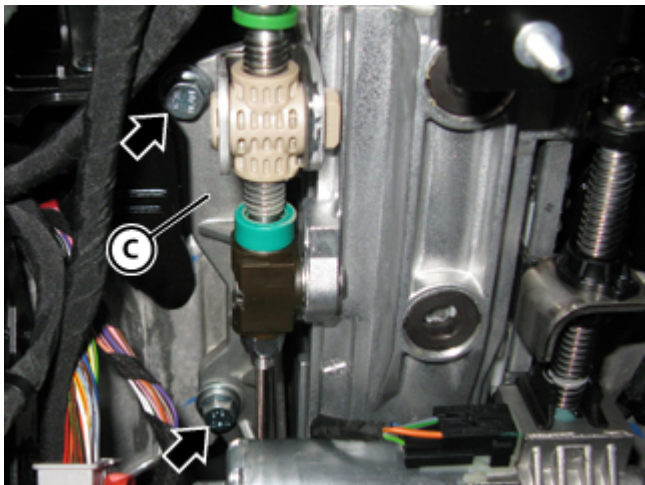

- On the left hand side, tighten the two lower screws fastening the steering column **(C)**.
- Definitively tighten the screws on the right and left hand sides in a cross pattern together with the screws on the opposite side.

		
Tightening torque	Nm	Class
Screw	25 Nm	B

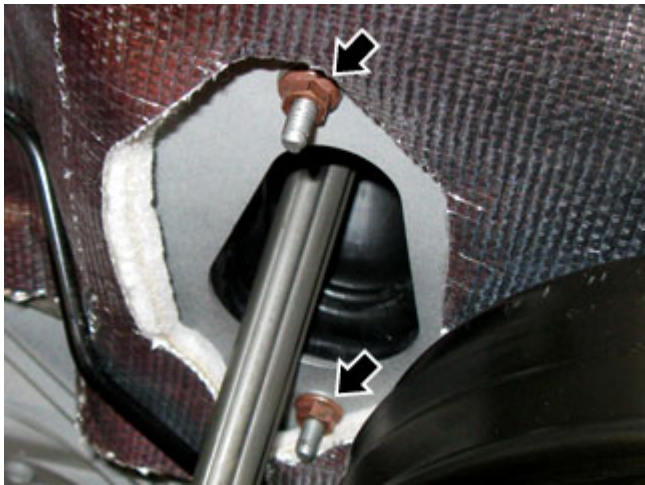

- Tighten the nuts indicated.

		
Tightening torque	Nm	Class
Nut	9 Nm	B



- Fit the soundproofing pad (A).
- Fasten the indicated retainer ring nuts.



- Tighten the indicated screw.

		
Tightening torque	Nm	Class
Screw	30 Nm	B

- Refit the complete wheels ( D2.01).
 -  Refit the left hand front wheel.
- Refit the windscreen wiper unit ( E3.10).
- Refit the shift paddle assembly ( E5.08).
- Refit the instrument panel ( E5.02).
- Refit the dashboard trim panels ( E4.02).
 -  Refit the driver side lower dashboard trim panel.
- Refit the steering wheel ( D5.06).
- Connect the battery ( F2.01).

