



GTC4Lusso USA - Emptying and filling the power steering system - Latest Update: 2021-01-26

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.

Copyright by Ferrari S.p.A. - P.IVA 00159560366

D5.08 Emptying and filling the power steering system

Draining the power steering system



Pour the oil drained from the system into a container and seal it. DO NOT dispose of used oil in the environment.

➤ Remove the flat undertray sections ( E3.13).


 Remove the central flat undertray section.

➤ Remove the complete wheels ( D2.01).

 Remove the left hand front wheel.



- Undo and open the cap (A).

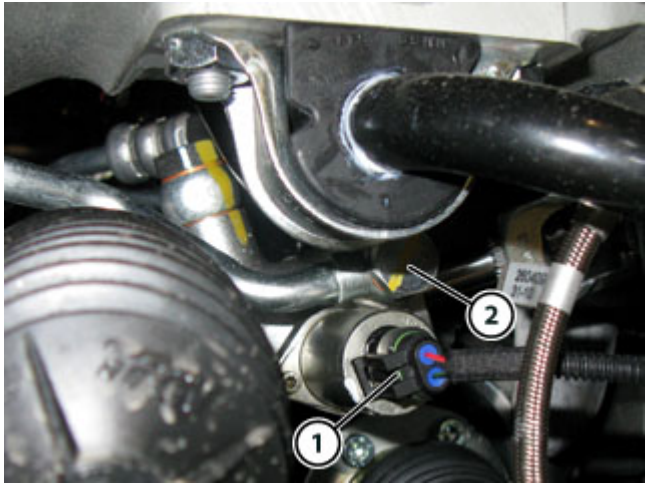


- Place a container under the steering box to collect the power steering fluid.
- Adequately protect the connector (1).
- Loosen the union (2).
- Wait for the power steering fluid to drain completely.

Filling the power steering system

			
Tightening torque		Nm	Class
Fastening pipes to steering box	Union	35 Nm	B

The power steering system is self-bleeding.

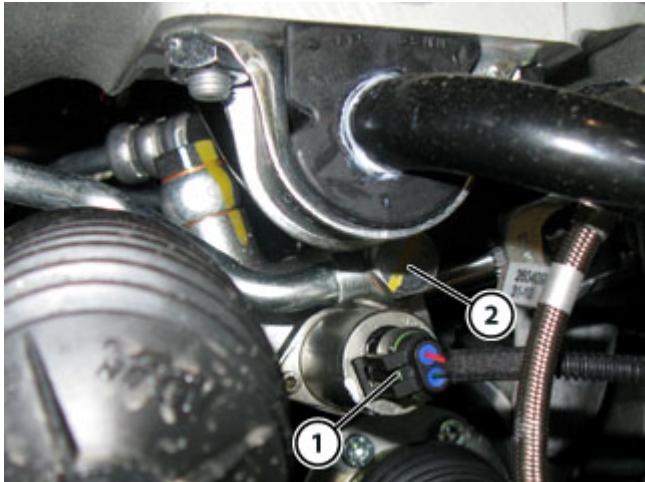

- Replace the relative seals and tighten the union (2).

		
Tightening torque	Nm	Class
Union	35 Nm	B

- Remove the power steering fluid tank ( D5.02).
- Clean the interior of the power steering fluid reservoir thoroughly using a small quantity of new power steering fluid of the specified type.
- Allow the power steering fluid used to clean the power steering fluid reservoir to drain completely into a suitable container.
- Use a suitable syringe to aspirate any residue of the power steering fluid used for cleaning from the power steering fluid reservoir.
- Connect a suitable additional pipe to the power steering fluid reservoir return pipe.
- Place the other end of the pipe into a container for collecting the power steering fluid.

**CAUTION**

The oil contained in the hydraulic steering system is harmful to the eyes and skin and may also damage the vehicle bodywork.

- Adequately protect the areas surrounding the power steering tank pipes.



DO NOT apply any more turning force to the steering wheel once full lock is reached.

- Steer fully to the left and right a few times until power steering fluid starts to flow from the tank return pipe.
- Connect a suitable funnel to the power steering fluid reservoir delivery pipe.
- Place an **80 micron** mesh filter in the funnel.
- Pour new power steering fluid into the funnel while simultaneously steering to the left and right a few times until at least **3 litres** of power steering fluid has been collected from the power steering fluid reservoir return pipe.




Do not let the funnel empty during this procedure.

- Disconnect and remove the funnel from the power steering fluid reservoir delivery pipe.
- Disconnect and remove the additional pipe from the power steering fluid reservoir return pipe.
- Refit the power steering tank ( D5.02).



- Undo and open the cap (A).

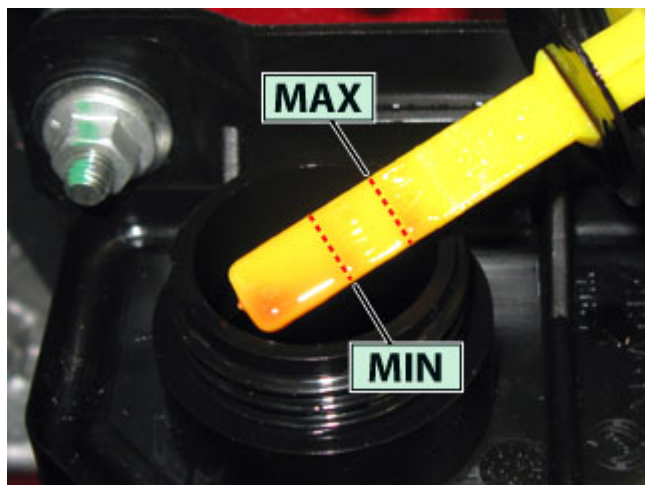

DO NOT apply any more turning force to the steering wheel once full lock is reached.

- Add new fluid of the specified type into the power steering fluid reservoir to reach the **MAX** limit on the cap dipstick (**A**) while simultaneously steering fully to the right and left repeatedly until the power steering fluid level stabilises and the fluid contains no bubbles.

i There are MIN and MAX levels indicated on both sides of the dipstick. Use the levels on the side indicating the temperature **20°C**.

- Start and stop the engine twice repeatedly.
- Check that the fluid level is stable and that the fluid is not emulsified with air.
- If the power steering fluid level drops, top the power steering fluid reservoir up to the **MAX** limit on the cap dipstick (**A**) while simultaneously steering fully to the right and left repeatedly until the power steering fluid level stabilises and the fluid contains no bubbles.

i There are MIN and MAX levels indicated on both sides of the dipstick. Use the levels on the side indicating the temperature **20°C**.

- Lift the vehicle with a vehicle lift so that the wheels are not in contact with the ground.
- Start the engine and run at idle speed for 1 minute.



DO NOT apply any more turning force to the steering wheel once full lock is reached.

- Check the power steering system fluid level ( A3.06).

i Simultaneously, steer fully 10 times.

- Lower the vehicle to bring the wheels into contact with the ground.
- Wait for the engine coolant to reach a temperature of 90°C.



DO NOT apply any more turning force to the steering wheel once full lock is reached.

- Check the power steering system fluid level ( A3.06).

i Simultaneously, steer fully 10 times.

i Repeat this procedure another three times.

➤ Check the power steering system fluid level ( A3.06).

➤ Refit the flat undertray sections ( E3.13).

➤ Refit the complete wheels ( D2.01).