



GTC4Lusso USA - Front removable subframe - Latest Update: 2021-01-26

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.


Copyright by Ferrari S.p.A. - P.IVA 00159560366

E2.02 Front removable subframe


Removing the front removable subframe

➤ Remove the flat undertray sections ( E3.13).

 Remove the central flat undertray section.

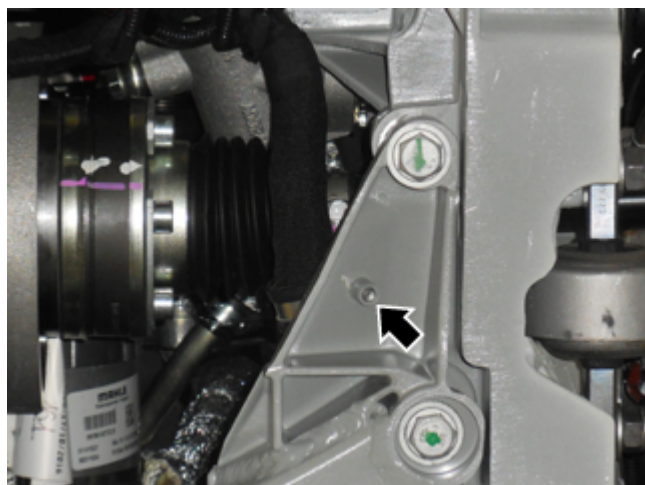


- Undo the indicated nut.

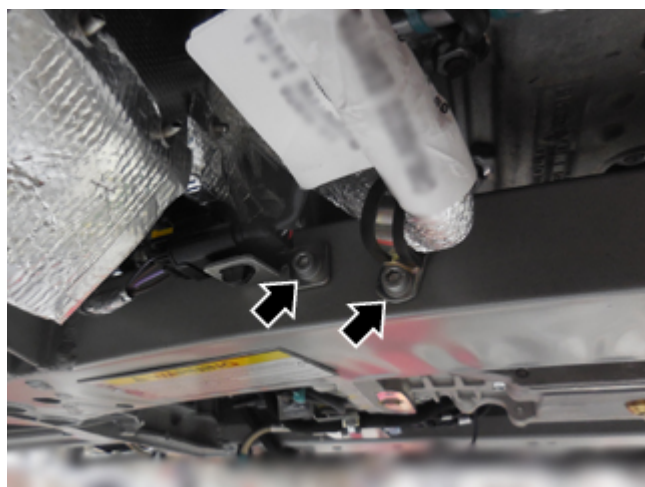


- Undo the screws indicated.




- Undo the screws indicated.

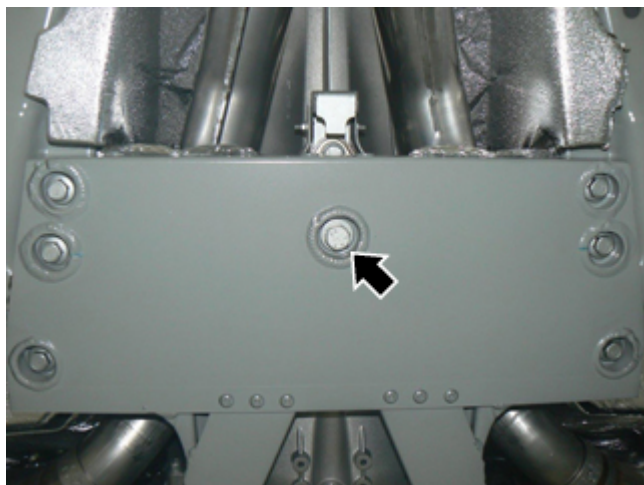

- Undo the indicated nut.

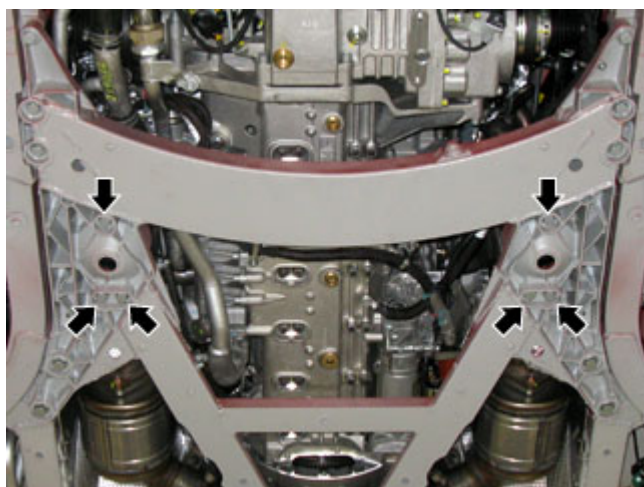

- Undo the screws indicated.

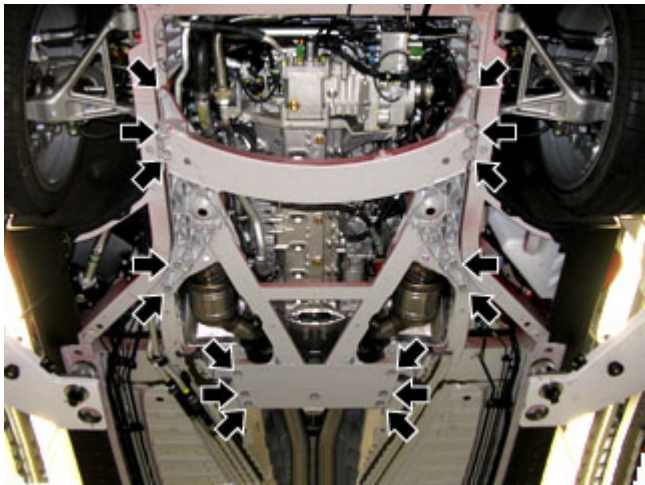

Support the weight of the engine adequately and take all precautions necessary to ensure safety.

- Support the engine from above using the lift beam (AV 8826) with the relative safety straps and eye-bolts, and support from underneath with a hydraulic column lift and a suitable support.
- Undo the screws indicated.
- i* The screws are not all the same length. Note the position of each screw before removing.

- Remove the front removable subframe.
- Retrieve the engine bush spacers from the front removable subframe.

Refitting the front removable subframe

			
Tightening torque		Nm	Class
Fastening front removable subframe	Screw (pre-tightening)	20 Nm	B
	Screw	60 Nm	B
	Screw	110 Nm	B
Fastening transmission housing bushing to front removable subframe	Screw	70 Nm	B
Fastening engine mounting bushings to front removable subframe	Screw	50 Nm	B




- Tighten the pins (AV 8351) into the M12 threaded holes for fastening the front removable subframe to the vehicle chassis.



- Tighten the pins (**AV 8350**) into the M10 threaded holes on the engine mounting bushes.


- Fit the engine mounting bush spacers in the respective seats on the front removable subframe.
- Fit the front removable subframe, supporting its weight adequately.

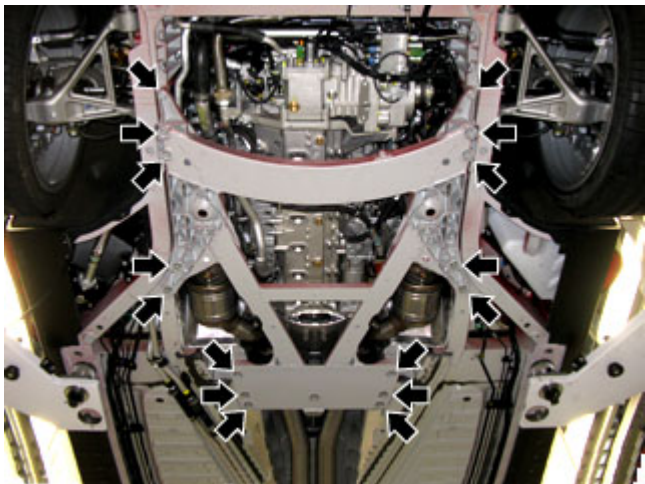

- Hand-tighten some of the screws indicated.
i The screws are not all the same length.
Before applying the screws, refer to the notes made during removal to ascertain which screws correspond to which positions.

- Undo the alignment pins (**AV 8351**).
- Pre-tighten the indicated screws.

		
Tightening torque	Nm	Class
Screw (pre-tightening)	20 Nm	B

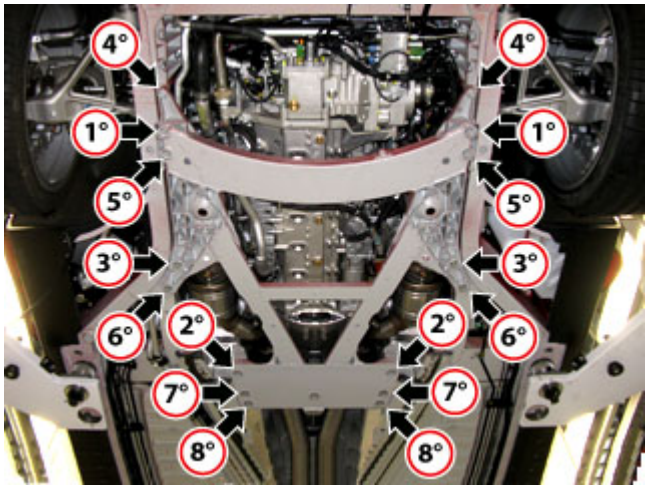

- Tighten the indicated screws (1°).

		
Tightening torque	Nm	Class
Screw	60 Nm	B

- Tighten the indicated screws (2°, 3°).

		
Tightening torque	Nm	Class
Screw	110 Nm	B

- Tighten the indicated screws (4°, 5°).

		
Tightening torque	Nm	Class
Screw	60 Nm	B


- Tighten the indicated screws (6°, 7°, 8°).

		
Tightening torque	Nm	Class
Screw	110 Nm	B



- Tighten the indicated screw.

		
Tightening torque	Nm	Class
Screw	70 Nm	B

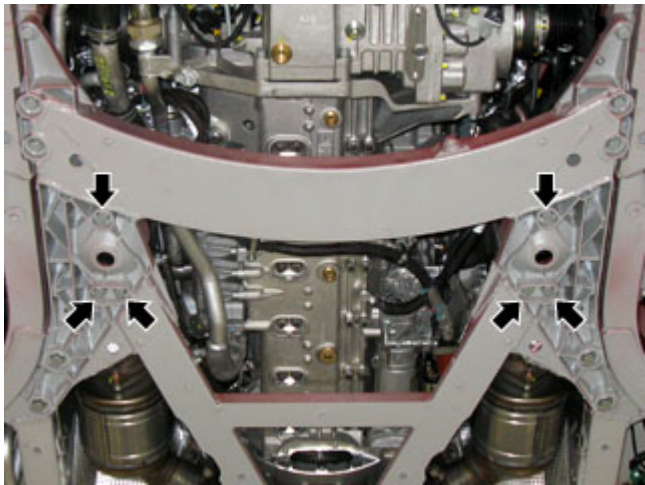


- Hand-tighten some of the screws indicated.
- Undo the alignment pins (**AV 8350**).
- Tighten the screws indicated.


		
Tightening torque	Nm	Class
Screw	50 Nm	B



- Tighten the indicated screws, fitting the respective brackets.

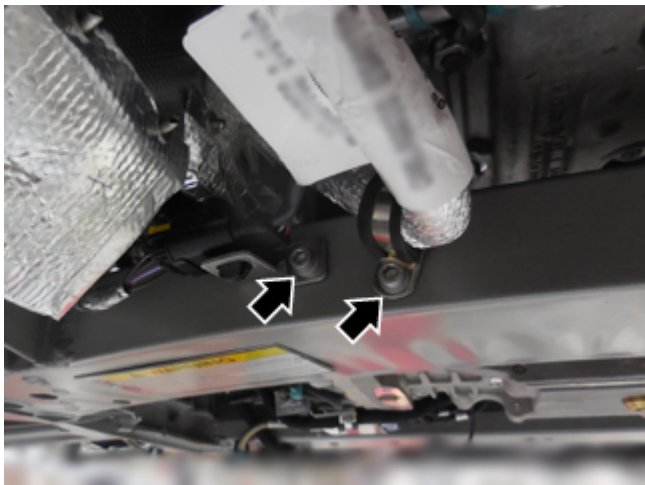

- Tighten the indicated screws, fitting the respective brackets.

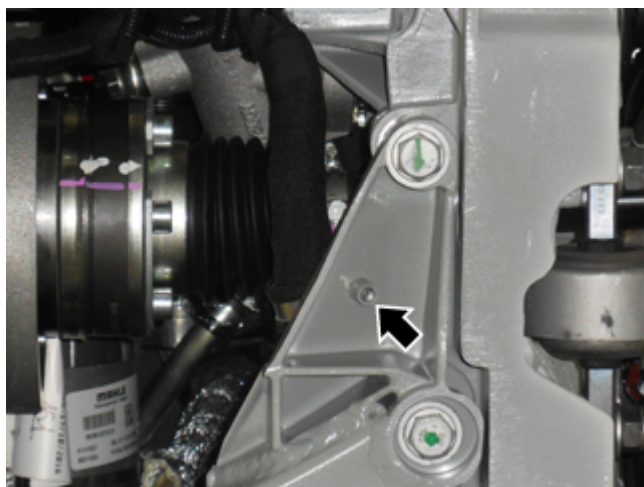

- Tighten the indicated screw, fitting the respective bracket.



Tightening torque	Nm	Class
Screw	60 Nm	B

- Refit the flat undertray sections (🔧 E3.13).
- 🔧 Refit the central flat undertray section.