



GTC4Lusso USA - Engine compartment lid - Latest Update: 2021-01-26

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.


Copyright by Ferrari S.p.A. - P.IVA 00159560366

E3.01 Engine compartment lid


Removing the engine compartment lid




- Detach and remove the indicated fastener buttons.
- Move the detached portion of the under-lid insulation to one side.

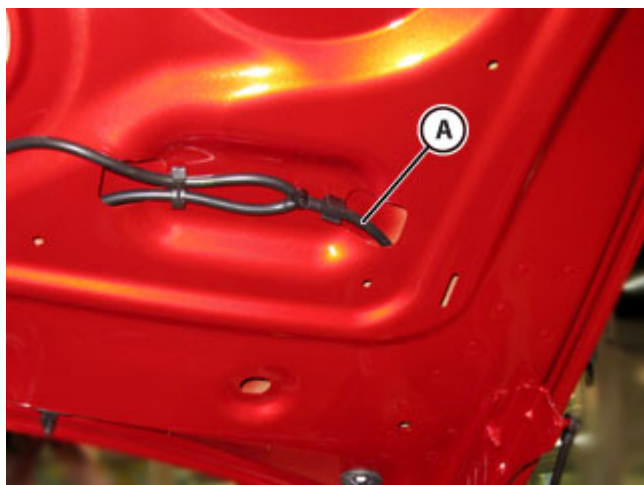


- Disconnect and free the pipe **(A)**.

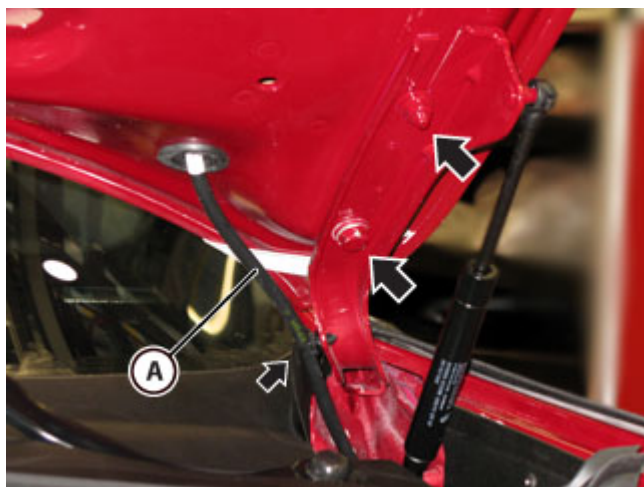**UP TO Assembly No. 150392**


- Support the weight of the engine compartment lid.
- Mark the position of the hinge on the engine compartment lid.
- Detach the indicated clamp.
- Remove the pipe **(A)**.
- Undo the indicated nut.
- Undo the indicated screw.

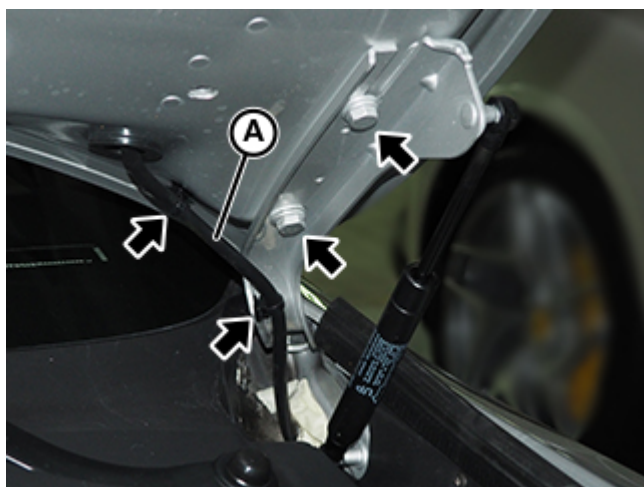**FROM Assembly No. 150393**

- Support the weight of the engine compartment lid.
- Mark the position of the hinge on the engine compartment lid.
- Detach the indicated clamps.
- Remove the pipe **(A)**.
- Undo the indicated screws.

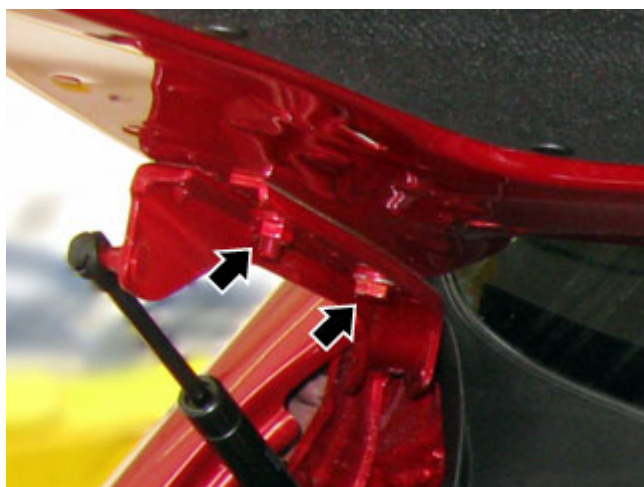**UP TO Assembly No. 150392**

- Mark the position of the hinge on the engine compartment lid.
- Undo the indicated nut.
- Undo the indicated screw.

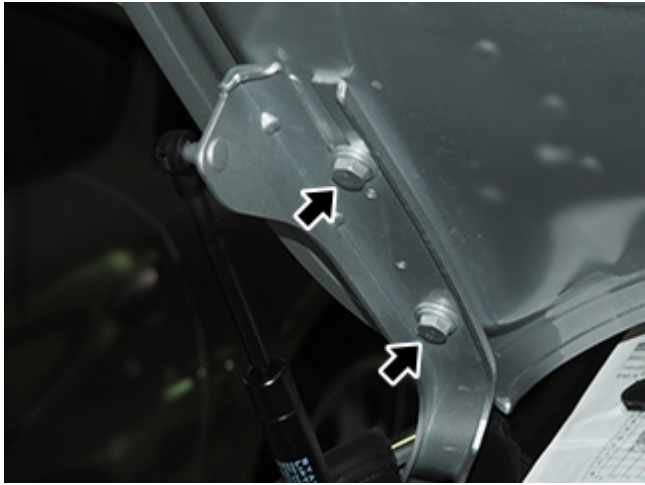

FROM Assembly No. 150393


- Mark the position of the hinge on the engine compartment lid.
- Undo the indicated screws.

- Remove the engine compartment lid.

Refitting the engine compartment lid

			
Tightening torque		Nm	Class
Fastening engine compartment lid	Screw	24 Nm	B
	Nut	24 Nm	B

- Supporting the weight of the lid adequately, fit the engine compartment lid on its hinges, using the positions marked previously as reference and refitting any shims retrieved during removal.

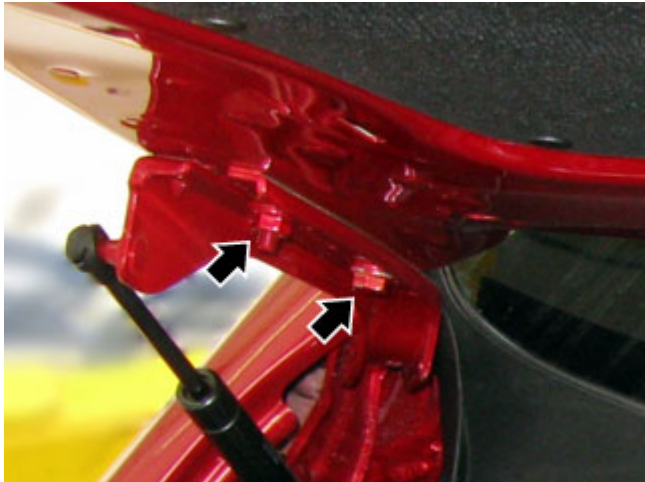

UP TO Assembly No. 150392

- Hand tighten the indicated screw.

		
Tightening torque	Nm	Class
Screw	24 Nm	B

- Tighten the indicated nut.


		
Tightening torque	Nm	Class
Nut	24 Nm	B



FROM Assembly No. 150393

- Tighten the indicated screws.

		
Tightening torque	Nm	Class
Screw	24 Nm	B

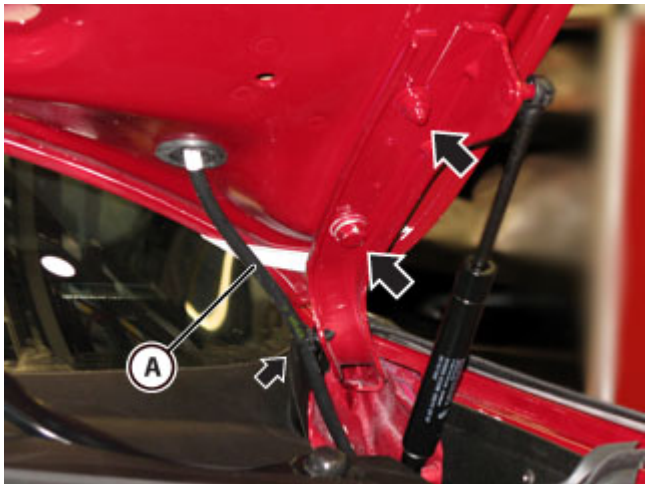

UP TO Assembly No. 150392


- Hand tighten the indicated screw.

		
Tightening torque	Nm	Class
Screw	24 Nm	B

- Tighten the indicated nut.

		
Tightening torque	Nm	Class
Nut	24 Nm	B

- Connect the pipe (A).
- Attach the indicated clamp.

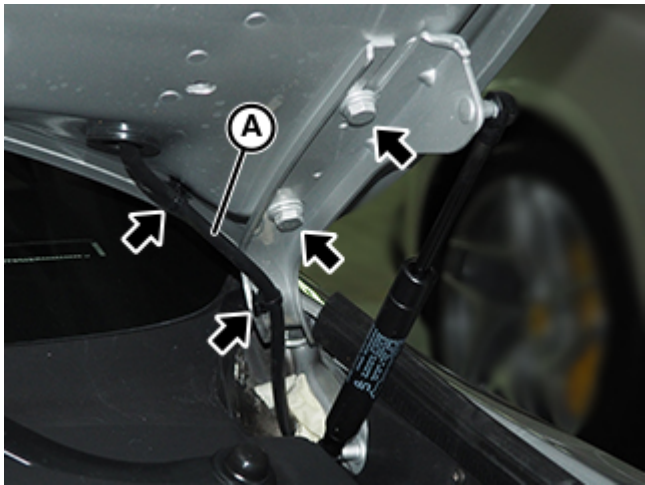

FROM Assembly No. 150393

- Tighten the indicated screws.

		
Tightening torque	Nm	Class
Screw	24 Nm	B

- Connect the pipe (A).
- Attach the indicated clamp.



- Connect and fasten the pipe **(A)**.



- Reposition the section of under-lid insulation correctly.
- Fit and fasten the indicated fastener buttons.



- Check that the engine compartment lid closes correctly and is correctly aligned.
- If the engine compartment lid does not close correctly and/or is incorrectly aligned, correct lid alignment by altering the number of lock shims and adjusting the lock, the respective striker and the hinges.
- Check again that the engine compartment lid closes correctly and is correctly aligned.