



GTC4Lusso USA - Rear bumper - Latest Update: 2021-01-26


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.

Copyright by Ferrari S.p.A. - P.IVA 00159560366


E3.04 Rear bumper

Removing the rear bumper

- Disconnect the battery ( F2.01).
- Remove the rear wheelhouses ( E3.05).
- Remove the taillights ( F2.06).
- Remove the luggage compartment trim panels ( E4.06).
-  Remove the rear pillar trim panels and the tool kit trim panel in the luggage compartment.

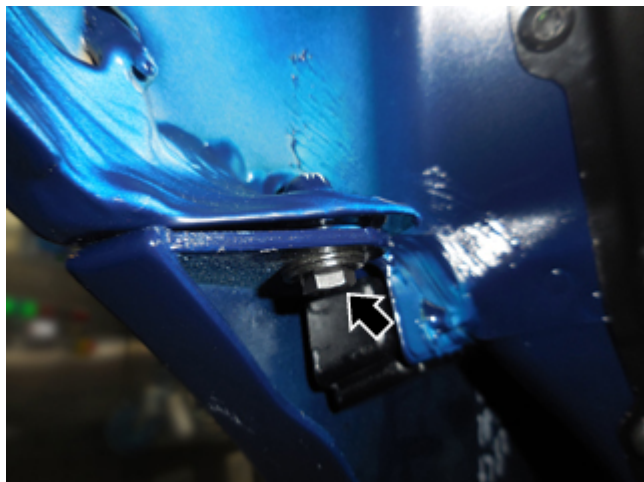

- Undo the indicated screw.

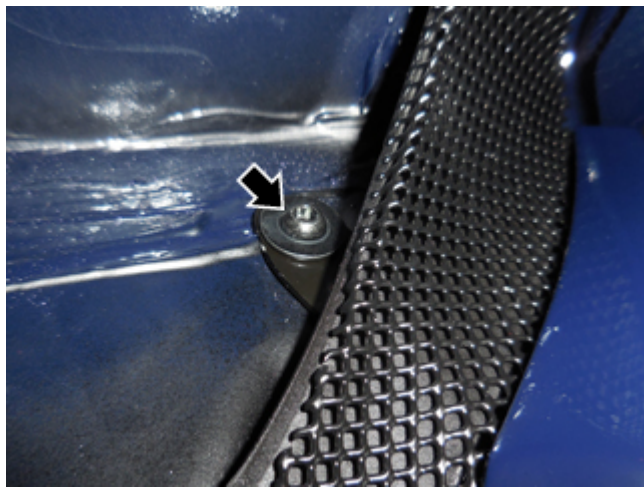


- Undo the indicated screw.



- Undo the indicated nut.




- Undo the indicated screw.

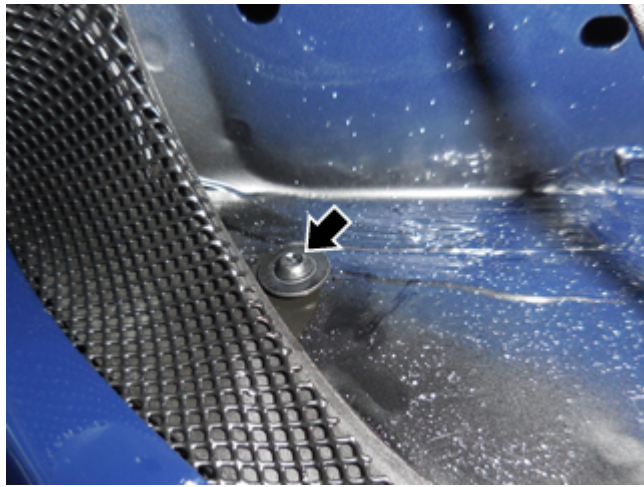


- Undo the indicated screw.




- Undo the indicated nut.

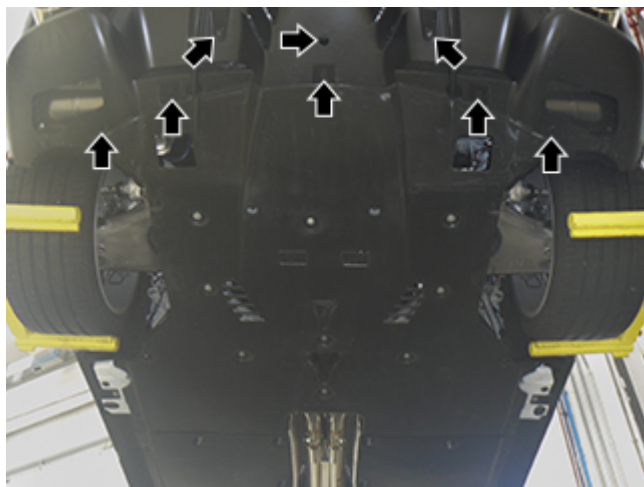

- Undo the screws indicated.

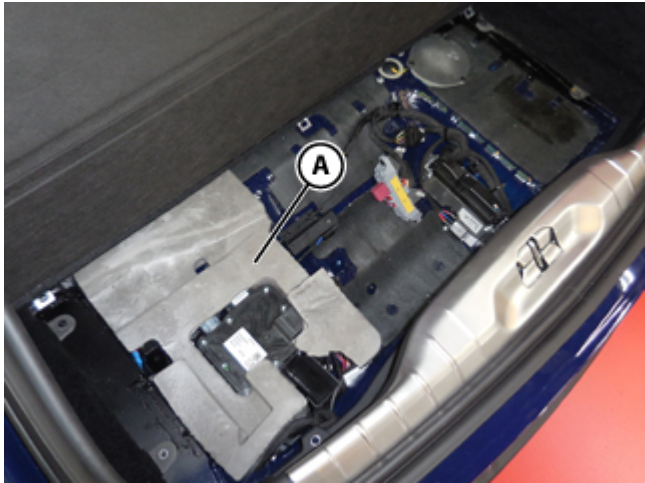

- Remove the insulation (A).

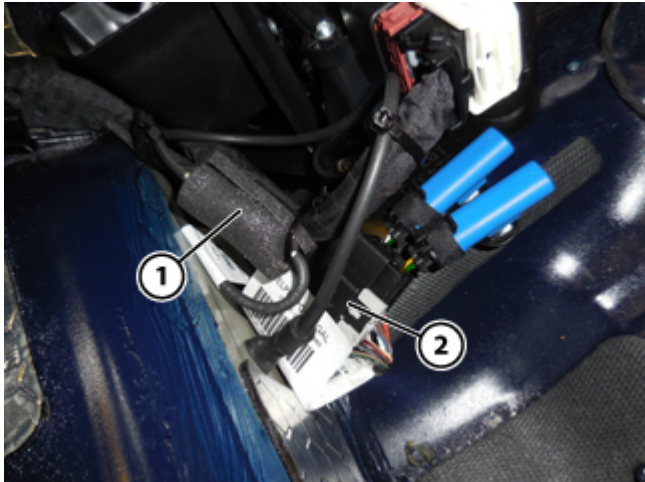

- Release and disconnect connector (1).
- For vehicles with parking camera: disconnect the connector (2) and release the respective cable.

- Detach the rear bumper from the respective mounting brackets.
- Prise out the cable grommet and pull the respective cable out from the bodyshell.
- Remove the rear bumper.


Refitting the rear bumper

			
Tightening torque		Nm	Class
Fastening rear bumper	Screw	7 Nm	B
	Nut	7 Nm	B
	Screw	5 Nm	B
Fastening flat undertray elements	Screw	7 Nm	B
	Screw / Nut	8 Nm	B


- Fit the rear bumper.
- Insert the cable and press the respective cable grommet into the relative hole in the bodyshell.
- Fasten the rear bumper to the respective mounting brackets by pressing manually.



- Connect and fasten the connector **(1)**.
- For vehicles with parking camera: connect the connector **(2)** and fasten the respective cable.

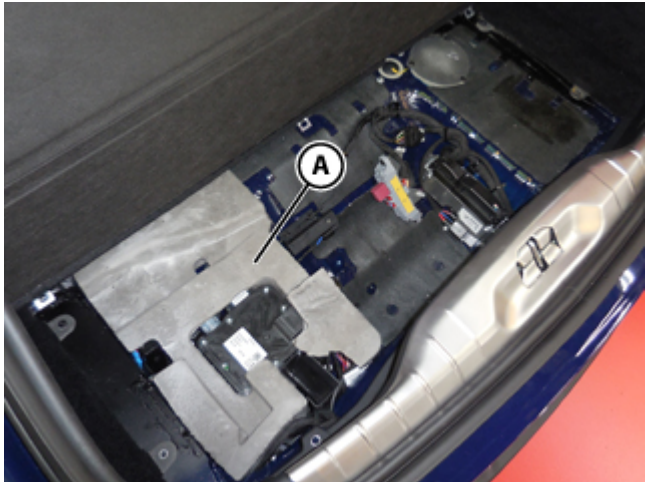

- Fit and fasten the insulation **(A)**.

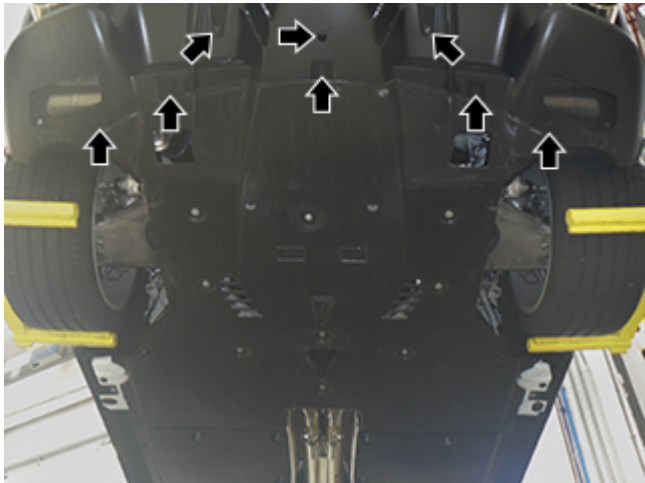


- Tighten the screws indicated.

		
Tightening torque	Nm	Class
Screw	7 Nm	B
Screw	7 Nm	B



- Tighten the indicated nut.

		
Tightening torque	Nm	Class
Nut	7 Nm	B

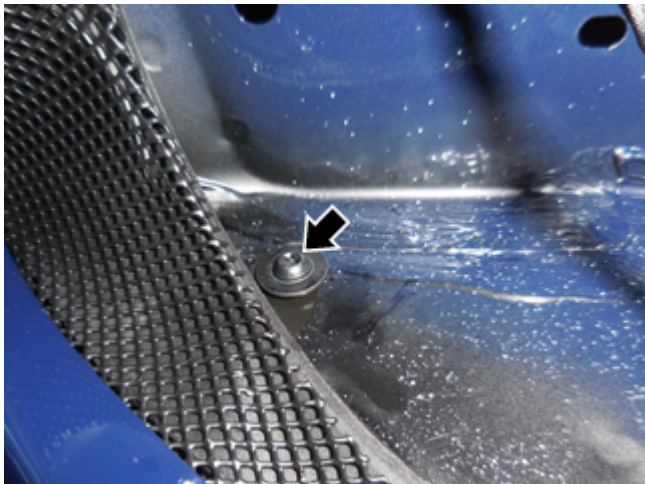

- Tighten the indicated screw.

		
Tightening torque	Nm	Class
Screw	5 Nm	B



- Tighten the indicated screw.

		
Tightening torque	Nm	Class
Screw	7 Nm	B




- Tighten the indicated nut.

		
Tightening torque	Nm	Class
Nut	7 Nm	B



- Tighten the indicated screw.

		
Tightening torque	Nm	Class
Screw	5 Nm	B

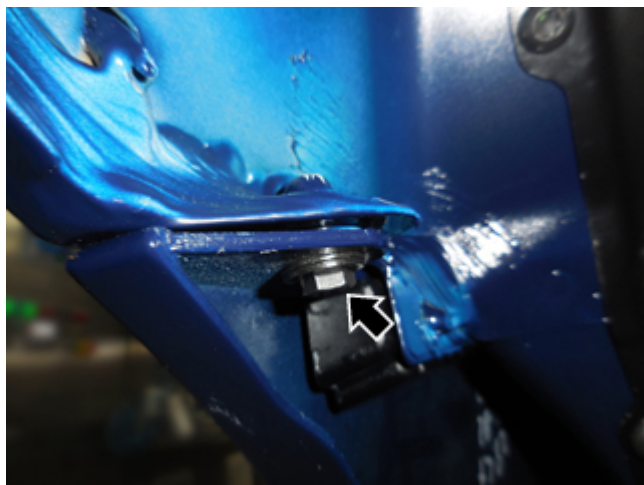

- Tighten the indicated screw.

		
Tightening torque	Nm	Class
Screw	7 Nm	B

➤ Refit the luggage compartment trim panels ( E4.06).

 Refit the rear pillar trim panels and the tool kit trim panel in the luggage compartment.

➤ Refit the rear wheelhouses ( E3.05).

➤ Refit the taillights ( F2.06).

➤ Connect the battery ( F2.01).

