




GTC4Lusso USA - Wheelhouse - Latest Update: 2021-01-26

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.
Copyright by Ferrari S.p.A. - P.IVA 00159560366

E3.05 Wheelhouse

Removing the front wheelhouses


➤ Remove the complete wheels ( D2.01).

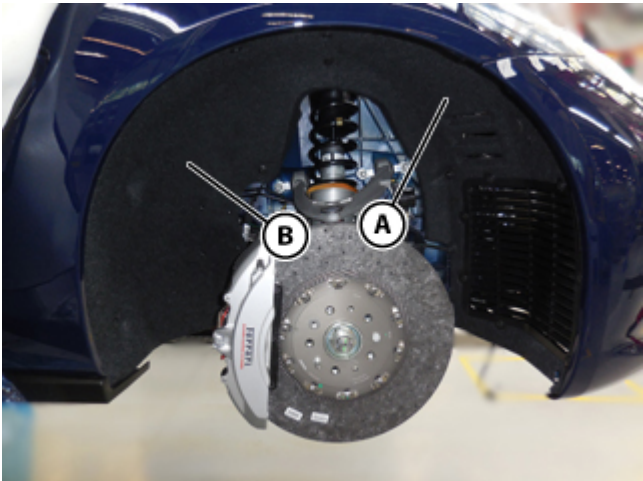

- Detach the respective fastener buttons.
- Undo the respective fastener screws.
- Detach and remove the front element **(A)** and/or the rear element **(B)**.

Refitting the front wheelhouses

			
Tightening torque		Nm	Class
Fastening front wheelhouse	Screw	7 Nm	B

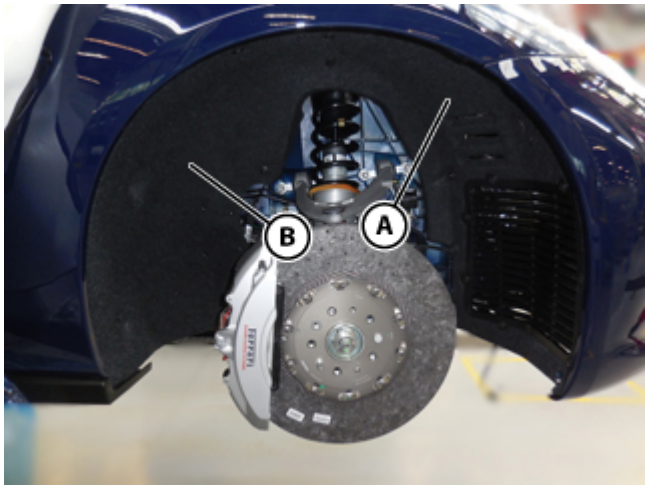


- Fit and install the rear element **(B)** and/or the front element **(A)**.
- Tighten the respective fastener screws.

		
Tightening torque	Nm	Class
Screw	7 Nm	B

- Fasten the respective fastener buttons.

Removing the rear wheelhouses


➤ Remove the complete wheels ( D2.01).

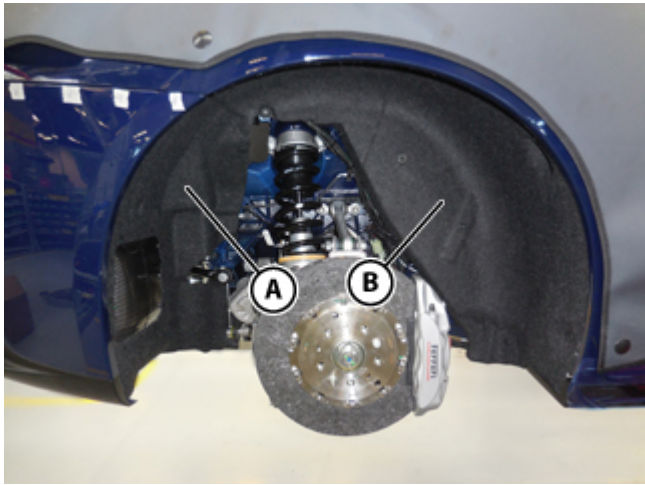

- Detach the respective fastener buttons.
- Undo the respective fastener screws.
- Detach and remove the rear element **(A)** and the front element **(B)**.

Refitting the rear wheelhouses

			
Tightening torque		Nm	Class
Fastening rear wheelhouse	Screw	7 Nm	C

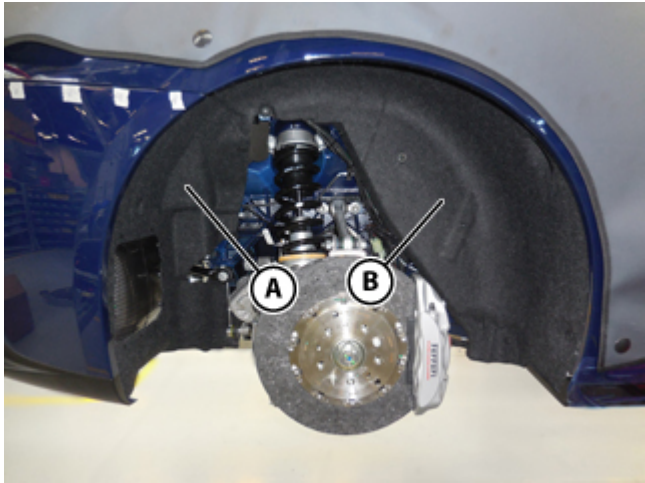

- Fit and install the front element **(B)** and the rear element **(A)**.
- Tighten the respective fastener screws.

		
Tightening torque	Nm	Class
Screw	7 Nm	C

- Fasten the respective fastener buttons.

➤ Refit the complete wheels (🔑 D2.01).