



GTC4Lusso USA - Quarterlights - Latest Update: 2021-01-26

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.

Copyright by Ferrari S.p.A. - P.IVA 00159560366

E3.07 Quarterlights


Replacing the quarterlights



Protect all painted bodywork parts and the cabin to prevent damage when using cutting equipment and when installing the new windscreen.

The quarterlights are supplied as spare parts complete with the perimeter seals, which must never be detached from the glass.

- Remove the roof trim panels ( E4.04).
 -  Remove the lateral trim panels and the upper B-pillar trim panels.
- Remove the passenger compartment trim panels ( E4.04).
 -  Remove the lateral rear passenger compartment trim panels.
- Remove the door perimeter seals ( E3.12).
 -  Detach the door perimeter seal in the area near the quarterlight.

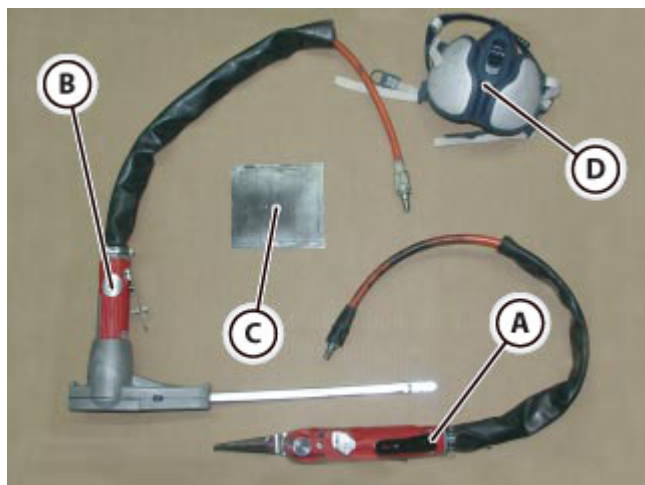

- The following tools are required to remove the quarterlight:
- One (Excalibur pneumatic cutter with ESM - 519 short blade) **(A)**.
i For cutting the sealant in the more easily accessible locations and for removing excess sealant on the bodyshell.
- One (Excalibur 6 pneumatic cutter with Equaliser Pat. 4955124 long blade) **(B)**.
i For cutting the sealant in deeper, less accessible locations.
- A thin metal plate (0.5 mm thick) **(C)**.
i To facilitate cutting and protect the bodywork from the cutter blade.
- A face mask **(D)**.
i To protect the operator's airways from airborne fragments of material.
- i* Safety eyewear is also recommended to protect the eyes from flying splinters.



-  Always place the metal plate against the pneumatic cutter blade before performing each cut, with the edge of the plate against the bodywork so that the plate itself acts as a barrier for the pneumatic cutter blade.
-  Ensure that the metal plate slides freely, as it must move together with the pneumatic cutter during the cutting procedure.
- To cut the sealant along the edges, place the cutter blade **(C)** between the bodyshell and the glass seal.

- Use specific pneumatic cutters to cut the sealant around the entire perimeter of the quarterlight from inside the passenger compartment.
- Using suction cup handles, remove the quarterlight from its seat.



- Apply strips of adhesive tape to the bodywork, around the perimeter of the quarterlight seat.
- Take care not to damage the bodywork.
- Use the specific pneumatic cutter to remove any residual sealant.

- Clean the quarterlight mating surface thoroughly with compressed air, then degrease with heptane to remove all traces of adhesive or dust.




Check that there are no flaws or chips in the surface of the new screen and around its perimeter.

- Set the glass carefully on a stable surface so that it is not scratched or damaged.
- Degrease the perimeter of the glass with **DOW BETACLEAN 3350 Black cap, code 81636700** and leave to dry.



Never leave to dry for more than 4 hours.

- Apply **DOW BETAWIPE 4000 Blue cap** to the entire perimeter of the quarterlight between the two dotted lines in the figure and leave the product to dry for at least **5 minutes**.

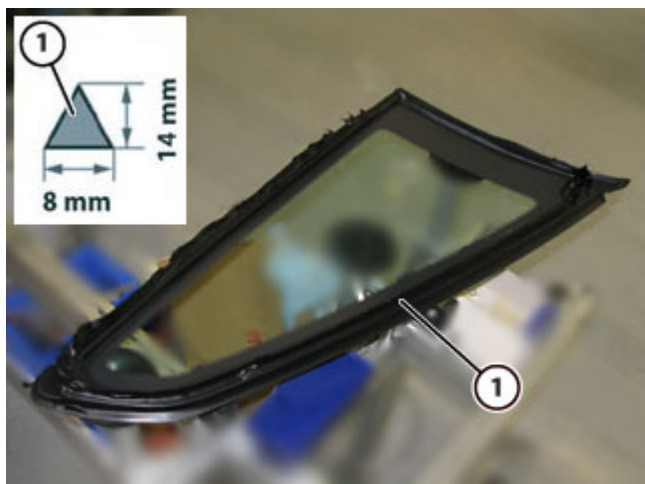

Apply adhesive primer in a uniform, uninterrupted bead.

- Using an extrusion gun fitted with a triangular section nozzle, apply a continuous bead (1) of **DOW BETASEAL 1812** on the quarterlight.
- The end of the bead must overlap the beginning by approximately **20-30 mm**.
- Check that there are no bubbles or interruptions in the bead; if necessary, correct with additional sealant.



The fitting of the windscreen on the bodyshell must take place with no possibility of delay within 5 minutes from the application of the adhesive tape.

- Hold the quarterlight parallel to the mating surface and fit onto the bodyshell.
 - Press around the entire perimeter of the quarterlight.
 - Check that the quarterlight is fitted correctly.
 - Apply a few strips of adhesive fabric tape **SYROM 90** to secure the quarterlight in the desired position.
 - From inside the vehicle, remove any excess sealant with heptane.
 - Wait at least **1 hour**, remove the adhesive tape and remove any sealant residue from the perimeter of the quarterlight with heptane.
- Refit the door perimeter seals ( E3.12).
-  Refit the door perimeter seal in the area near the quarterlight.
- Refit the passenger compartment trim panels ( E4.04).
-  Refit the lateral rear passenger compartment trim panels.
- Refit the roof trim panels ( E4.04).
-  Refit the lateral trim panels and the upper B-pillar trim panels.