




GTC4Lusso USA - Windscreen and headlight washers - Latest Update: 2021-01-26

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.

Copyright by Ferrari S.p.A. - P.IVA 00159560366

E3.11 Windscreen and headlight washers


Windscreen washer system layout

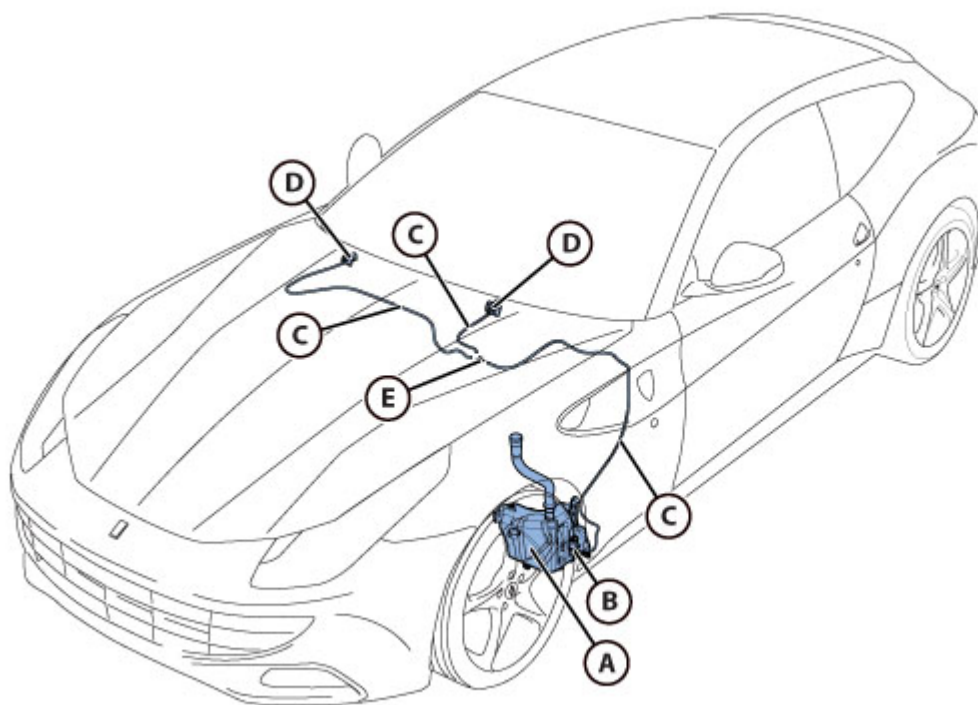

- A** - Windscreen washer fluid reservoir
- B** - Electric pump
- C** - Pipes
- D** - Spray nozzles
- E** - Valve

Replacing the windscreen washer electric pump


- Disconnect the battery (🔌 F2.01).
- Remove the front wheelhouses (🔧 E3.05).
- Remove the rear element of the front left hand wheelhouse.

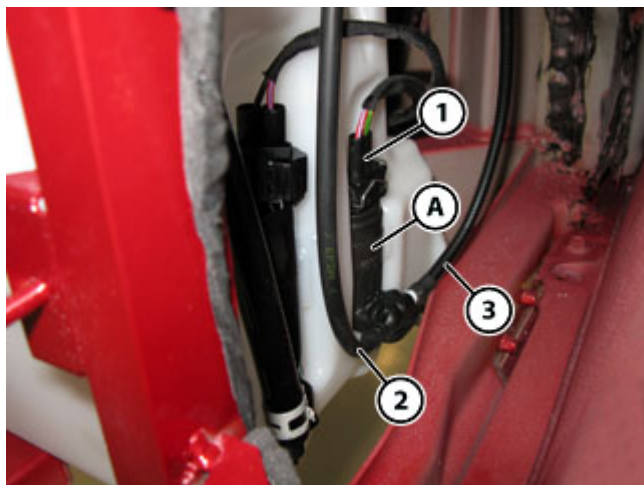

- Disconnect the connector (1).
- Disconnect the pipe (2).
- For vehicles with rear screen wiper: disconnect the pipe (3).
- Disconnect and remove the electric pump (A) and replace.
- Fit and fasten the new electric pump (A).
- For vehicles with rear screen wiper: connect the pipe (3).
- Connect the pipe (2).
- Connect the connector (1).

- Refit the front wheelhouses (🔧 E3.05).
- Refit the rear element of the front left hand wheelhouse.
- Connect the battery (🔌 F2.01).


Headlight washer system layout

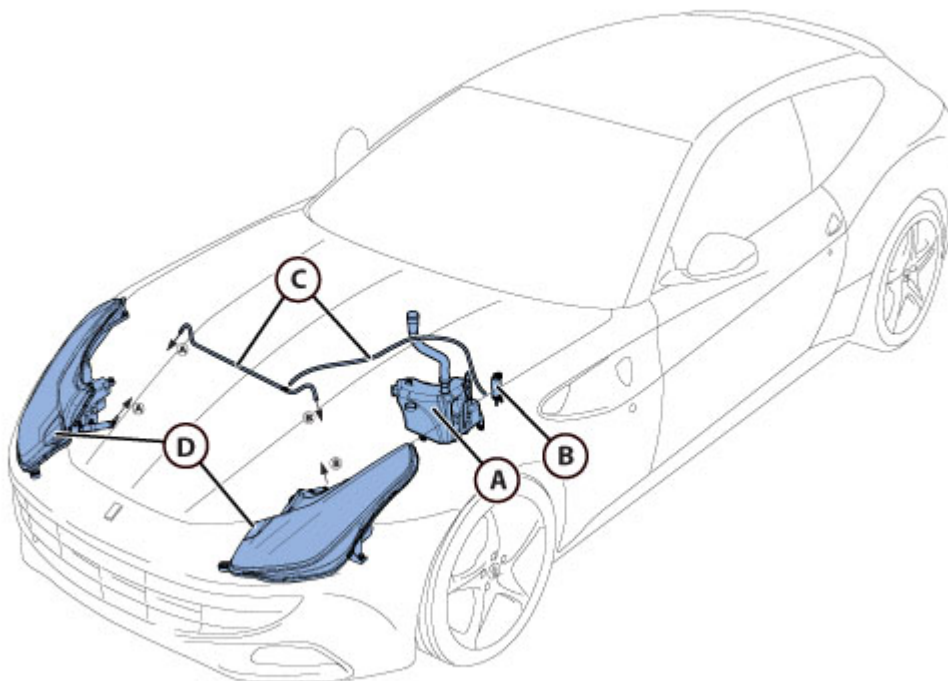

- A - Headlight washer fluid reservoir
- B - Electric pump
- C - Pipes
- D - Spray nozzles

Replacing the headlamp washer electric pump

- Disconnect the battery ( F2.01).
- Remove the front wheelhouses ( E3.05).
- i* Remove the rear element of the front left hand wheelhouse.

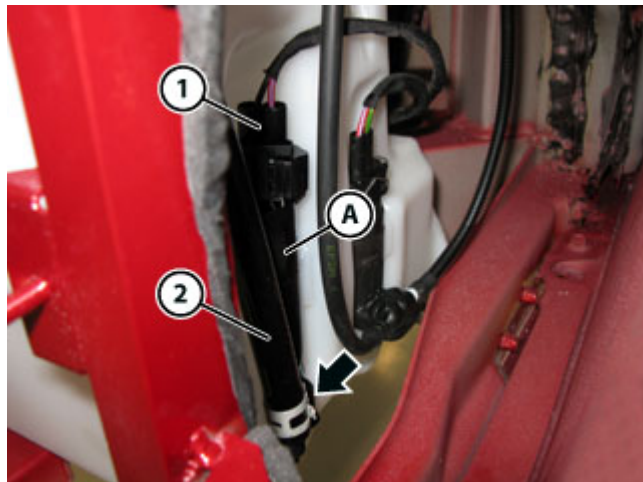


- Disconnect the connector (1).
- Disconnect the pipe (2), detaching the indicated clip.
- Disconnect and remove the electric pump (A) and replace.
- Fit and fasten the new electric pump (A).
- Connect the pipe (2), fastening the indicated clip.
- Connect the connector (1).

- Refit the front wheelhouses ( E3.05).
- i* Refit the rear element of the front left hand wheelhouse.
- Connect the battery ( F2.01).


Replacing the windscreen washer/headlight washer fluid reservoir

			
Tightening torque		Nm	Class
Fastening windscreen washer/headlight washer fluid tank	Screw	7 Nm	B


- Disconnect the battery ( F2.01).
- Replace the windscreen washer electric pump ( E3.11).
- i* Disconnect the windscreen washer electric pump connector and pipe.
- Replace the headlamp washer electric pump ( E3.11).
- i* Disconnect the headlamp washer electric pump connector and pipe.
- Remove the flat undertray sections ( E3.13).
- i* Remove the central flat undertray section.

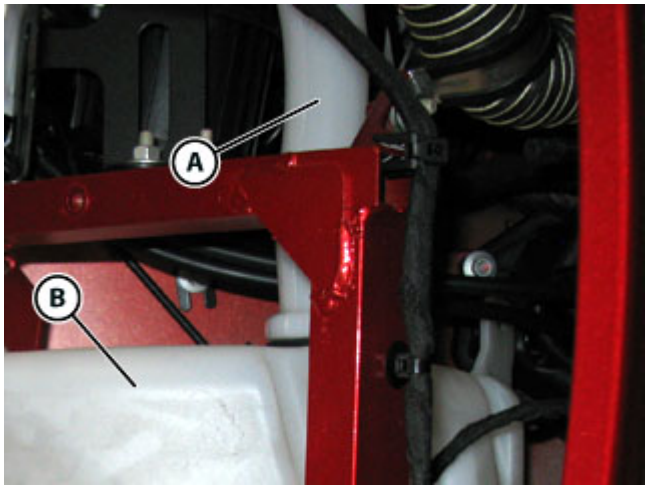

- Disconnect the filler neck **(A)** from the reservoir **(B)**.

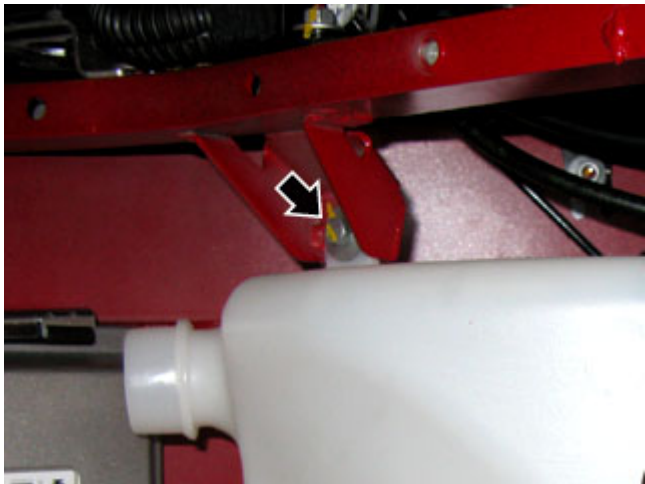


- Undo the indicated screw.

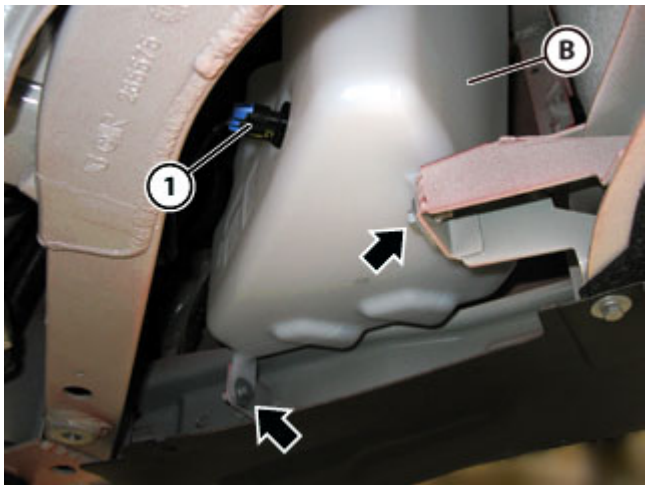

- Disconnect the connector **(1)**.
- Undo the screws indicated.
- Remove the reservoir **(B)** and replace.
- Fit the tank **(B)**.
- Tighten the screws indicated.




Tightening torque	Nm	Class
Screw	7 Nm	B

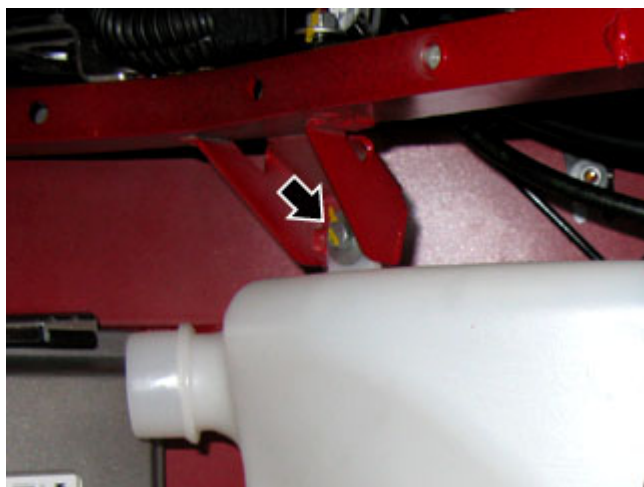

- Tighten the indicated screw.

		
Tightening torque	Nm	Class
Screw	7 Nm	B

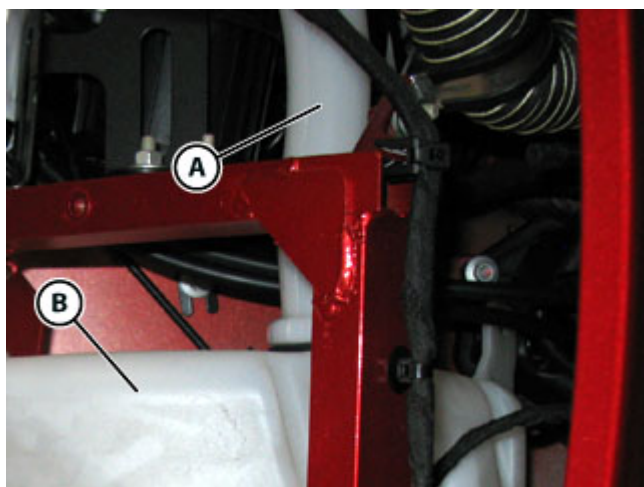

- Connect the filler neck (A) to the reservoir (B).

➤ Refit the flat undertray sections ( E3.13).

 Refit the central flat undertray section.

➤ Replace the headlamp washer electric pump ( E3.11).

 Connect the headlamp washer electric pump connector and pipe.

➤ Replace the windscreen washer electric pump ( E3.11).

 Connect the windscreen washer electric pump connector and pipe.

➤ Connect the battery ( F2.01).