



GTC4Lusso USA - Door perimeter trim panels - Latest Update: 2021-01-26

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.

Copyright by Ferrari S.p.A. - P.IVA 00159560366

E3.12 Door perimeter trim panels

Removing the kickplate



- Detach the door perimeter seal **(B)** in the area adjacent to the kickplate.
- Using a suitable tool, detach and remove the kickplate **(A)**.

Refitting the kickplate

- If necessary, remove the strips of double sided adhesive tape applied to the inner surface of the kickplate trim.
- Clean the inner surface of the kickplate trim with a degreasing product.
- Apply new strips of double sided adhesive tape to the inner surface of the kickplate trim, in the same positions as before.



- Ensure that the surface of the seat for the kickplate **(A)** is clean. If necessary, clean with a degreasing product.
- Fit the kickplate trim **(A)** correctly in the relative seat, pressing over the entire outer surface to fix evenly.
- Refit the door perimeter seal **(B)** in the area adjacent to the kickplate.

Removing the sill trim panels


- Remove the kickplate (🔧 E3.12).
- Remove the front wheelhouses (🔧 E3.05).
 - ❗ Remove the rear element of the front wheelhouse
- Remove the rear wheelhouses (🔧 E3.05).
 - ❗ Remove the front element of the rear wheelhouse.
- Remove the flat undertray sections (🔧 E3.13).
 - ❗ Undo the screws shared with the sill trim.



- Undo the screws indicated.



- Undo the indicated screw.

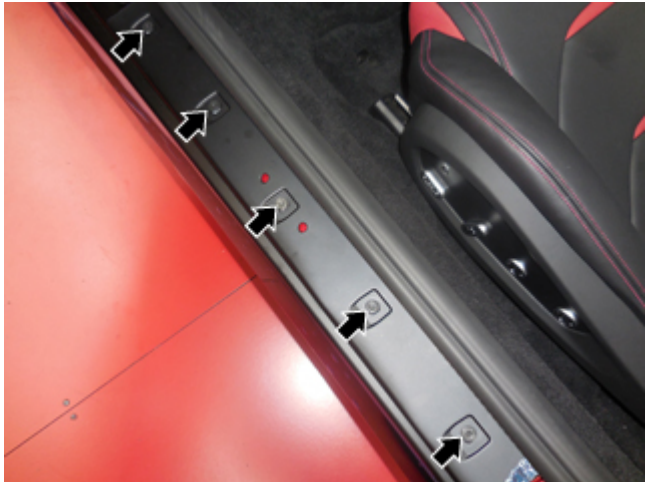

- Undo the screws indicated.

- Detach and remove the sill trim.

Refitting the sill trim panels

			
Tightening torque		Nm	Class
Fastening the sill trim panel	Screw	7 Nm	B

- Fit the sill trim, pressing manually into place.



- Fit and fasten the sill trim.
- Tighten the screws indicated.

Tightening torque	Nm	Class
Screw	7 Nm	B



- Tighten the indicated screw.

Tightening torque	Nm	Class
Screw	7 Nm	B



- Tighten the screws indicated.

Tightening torque	Nm	Class
Screw	7 Nm	B

- Refit the flat undertray sections (E3.13).
 Tighten the screws shared with the sill trim.
- Refit the front wheelhouses (E3.05).
 Refit the rear element of the front wheelhouse.
- Refit the rear wheelhouses (E3.05).
 Refit the front element of the rear wheelhouse.
- Refit the kickplate (E3.12).

Removing the door perimeter seals

Upper seal



- Prise off the front end of the upper door perimeter seal **(A)**.
- Undo the indicated screw.



- Prise off the rear end of the upper door perimeter seal **(A)**.

- Very carefully, completely detach and remove the upper door perimeter seal from the relative seat.

Lower seal



- Prise off the front end of the upper door perimeter seal **(A)**.
- Undo the indicated screw.
- Prise off the front end of the lower door seal **(B)**.



- Prise off the rear end of the upper door perimeter seal **(A)**.
- Prise off the rear end of the lower door perimeter seal **(B)**.

- Very carefully, completely detach and remove the lower door perimeter seal from the relative seat.

Refitting the door perimeter seals

Lower seal

- Fit the lower door perimeter seal.



Do NOT tap seal perpendicularly to the relative fastener tab in order not to damage it.

- Fit the rear end of the lower door perimeter seal **(B)**.
- Fit the rear end of the upper door perimeter seal **(A)**.



- Fit the front end of the lower door seal **(B)**.
- Tighten the indicated screw.
- Fit the front end of the upper door perimeter seal **(A)**.

- Manually press the entire surface of the lower door perimeter seal to seat correctly.
- Check that the lower door perimeter seal is correctly aligned.

Upper seal

- Fit the upper door perimeter seal.



Do NOT tap seal perpendicularly to the relative fastener tab in order not to damage it.

- Fit the rear end of the upper door perimeter seal (A).



- Tighten the indicated screw.
- Fit the front end of the upper door perimeter seal (A).

- Manually press the entire surface of the upper door perimeter seal to seat correctly.
- Check that the upper door perimeter seal is correctly aligned.