



GTC4Lusso USA - Flat undertray sections and vehicle lifting - Latest Update: 2021-01-26

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.

Copyright by Ferrari S.p.A. - P.IVA 00159560366

E3.13 Flat undertray sections and vehicle lifting

Lifting the vehicle



Set the vehicle in Key-OFF state before starting any maintenance work on vehicles with the Stop&Start system.

Before performing any maintenance procedures requiring the electronic system of the vehicle to be in Key-ON state on vehicles with the Stop&Start system, deactivate the Stop&Start system with the relative button, ensuring that the specific icon and the message "Stop&Start OFF" are shown on the TFT display, and that the LED on the on/off button itself is off.

Failure to do so may result in serious injury to persons working on the vehicle and in the vicinity of the vehicle in the event of the engine starting unexpectedly.



Failure to observe the operations below may pose a serious risk to the persons working or standing in the vicinity of the vehicle.

Two post vehicle lift



- Fit the front pads **(A)** in the position indicated.



- Fit the rear bushings **(B)** in the position indicated.

- Lift the vehicle.

Runway type vehicle lift



- Fit the front pads **(A)** in the position indicated.



- Fit the rear bushings **(B)** in the position indicated.

- Lift the vehicle.

Lifting the vehicle with anti-tipping safety retainers

**CAUTION**

Set the vehicle in Key-OFF state before starting any maintenance work on vehicles with the Stop&Start system.

Before performing any maintenance procedures requiring the electronic system of the vehicle to be in Key-ON state on vehicles with the Stop&Start system, deactivate the Stop&Start system with the relative button, ensuring that the specific icon and the message "Stop&Start OFF" are shown on the TFT display, and that the LED on the on/off button itself is off.

Failure to do so may result in serious injury to persons working on the vehicle and in the vicinity of the vehicle in the event of the engine starting unexpectedly.

**CAUTION**


Failure to observe the operations below may pose a serious risk to the persons working or standing in the vicinity of the vehicle.

The following procedure is for fitting the vehicle anti-tipping safety retainers (**AV 8183**) to the two post vehicle lift and fitting the anti-tipping safety retainer fastener brackets (**AV 8184**) to the runway type car lift, and subsequently lifting the vehicle.

The anti-tipping safety retainers must always be used when removing the engine or gearbox.

When removing the engine, the anti-tipping safety retainers must be attached to the front fastener slots.

When removing the gearbox, the anti-tipping safety retainers must be attached to the rear fastener slots.

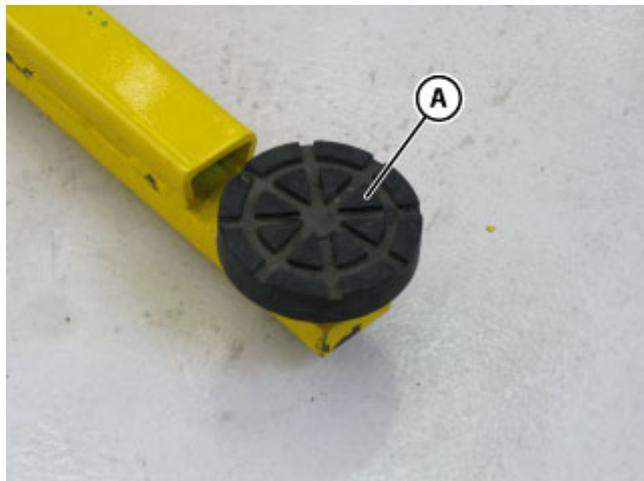Two post vehicle lift

- Remove the pads (**A**) from the relative arms on the car lift.


- Hold the anti-tipping safety retainers (**AV 8183**).




- Fit the spacers (1) for preventing the vehicle lift arms from coming into contact with the sill trim panel during manoeuvring in the holes previously used for the rubber blocks.

i The spacers (1) are supplied in different sizes.

- Fit the sleeves (2) on the shims (1).
- Fit the washers (3) on the sleeves (2).
- Fit the eccentric pins (4) on the sleeves (2), inserting in the relative holes.

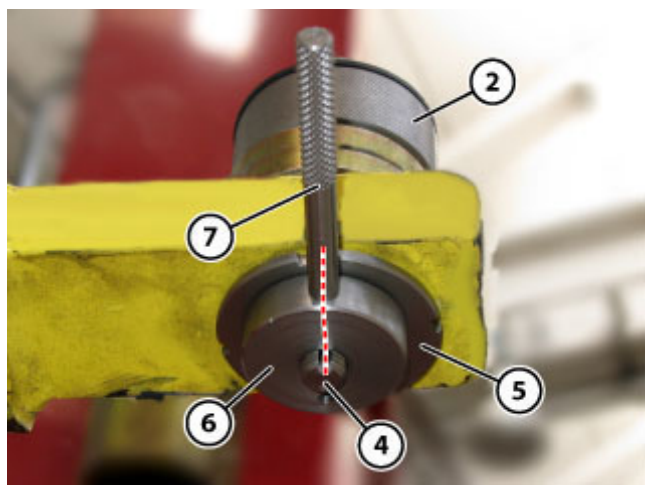


- Fit the ring nuts (5) under the vehicle lift arms over the centres of the holes previously used for the rubber blocks, tightening to the bushings (2).
- Preventing the ring nuts from turning (5), hand tighten the sleeves (2).
- Tighten the bushings (6) to the eccentric pins (4).
- Tighten the positioning levers (7) into the relative holes on the bushings (6), which must be aligned with the groove on the eccentric pins (4).

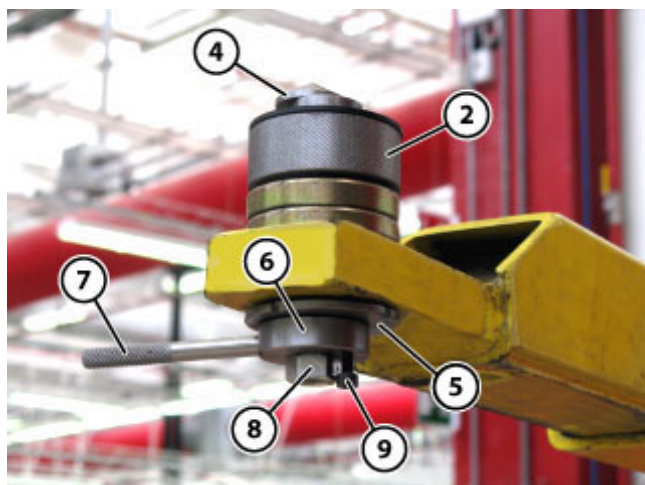


- Holding the positioning levers to prevent them from turning (7), tighten the nuts (8).
- Partially tighten the screws (9) fastening the positioning levers (7) onto the bushings (6).
- Holding the sleeves (2) to prevent them from turning, rotate and unscrew the ring nuts (5), together with the positioning levers (7), until the head of the eccentric pins (4) protrudes in the correct position for attaching to the vehicle.

i Note that the rear right hand fastener slot is parallel to the longitudinal axis of the vehicle, the front right hand fastener slot is perpendicular to the longitudinal axis of the vehicle, the rear left hand fastener slot is perpendicular to the longitudinal axis of the vehicle and the front left hand fastener slot is parallel to the longitudinal axis of the vehicle.

- Preventing the ring nuts from turning (5), hand tighten the sleeves (2).

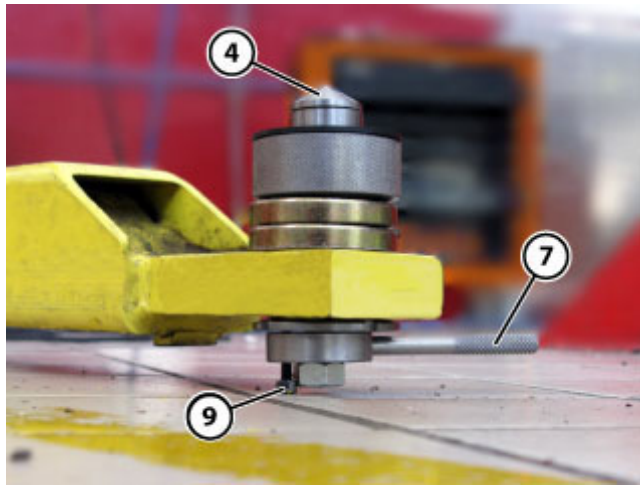


- Turn the positioning levers (7) until the eccentric pin head (4) retracts into the correct position to allow the insertion of the anti-tipping safety retainers into the relative fastener slots.
- Completely tighten the screws (9) fastening the positioning levers (7).
- Lower the vehicle lift arms, without allowing the screws (9) fastening the positioning levers (7) to come into contact with the floor, as this may damage the anti-tipping safety retainers.

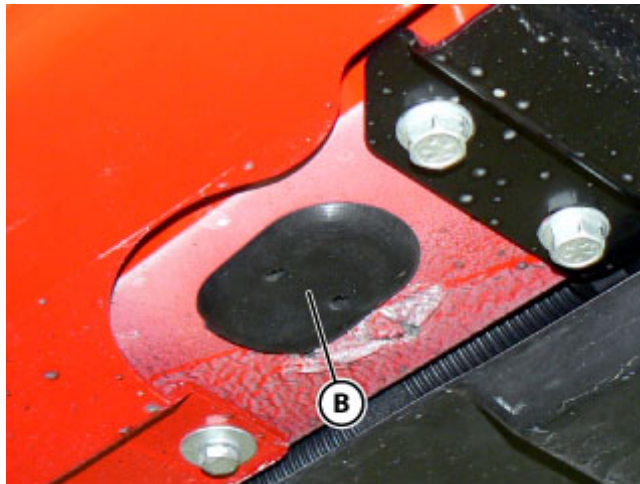


Removing the gearbox

- Detach and remove the plugs (B) from the rear fastener slots.

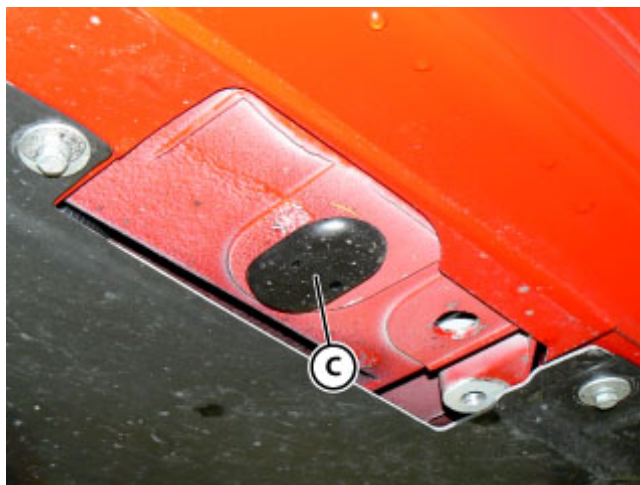

Removing the engine

- Detach and remove the plugs (C) from the front fastener slots.

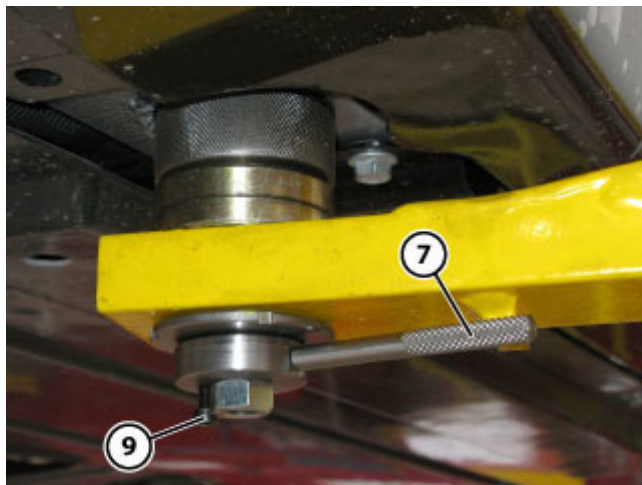


- Move the car lift arms manually to align the anti-tipping safety retainers with the relative fastener slots on the car, to ensure correct engagement when lifting.
- If the arms of the vehicle lift come into contact with the sill trim panels, add spacers as described previously.
- Working carefully and ensuring that the anti-tipping safety retainers are correctly aligned with the respective fastener slots, raise the vehicle lift arms until the anti-tipping safety retainers engage in the respective fastener slots.
- Lift the vehicle slightly off the ground and check that it is stable.
- Loosen the screws (9) fastening the positioning levers (7).
- Turn the positioning levers (7) by 180°.
- Unscrew the positioning levers (7).
- Completely tighten the screws (9) fastening the positioning levers (7).
- Lift the vehicle lift arms until the car is the desired height from the ground.

Runway type vehicle lift




- Fit the specific rubber pads (A) on the vehicle lift points not used for fastening the anti-tipping safety retainers
- Raise the vehicle lift runways slightly to facilitate installation of the anti-tipping safety retainer mounting brackets (AV 8184).

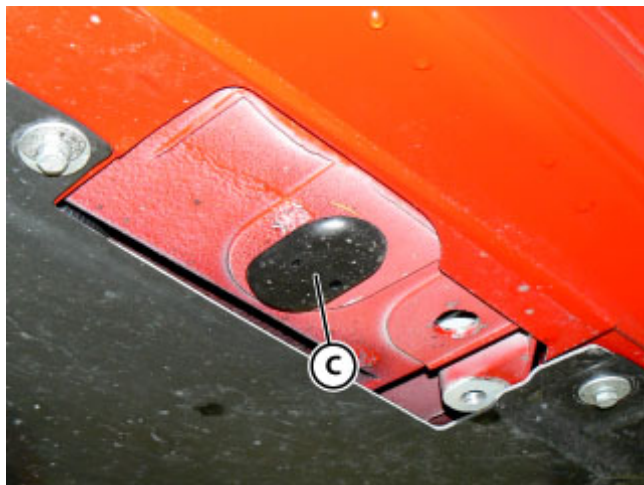


Removing the engine

- Detach and remove the plugs **(C)** from the front fastener slots.

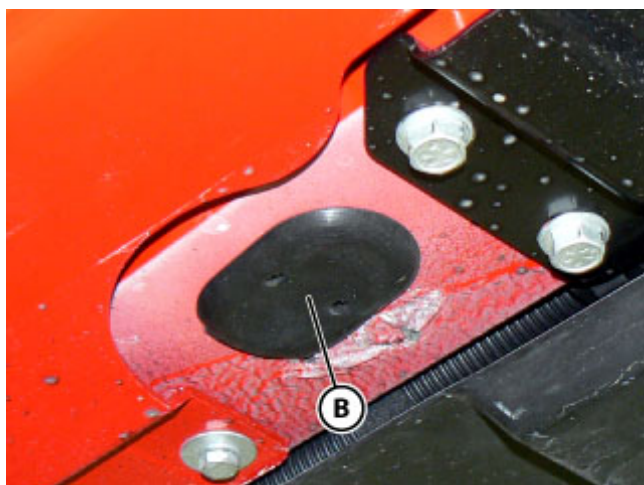


Removing the gearbox


- Detach and remove the plugs **(B)** from the rear fastener slots.

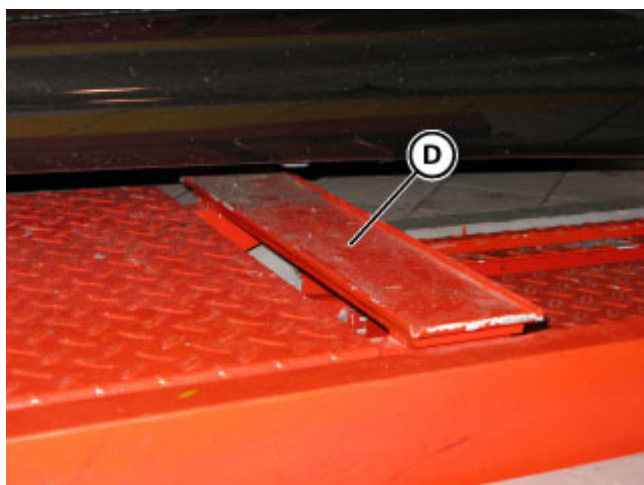


- Remove the runway safety extensions **(D)** from the relative seats.

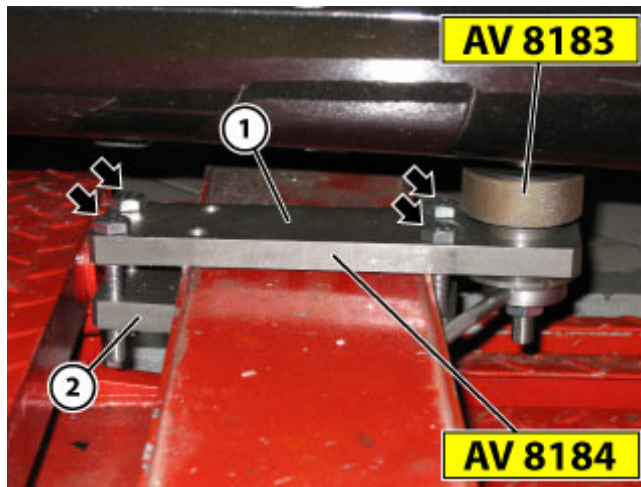

- Fit the upper plates (1) of the brackets (AV 8184) fastening the anti-tipping safety retainers (AV 8183) onto the safety extensions on the car lift runways.
- The anti-tipping safety retainers must be as close as possible to the vehicle lift runway safety extensions, as shown in the image aside.
- Fit the lower plates (2) of the brackets fastening the anti-tipping safety retainers on the safety extensions under the car lift runways.
- Tighten the four screws fastening the upper (1) and lower plates (2) to the safety extensions on the car lift runways.
- Check that the brackets are correctly positioned on the car lift runway safety extensions, so that the anti-tipping safety retainers engage correctly with the relative fastener slots on the vehicle during lifting.

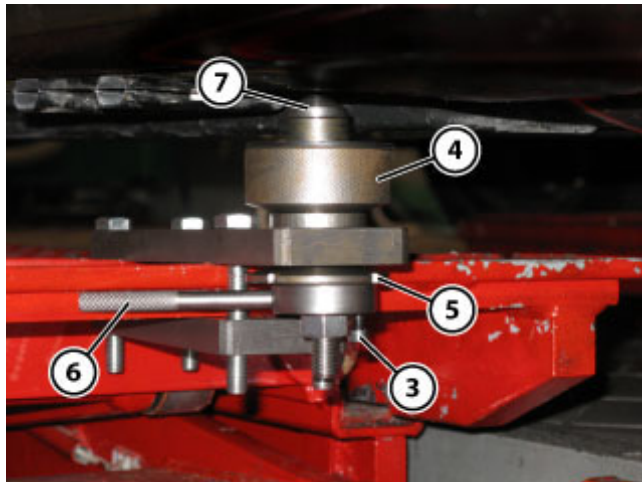

- Loosen the screws (3) fastening the positioning levers (6).
- Holding the sleeves (4) to prevent them from turning, rotate and unscrew the ring nuts (5), together with the positioning levers (6), until the head of the eccentric pins (7) protrudes in the correct position for attaching to the vehicle.
- Note that the rear right hand fastener slot is parallel to the longitudinal axis of the vehicle, the front right hand fastener slot is perpendicular to the longitudinal axis of the vehicle, the rear left hand fastener slot is perpendicular to the longitudinal axis of the vehicle and the front left hand fastener slot is parallel to the longitudinal axis of the vehicle.
- Preventing the ring nuts from turning (5), hand tighten the sleeves (4).
- Turn the positioning levers (6) until the eccentric pin head (7) retracts into the correct position to allow the insertion of the anti-tipping safety retainers into the relative fastener slots.
- Tighten the screws (3) fastening the positioning levers (6).

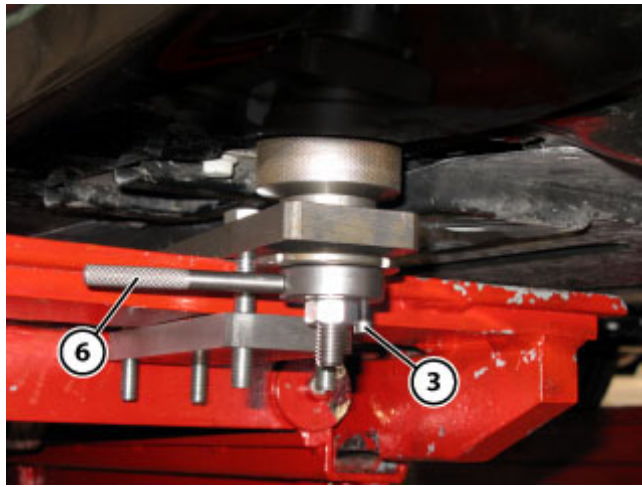


- Working carefully and ensuring that the anti-tipping safety retainers are correctly aligned with the respective fastener slots on the vehicle, raise the vehicle lift runways until the anti-tipping safety retainers engage in the respective fastener slots.
- Lift the vehicle slightly off the ground and check that it is stable.
- Loosen the screws (3) fastening the positioning levers (6).
- Turn the positioning levers (6) by 180°.
- Unscrew the positioning levers (6).
- Completely tighten the screws (3) fastening the positioning levers (6).
- Raise the vehicle lift runways until the car is the desired height from the ground.


Lowering the vehicle with anti-tipping safety retainers

The following procedure is for lowering the vehicle and subsequently removing the vehicle anti-tipping safety retainers (AV 8183) from the two post vehicle lift and removing the anti-tipping safety retainer fastener brackets (AV 8184), when using a runway type car lift.

Two post vehicle lift

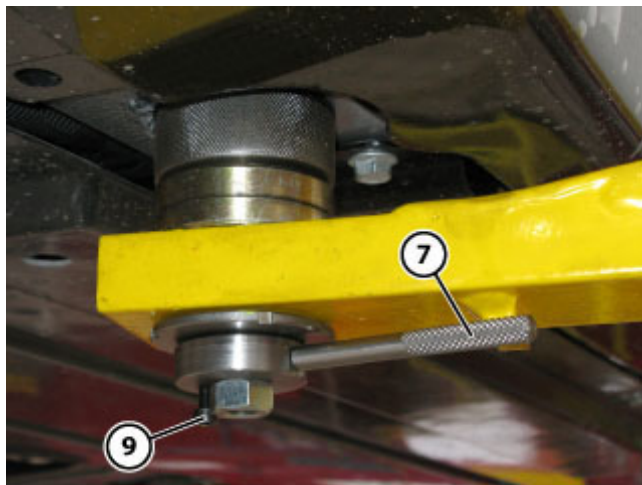


- Lower the vehicle lift arms until the car is the desired height from the ground.
- Loosen the screws (9) fastening the positioning levers (7).
- Tighten the positioning levers (7).
- Turn the positioning levers (7) by 180°.
- Tighten the screws (9) fastening the positioning levers (7).
- Carefully lower the arms of the vehicle lift to gently set the vehicle on the ground, ensuring that the anti-tipping safety retainers withdraw completely and without impediment from the respective fastener slots on the vehicle.
- Without allowing the screws (9) fastening the positioning levers (7) to come into contact with the floor, as this may damage the anti-tipping safety retainers, lower the vehicle lift arms completely.

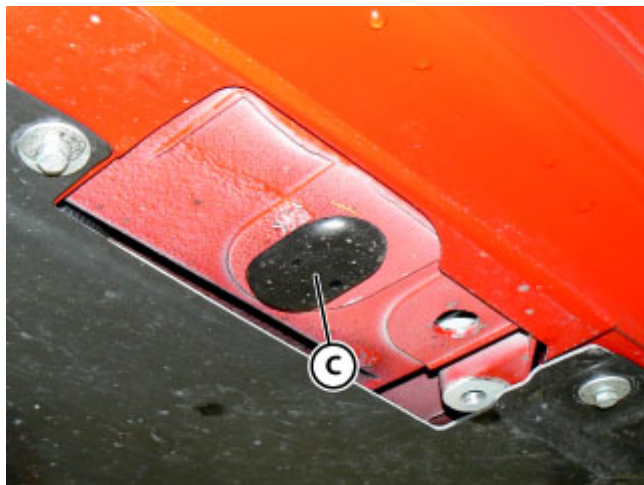


Removing the engine

- Fit and apply the plugs **(C)** in the front fastener slots.

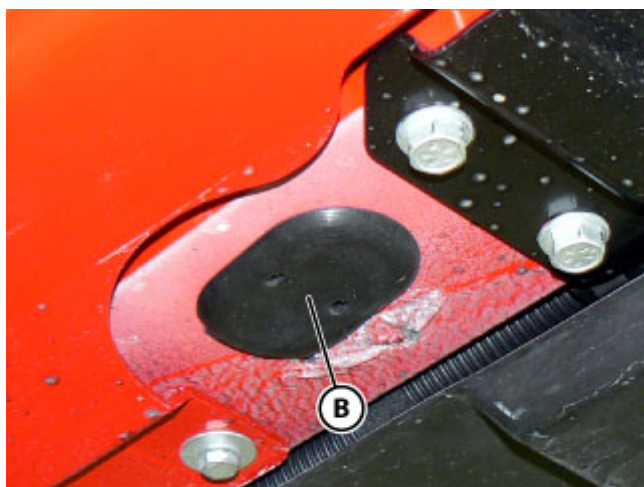


Removing the gearbox

- Fit and apply the plugs **(B)** in the rear fastener slots.

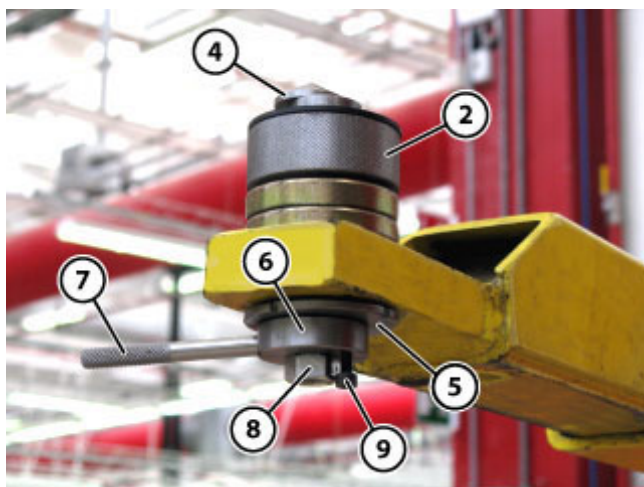


- Undo and remove the screws **(9)** fastening the positioning levers **(7)** onto the bushings **(6)**.
- Holding the positioning levers to prevent them from turning **(7)**, undo the nuts **(8)**.
- Unscrew the positioning levers **(7)** from the bushings **(6)**.
- Undo the bushings **(6)** from the eccentric pins **(4)**.
- Remove the eccentric pins **(4)** from the relative seats.
- Preventing the ring nuts from turning **(5)**, manually unscrew the sleeves **(2)** and remove both components, together with relative shims, from the car lift arms.

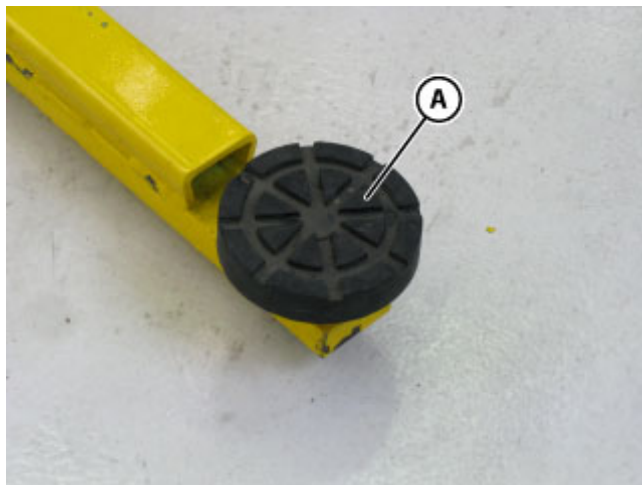


- Refit the pads **(A)** on the relative arms on the car lift.


Runway type vehicle lift

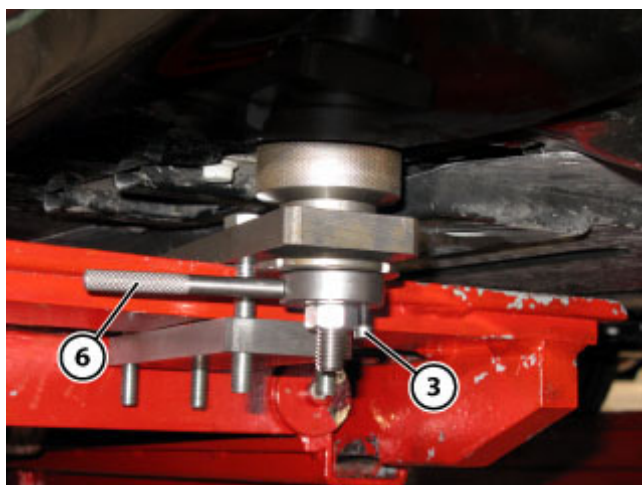


- Lower the vehicle lift runways until the car is the desired height from the ground.
- Loosen the screws **(3)** fastening the positioning levers **(6)**.
- Tighten the positioning levers **(6)**.
- Turn the positioning levers **(6)** by 180°.
- Tighten the screws **(3)** fastening the positioning levers **(6)**.
- Carefully lower the runways of the vehicle lift to gently set the vehicle on the ground, ensuring that the anti-tipping safety retainers withdraw completely and without impediment from the respective fastener slots on the vehicle.

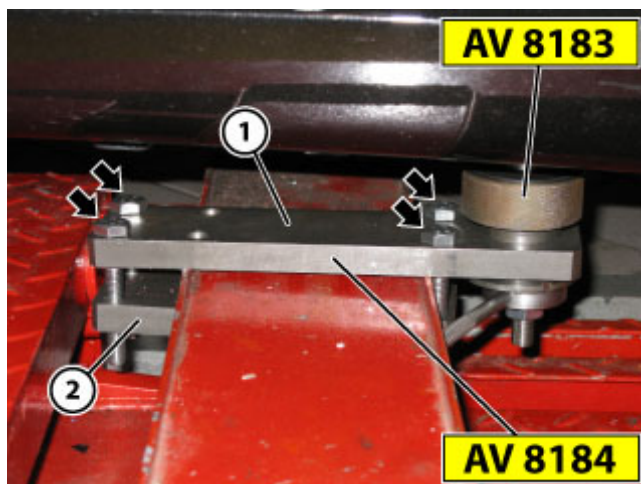

- Undo the indicated screws fastening the upper plates **(1)** and lower plates **(2)** of the brackets **(AV 8184)** fastening anti-tipping safety retainers **(AV 8183)**.
- Remove the lower plates **(2)** fastening the anti-tipping safety retainers from the safety extensions on the car lift runways.
- Remove the upper plates **(1)** fastening the anti-tipping safety retainers from the safety extensions on the car lift runways.

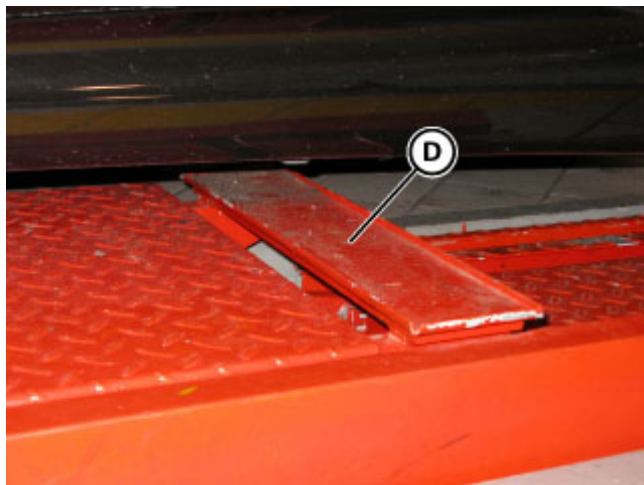


- Fit the runway safety extensions **(B)** in the relative seats.

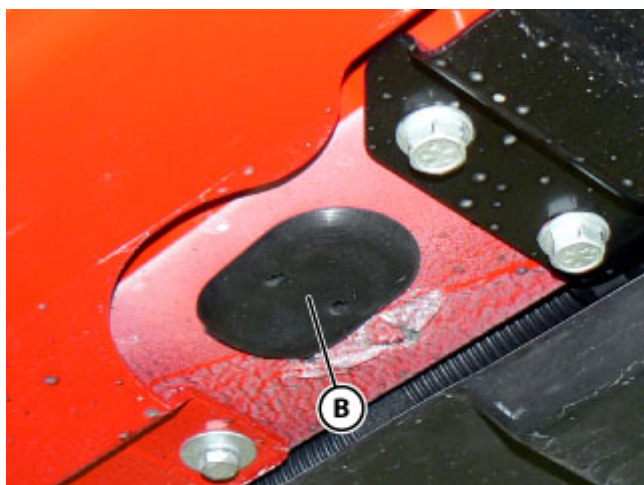


Removing the gearbox

- Fit and apply the plugs **(B)** in the rear fastener slots.

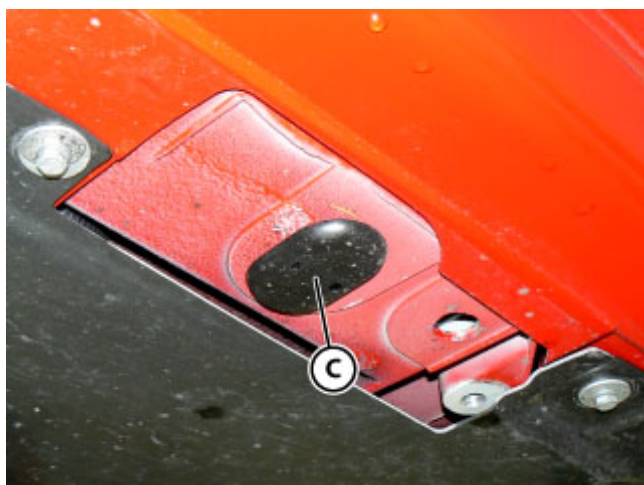

Removing the engine

- Fit and apply the plugs **(C)** in the front fastener slots.

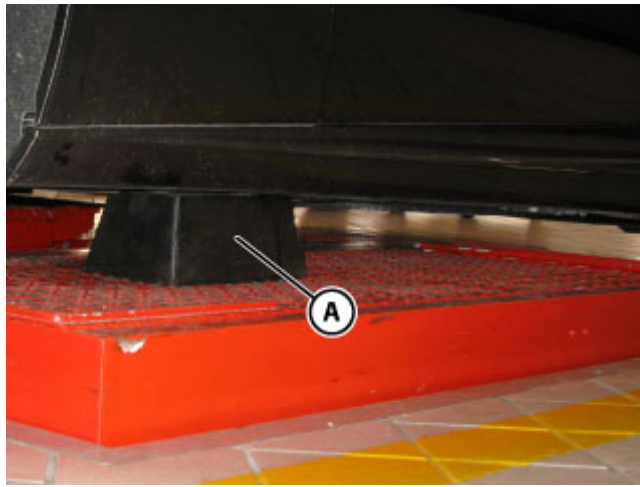


- Lower the vehicle lift runways completely.
- Remove the rubber blocks **(A)**.

Removing the flat undertray sections


The flat undertray sections may be removed in the following sequence or individually.

Front element

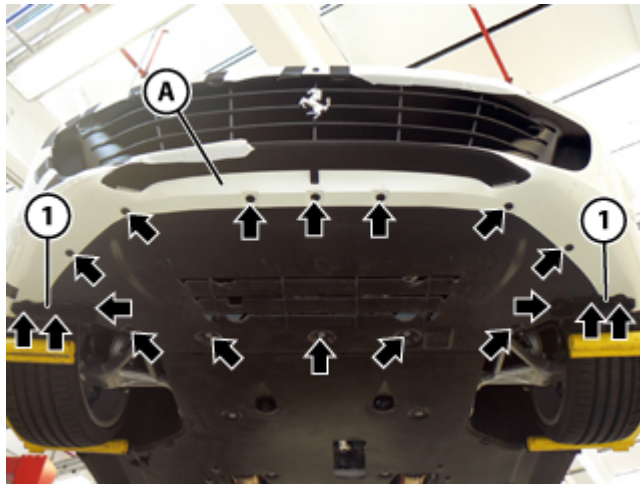


- Note the positions of the indicated fasteners.
- Remove the indicated fasteners.
- Detach and remove the front section **(A)**, retrieving the deflectors **(1)**.

Central section

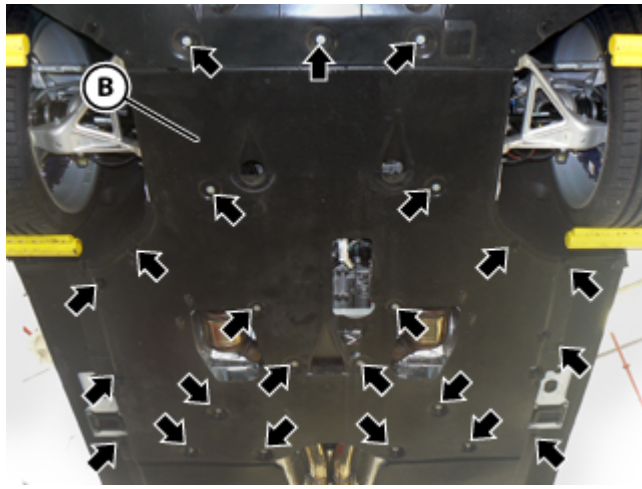


- Note the positions of the indicated fasteners.
- Remove the indicated fasteners.
- Detach the central section **(B)**.
- Disconnect the water drain pipes for the underwindscreen cosmetic shields and passenger compartment air intake, loosening the respective screw collars.
- Remove the central section **(B)**.

Lateral sections

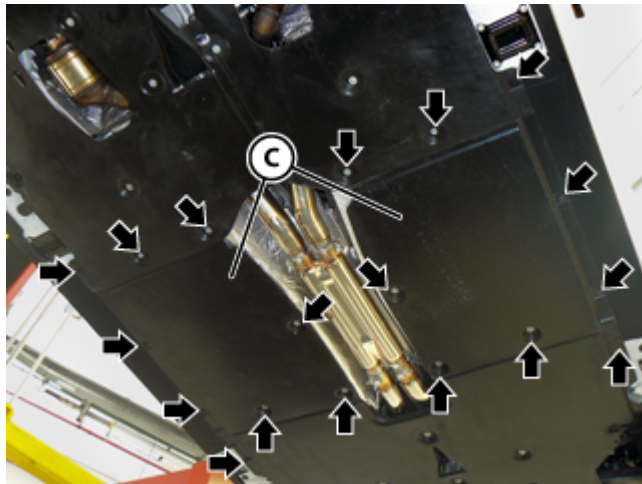

- Note the positions of the indicated fasteners.
- Remove the indicated fasteners.
- Detach and remove the lateral elements **(C)**.

Rear element

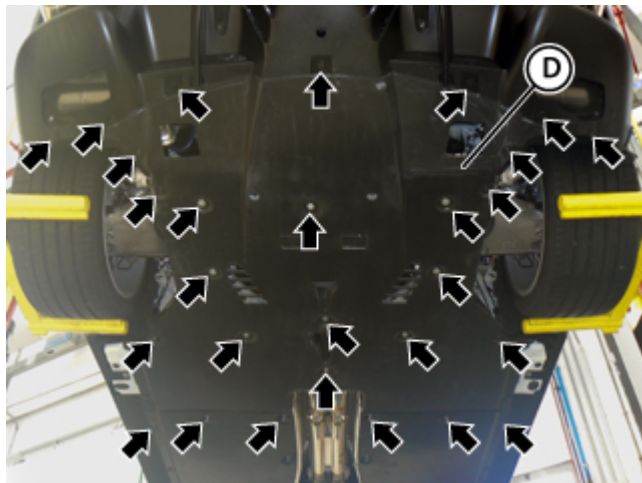


- Note the positions of the indicated fasteners.
- Remove the indicated fasteners.
- Detach and remove the rear section **(D)**.

Refitting the flat undertray sections

			
Tightening torque		Nm	Class
Fastening flat undertray elements	Screw	7 Nm	B
	Screw / Nut	8 Nm	B
Fastening the drain pipes	Screw collar	4 Nm	B

The flat undertray sections may be refitted in the following sequence or individually.


Rear element

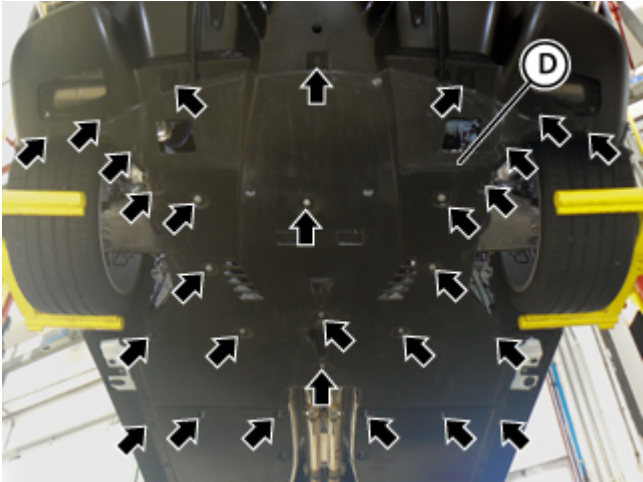

- Fit and fasten the rear section (D).
- Tighten the indicated fasteners.

		
Tightening torque	Nm	Class
Screw	7 Nm	B


Lateral sections

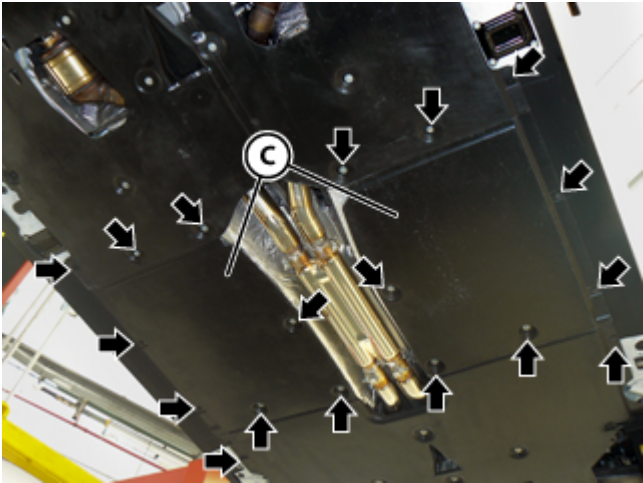

- Fit and fasten the lateral section (C).
- Tighten the indicated fasteners.

		
Tightening torque	Nm	Class
Screw	7 Nm	B

Central section

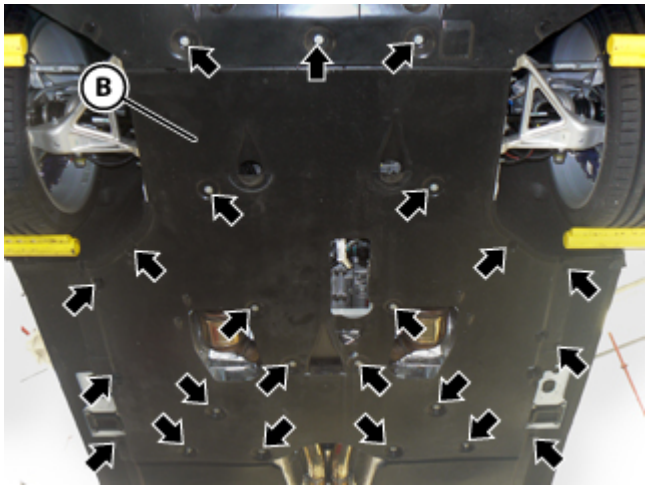


- Fit the central section **(B)**.
- Connect the water drain pipes for the underwindscreen cosmetic shields and passenger compartment air intake, tightening the respective screw collars.

		
Tightening torque	Nm	Class
Screw collar	4 Nm	B

- Insert the expansion tank breather pipe and the power steering fluid reservoir breather pipe into the respective holes.
- Tighten the indicated fasteners.

		
Tightening torque	Nm	Class
Screw / Nut	8 Nm	B

Front element

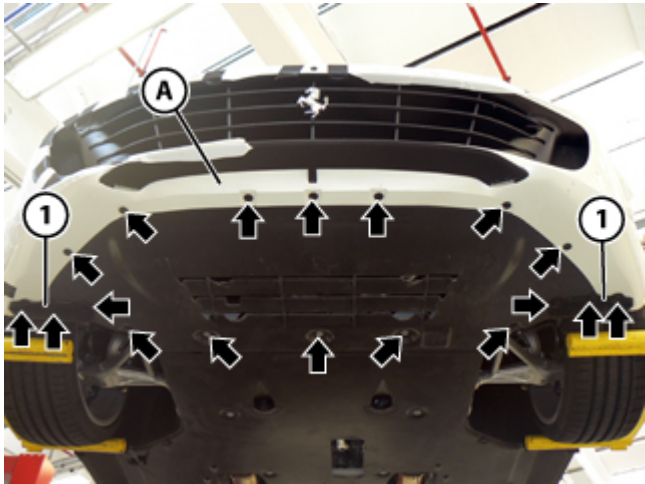

- Fit and fasten the front section **(A)**, fitting the deflector **(1)**.
- Tighten the indicated fasteners.

		
Tightening torque	Nm	Class
Screw	7 Nm	B