



GTC4Lusso USA - Engine compartment cosmetic shields - Latest Update: 2021-01-26

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.

Copyright by Ferrari S.p.A. - P.IVA 00159560366

E3.14 Engine compartment cosmetic shields

Removing engine compartment cosmetic shields




CAUTION

Set the vehicle in Key-OFF state before starting any maintenance work on vehicles with the Stop&Start system.

Before performing any maintenance procedures requiring the electronic system of the vehicle to be in Key-ON state on vehicles with the Stop&Start system, deactivate the Stop&Start system with the relative button, ensuring that the specific icon and the message "Stop&Start OFF" are shown on the TFT display, and that the LED on the on/off button itself is off.

Failure to do so may result in serious injury to persons working on the vehicle and in the vicinity of the vehicle in the event of the engine starting unexpectedly.

Cosmetic inspection shields

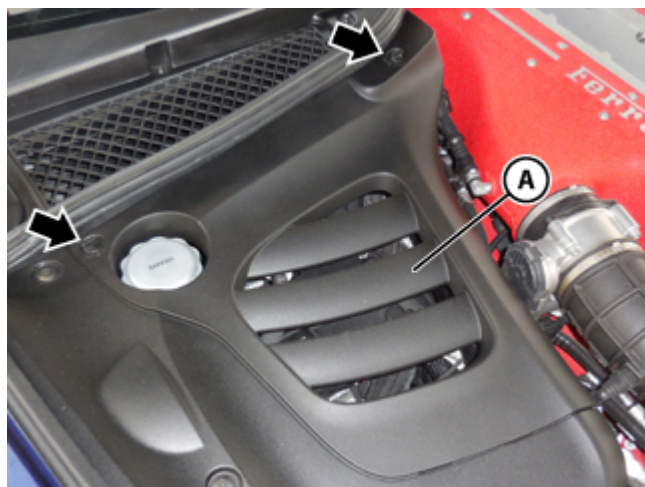

Right hand cosmetic inspection shield


- Undo the screws indicated.
- Detach and remove the cosmetic inspection shield (A).



Left hand cosmetic inspection shield

- Undo the screws indicated.
- Detach and remove the cosmetic inspection shield (A).

Lateral cosmetic shields

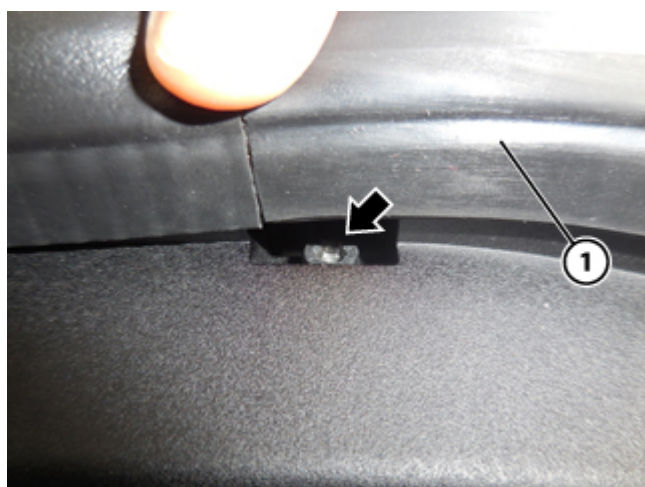


Right hand lateral cosmetic shield

- Move the seal (1) aside.
- Undo the indicated screw.



- Undo the screws indicated.
- Detach and remove the lateral cosmetic shield (B).

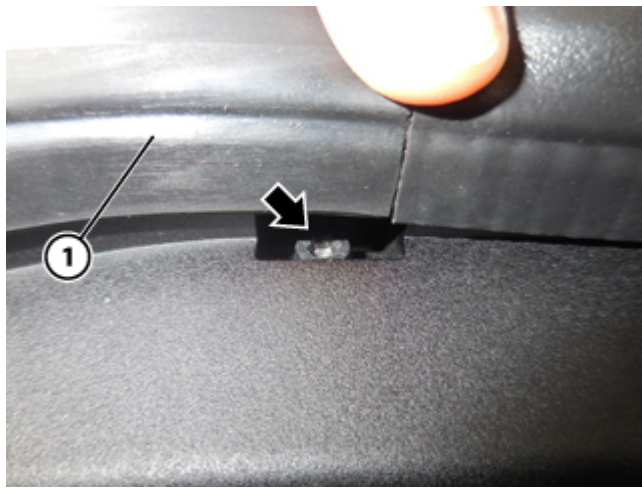


Left hand lateral cosmetic shield

- Move the seal (1) aside.
- Undo the indicated screw.



- Undo the screws indicated.
- Detach and remove the lateral cosmetic shield (B).


Centre cosmetic shield

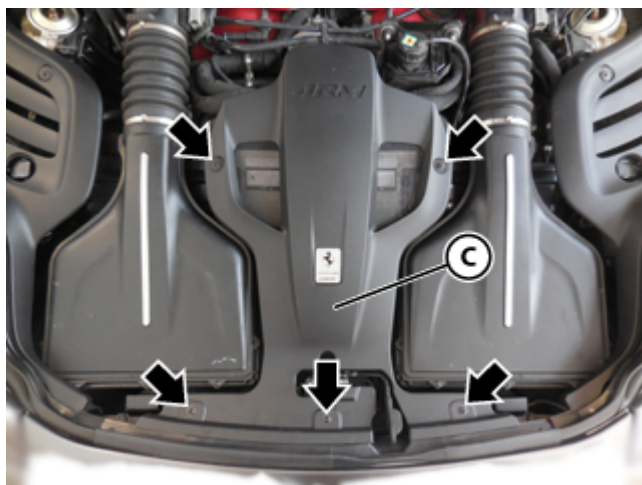

- Detach the lateral seal.
- Undo the screws indicated.
- Detach and remove the central cosmetic shield (C).


Underwindscreen cosmetic shields

- Remove lateral cosmetic shields

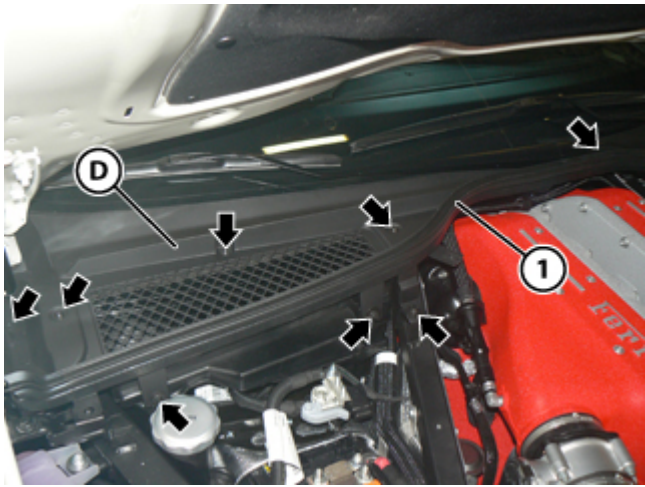

Right hand underwindscreen cosmetic shield

- Detach the section of seal (1) adjacent to the cosmetic shield (D).
- Undo and remove the indicated screws, noting their respective positions.
- Detach the cosmetic shield (D).
- Disconnect the water drain pipe, loosening the relative screw collar.

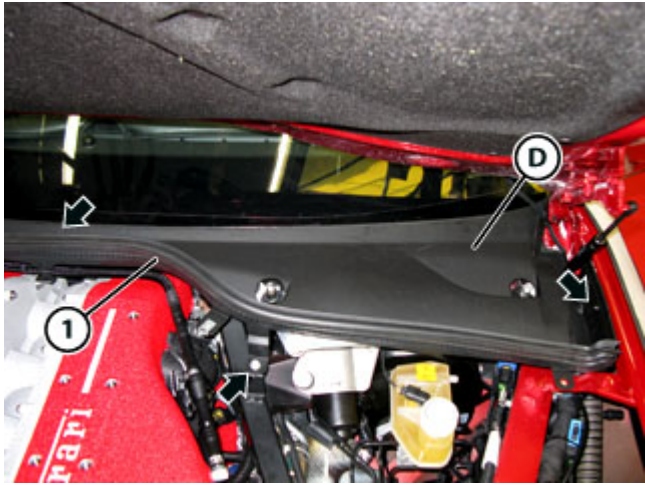


Left hand underwindscreen cosmetic shield

- Remove the windscreen wiper arms (E3.10).
- Detach the section of seal (1) adjacent to the cosmetic shield (D).
- Undo and remove the indicated screws, noting their respective positions.
- Detach the cosmetic shield (D).
- Disconnect the water drain pipe, loosening the relative screw collar.

Refitting engine compartment cosmetic shields

			
Tightening torque		Nm	Class
Fastening underwindscreen cosmetic shields	Screw	4 Nm	B
Fastening engine compartment cosmetic shields	Screw	4 Nm	B
	Screw	4.5 Nm	B

Underwindscreen cosmetic shields

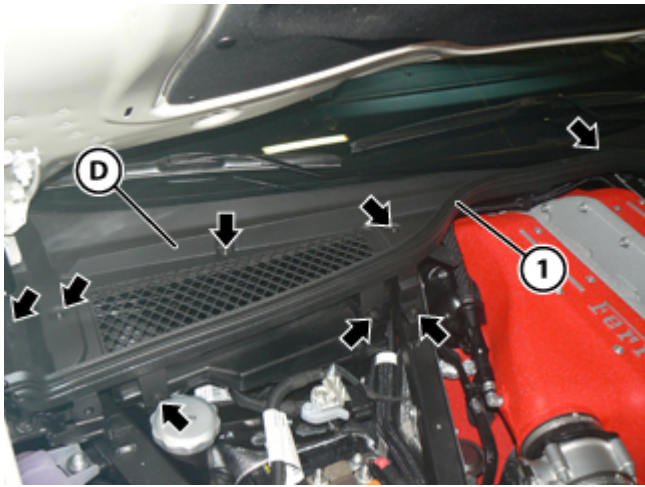


Right hand underwindscreen cosmetic shield

- Lubricate the contact surfaces between the windscreen and the cosmetic shield (D) with soapy water.
- Connect the water drain pipe to the cosmetic shield (D), tightening the relative screw collar.
- Fit the cosmetic shield (D), pressing manually along the windscreen to snap into place.
- Tighten the indicated screws in the respective positions.

		
Tightening torque	Nm	Class
Screw	4 Nm	B

- Fit the section of seal (1) adjacent to the cosmetic shield (D).

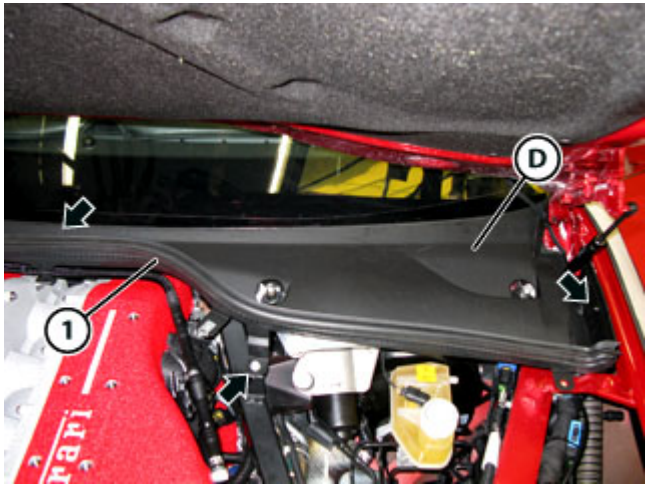

Left hand underwindscreen cosmetic shield


- Lubricate the contact surfaces between the windscreen and the cosmetic shield (D) with soapy water.
- Connect the water drain pipe to the cosmetic shield (D), tightening the relative screw collar.
- Fit the cosmetic shield (D), pressing manually along the windscreen to snap into place.
- Tighten the indicated screws in the respective positions.

		
Tightening torque	Nm	Class
Screw	4 Nm	B

- Fit the section of seal (1) adjacent to the cosmetic shield (D).
- Refit the windscreen wiper arms ( E3.10).

- Refit the lateral cosmetic shields.

Centre cosmetic shield

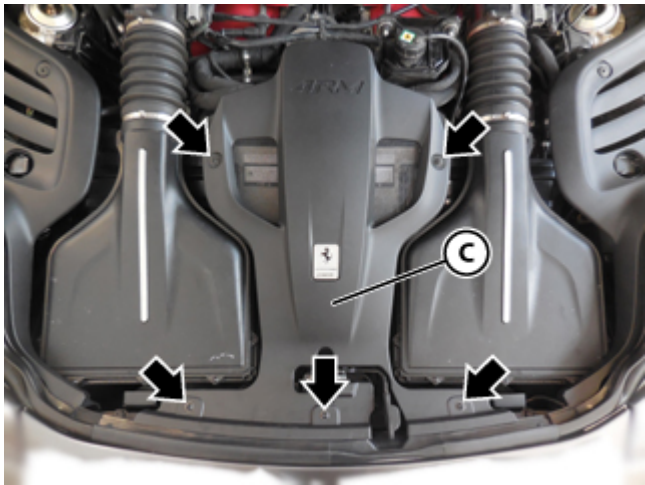

- Fit and fasten the central cosmetic shield **(C)**.
- Check that the front seal is flush with the adjacent components.
- Tighten the indicated screws.

		
Tightening torque	Nm	Class
Screw	4 Nm	B


Lateral cosmetic shields



Right hand lateral cosmetic shield

- Fit and fasten the lateral cosmetic shield **(B)**.
- Tighten the indicated screws.

		
Tightening torque	Nm	Class
Screw	4.5 Nm	B

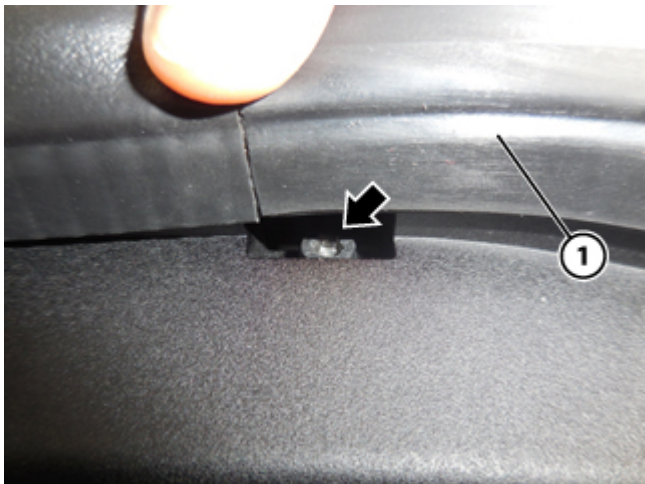


- Tighten the indicated screw.
- Fit and fasten the seal **(1)**, ensuring that it is aligned correctly.



Left hand lateral cosmetic shield

- Fit and fasten the lateral cosmetic shield **(B)**.
- Tighten the indicated screws.

		
Tightening torque	Nm	Class
Screw	4.5 Nm	B

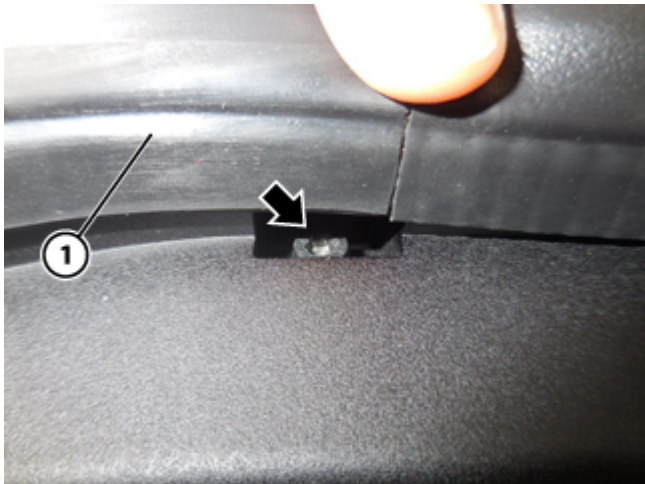


- Tighten the indicated screw.
- Fit and fasten the seal **(1)**, ensuring that it is aligned correctly.

Cosmetic inspection shields



Right hand cosmetic inspection shield

- Fit and fasten the cosmetic inspection shield **(A)**.
- Tighten the screws indicated.

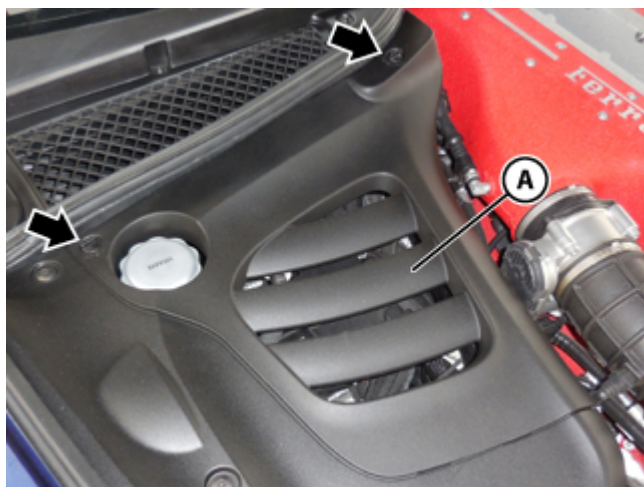

Left hand cosmetic inspection shield

- Fit and fasten the cosmetic inspection shield (A).
- Tighten the screws indicated.