



GTC4Lusso USA - Fuel filler flap - Latest Update: 2021-01-26

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.

Copyright by Ferrari S.p.A. - P.IVA 00159560366

E3.15 Fuel filler flap

Replacing the fuel filler flap



			
Tightening torque		Nm	Class
Fastening fuel filler flap	Screw	4 Nm	C
Fastening the fuel filler flap striker and internal cover	Screw	4 Nm	C
Fastening fuel filler flap hinge	Screw	4 Nm	C

➤ Open the fuel filler flap ( E5.09).



- Undo the indicated nut
- Remove the internal cover (A).


- Remove the striker (1), undoing the indicated nut and retrieving the shim (2), if fitted.

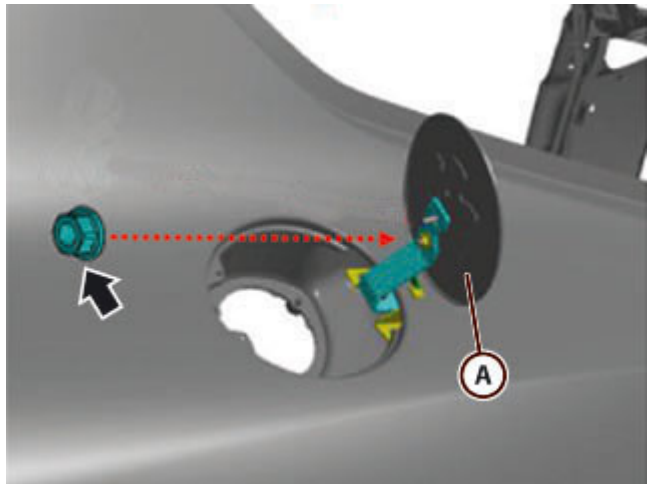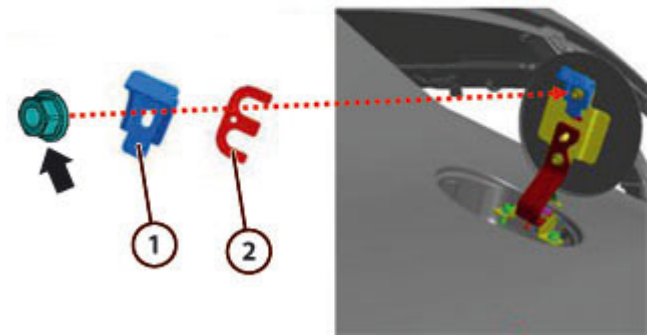

- Undo the indicated nut.
- Remove the flap (B) and replace.
- Fit the new flap (B).
- Tighten the indicated nut.

		
Tightening torque	Nm	Class
Screw	4 Nm	C

- Fit the striker (1), and the shim (2), if necessary, and tighten the indicated nut.

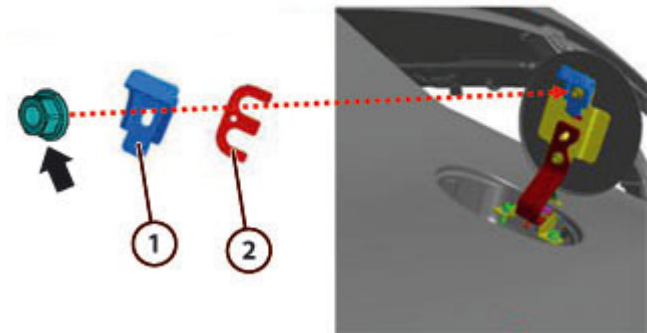


		
Tightening torque	Nm	Class
Screw	4 Nm	C



- Fit the internal cover (A).
- Tighten the indicated nut.

		
Tightening torque	Nm	Class
Screw	4 Nm	C

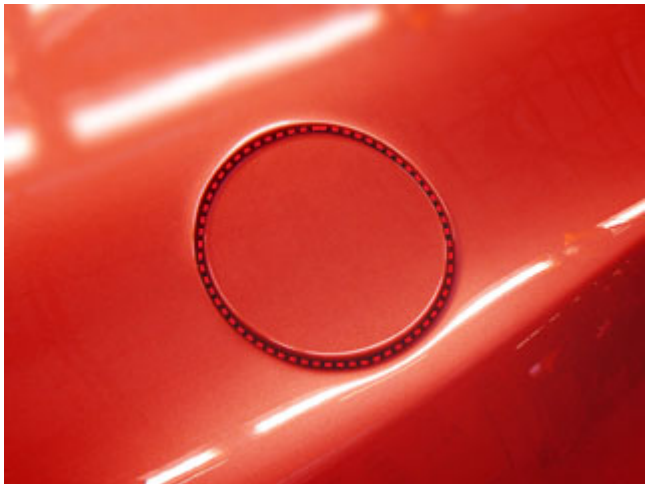

- Close the fuel filler flap (E5.09).
- Check that the fuel filler flap is correctly aligned with the fender.



- In case of misalignment, loosen the indicated screws and correct the position of the fuel filler flap.
- Tighten the screws indicated.

		
Tightening torque	Nm	Class
Screw	4 Nm	C